



## Command Centres

### Pre-Configured

NX10-FACC-1, 2 and 4, NX10-FACC-1P, 2P and 4P  
NX10-FALCC-1, 2 and 4, NX10-FALCC-1P, 2P and 4P

### Modular

NX10-CC01-(X) and NX10-CC02-(X)



## Installation & Operation Manual

# Table of Contents

# Page

<b>1</b>	<b>INTRODUCTION</b>	<b>9</b>
1.1	PRODUCT DESCRIPTION	9
1.2	SYSTEM COMPONENTS	10
1.2.1	Internal Peripherals	10
1.2.2	SLC Devices	11
1.2.3	NAC Devices	11
1.2.4	Network Devices	12
1.3	PROGRAMMING MANUALS	12
<b>2</b>	<b>AGENCY LISTINGS / APPROVALS / REQUIREMENTS</b>	<b>13</b>
2.1	UL864 10TH EDITION	13
2.2	FCC	13
2.2.1	Emissions	13
<b>3</b>	<b>ENCLOSURES</b>	<b>15</b>
3.1	BACKBOX INSTALLATION	17
3.2	INNER DOOR ASSEMBLY AND INSTALLATION	18
3.2.1	Pre-Configured 3x3 (NX10-FACC) and 3x5 (NX10-FALCC) Command Centre Inner Doors	19
3.2.2	Modular 3x3 (NX10-CC01-X) and 3x5 (NX10-CC02-X) Command Centre Inner Doors	20
3.2.3	Inner Door Aperture Module and Blank Plate Installations	21
3.2.4	Modular Command Centre Inner Door Installation	22
3.3	MODULAR COMMAND CENTRE OUTER DOOR INSTALLATION	23
3.3.1	Package Contents	23
3.3.2	Install	23
<b>4</b>	<b>MAIN SYSTEM MODULES</b>	<b>25</b>
4.1	NX10-ACS-ACB AC BOARD	25
4.1.1	Installation	26
4.1.2	Wiring	27
4.2	NX10-ACS-1L ONE-LOOP OR NX10-ACS-2L TWO-LOOP BASE CARD	28
4.2.1	Installation	28
4.2.2	Wiring	30
4.2.3	LEDs	31
4.2.4	Battery Charger	32
4.2.5	Signalling Line Circuit (SLC)	36
4.2.6	Notification Appliance Circuit (NAC)	38
4.2.7	Relay Contacts	40
4.2.8	Peripheral Bus (PBUS) Communication Circuit	40
4.2.9	USB Port	42
4.2.10	RS-232 Port	42
4.2.11	Ancillary Contact Monitoring Input	43
4.2.12	NX10-ACS-2L Ancillary NX10-EM-PSU DC Input	44
4.2.13	AUX Power Outputs	44
4.2.14	Open Collector Output	45
4.3	NX10-EM-LPD COMBINED SLC/NAC EXPANSION MODULE	45
4.3.1	Installation	46
4.3.2	Wiring	46
4.4	NX10-EM-PSU EXPANSION POWER SUPPLY	49
4.4.1	Installation	50
4.4.2	Wiring	50
4.5	NX10-EM-PSU6 POWER SUPPLY CHARGER MODULE	53
4.5.1	Installation	54
4.5.2	Wiring	55
4.5.3	Optional Common System Ground Fault Monitoring	59
4.6	NX10-AMP-80 AUDIO AMPLIFIER MODULE	59
4.6.1	Installation	60
4.6.2	Activations	62
4.6.3	Configurations and Wiring	64

4.6.4	Peripheral Bus NX10-AMP-80 Programming .....	73
4.7	NX10-ACS-DSP ALPHANUMERIC GRAPHICAL DISPLAY .....	80
4.7.1	Installation .....	81
4.7.2	Wiring .....	82
4.7.3	LEDs .....	85
4.7.4	Programmable LEDs and Buttons .....	86
4.7.5	Control Buttons .....	86
4.7.6	Piezo Sounder .....	87
4.7.7	Graphical LCD Event Status Indications .....	87
4.8	NX10-MIC MICROPHONE ASSEMBLY .....	93
4.8.1	Installation .....	93
4.8.2	Wiring .....	94
<b>5</b>	<b>NX10-TEL2 FIREFIGHTER TELEPHONE ASSEMBLIES AND RISER .....</b>	<b>95</b>
5.1	NX10-TEL2-MCCS(/P) FIREFIGHTER TELEPHONE ASSEMBLIES .....	95
5.1.1	Installation .....	96
5.1.2	Wiring .....	96
5.1.3	NX10-TEL2-RISE Module Command Centre Phone Configuration .....	97
5.2	NX10-TEL2-RISE FIREFIGHTER TELEPHONE RISER MODULE .....	98
5.2.1	Installation .....	98
5.2.2	Wiring .....	103
5.3	OPTIONAL NX10-TEL2-PPB PLUG-IN PAGE BOARD .....	112
5.3.1	Installation .....	112
5.3.2	Wiring .....	113
<b>6</b>	<b>OPTIONAL SYSTEM MODULES .....</b>	<b>115</b>
6.1	NX10-FANET4 AND NX10-FANET7 NETWORK MODULES .....	115
6.1.1	Installation .....	115
6.1.2	Wiring .....	116
6.2	NX10-ZS AMPLIFIER ZONE SPLITTER MODULE .....	120
6.2.1	Installation .....	120
6.2.2	Wiring .....	121
6.3	NX10-EM-PRN PRINTER MODULE .....	126
6.3.1	Installation .....	126
6.3.2	Wiring .....	130
<b>7</b>	<b>OPTIONAL PERIPHERAL BUS (PBUS) MODULES .....</b>	<b>131</b>
7.1	SWITCH LED MODULES .....	131
7.1.1	Installation .....	132
7.1.2	Wiring .....	133
7.1.3	Addressing .....	135
7.1.4	Switch LED Module Programming for Audio Control .....	136
<b>8</b>	<b>RECOMMENDED CABLE ROUTING .....</b>	<b>141</b>
<b>9</b>	<b>SYSTEM FEATURES .....</b>	<b>143</b>
9.1	DRIFT COMPENSATION .....	143
9.1.1	Drift Compensation Viewing .....	144
9.1.2	Rapid Compensation .....	144
9.2	MULTIPLE DETECTION OPERATION FOR EVACUATION .....	145
9.3	POSITIVE ALARM SEQUENCE .....	145
9.4	ALARM VERIFICATION .....	146
9.5	CROSS ZONING .....	147
9.6	WALK TEST .....	147
9.7	ZONE, GROUP AND POINT DISABLEMENTS .....	147
9.8	DAY/NIGHT SENSITIVITY .....	147
9.9	DETECTION SENSITIVITY ADJUSTMENT .....	147
9.10	NX10-ACS-DSP KEYPAD MENU FUNCTIONS .....	150
9.10.1	View .....	151
9.10.2	Disable .....	155
9.10.3	Enable .....	160
9.10.4	Test .....	160

9.10.5	P.A.S. (Positive Alarm Sequence).....	167
9.10.6	Tools .....	167
<b>10</b>	<b>MAINTENANCE AND TROUBLESHOOTING.....</b>	<b>173</b>
10.1	BATTERIES.....	173
10.1.1	Battery Recommendations .....	173
10.2	PERFORMING A FIRE DRILL.....	174
10.3	BUILT-IN ELECTRONIC MULTI-METER .....	175
10.3.1	NX10-ACS Base Card I/O Addresses and Electronic Values .....	176
10.4	RECOMMENDED WIRING GUIDE .....	177
10.5	NX10-ACS-DSP LIQUID CRYSTAL DISPLAY.....	179

# Index of Figures

## Page

Figure 1 - 3x3 Command Center Enclosure Dimensions .....	15
Figure 2 - 3x5 Command Centre Enclosure Dimensions .....	16
Figure 3 - NX10-CC01-BB and NX10-CC02-BB Backboxes .....	17
Figure 4 - NX10-FACC(x) and NX10-FALCC(x) Inner Doors .....	19
Figure 5 - NX10-FACC(x)P and NX10-FALCC(x P Inner Doors .....	20
Figure 6 – NX10-CC01-X (3x3) Modular Command Center Inner Doors .....	21
Figure 7 - NX10-CC02 (3x5) Modular Command Center Inner Doors .....	21
Figure 8 - Module or Blank Plate Installation .....	22
Figure 9 - NX10-CC01-OD and NX10-CC02-OD Outer Doors .....	23
Figure 10 - NX10-ACS-ACB Board Location .....	25
Figure 11 - NX10-ACS-ACB Board Installation .....	26
Figure 12 - NX10-ACS-ACB Wiring .....	27
Figure 13 - NX10-ACS Base Card Installation .....	28
Figure 14 - Battery Connection .....	32
Figure 15 - Base Card SLC Circuit Wiring .....	36
Figure 16 - Base Card NAC Circuit Wiring .....	38
Figure 17 - NX10-EM-LPD Module Installation to an NX10-ACS-2L Base Card .....	45
Figure 18 - NX10-EM-LPD SLC and NAC Wiring .....	46
Figure 19 - NX10-EM-PSU Installation .....	49
Figure 20 - AC Molex Cable Harness .....	50
Figure 21 - NX10-EM-PSU Wiring .....	51
Figure 22 - NX10-EM-PSU6 Mounting Locations .....	53
Figure 23 - NX10-EM-PSU6 Wiring .....	55
Figure 24 - Common System Ground Fault Monitoring .....	59
Figure 25 - NX10-AMP-80 Mounting Locations .....	60
Figure 26 - NX10-AMP-80 Module Installation .....	61
Figure 27 - NX10-AMP-80 Wiring .....	64
Figure 28 - NX10-AMP-80 24 VDC Wiring .....	67
Figure 29 - Peripheral Bus Audio Amplifier NX10-EM-PSU6 Monitoring .....	70
Figure 30 - Mic Bus Amp to Floor (Area) Amps Wiring (Class B or A) .....	71
Figure 31 - Hardwired NX10-AMP-80 and NX10-EM-PSU6 Supervision Wiring .....	73
Figure 32 - Shield Neo NX Config Tool, NX10-AMP-80 Peripheral Bus Device Selector .....	74
Figure 33 - Shield Neo NX Config Tool, NX10-AMP-80 Point Details .....	75
Figure 34 - Shield Neo NX10-AMP Software, Adding a Panel with Audio .....	78
Figure 35 - Example of NFPA 72 Evacuation Message .....	79
Figure 36 - NX10-ACS-DSP and Slide-In Labels .....	80
Figure 37 - NX10-ACS-DSP Module Installation .....	81
Figure 38 - NX10-ACS-DSP Switch Input Wiring .....	82
Figure 39 - Neo NX Config Tool, NX10-ACS-DSP Switch Input Programming .....	83
Figure 40 - NX10-MIC Microphone Assembly .....	93
Figure 41 - NX10-MIC Microphone Assembly Installation .....	93
Figure 42 - NX10-TEL2-MCCS (/P) Firefighter Telephone Assembly .....	95
Figure 43 - NX10-TEL2-MCCS (/P) Firefighter Telephone Assembly Installation .....	96
Figure 44 - NX10-TEL2-MCCS Telephone Interface Module Wiring .....	97
Figure 45 - NX10-TEL2-RISE Module .....	98
Figure 46 - NX10-CC01-BB NX10-TEL2-RISE Installation .....	99
Figure 47 - NX10-CC02-BB NX10-TEL2-RISE Installation .....	100
Figure 48 - NX10-TEL2-REM Enclosure with NX10-TEL2-RISE and NX10-EM-PSU6 Modules .....	102
Figure 49 - NX10-TEL2-RISE Module Wiring and DIP Switch .....	103
Figure 50 - Firefighter Telephone Riser Wiring .....	104
Figure 51 - NX10-TEL2-PPB Installation .....	112
Figure 52 - NX10-TEL2-PPB Board Wiring to a Microphone or Remote Microphone Bus Amplifier .....	113

Figure 53 - NX10-FANET4 and NX10-FANET7 Installation.....	115
Figure 54 - NX10-FANET4 and NX10-FANET7 Wiring.....	117
Figure 55 - NX10-FANET4 Network Ground Fault Detection Configuration .....	119
Figure 56 - NX10-ZS Module Installation .....	121
Figure 57 - NX10-ZS Speaker Circuit Wiring .....	126
Figure 58 - NX10-EM-PRN Printer Module Installation .....	127
Figure 59 - NX10-EM-PRN Adapter Card Installation .....	128
Figure 60 - NX10-EM-PRN Module .....	129
Figure 61 - NX10-EM-PRN Cable Clips .....	130
Figure 62 - Switch LED Module Installation .....	132
Figure 63 - Switch LED Module Wiring .....	133
Figure 64 - Switch LED Module Daisy Chain Wiring .....	135
Figure 65 - Switch LED Module Addressing .....	136
Figure 66 - Shield Neo NX Config Tool, NX10-EM-ASW-16 Peripheral Bus Device Selector .....	137
Figure 67 - Shield Neo NX Config Tool, NX10-EM-ASW-16 Module Programming Screen .....	138
Figure 68 - Application Specific Switch/LED Programming.....	139
Figure 69 - NX10-EM-ASW-16 Switch/LED Page All Areas Programming .....	140
Figure 70 - NX10-EM-ASW-16 Switch/LED Page Area Programming.....	140
Figure 71 – NX10-CC01 Cable Routing.....	141
Figure 72 - NX10-CC02 Cable Routing.....	142

## Limitations of Fire Alarm and Emergency Communication Systems

An automatic fire alarm system and when required, interfaced emergency communication system (various emergency messages with or without live voice communications) can provide early warning and notification of the development of a fire. It cannot, however, assure protection against loss of property or loss of life.

It is recommended that smoke and/or heat detectors and notification appliances be installed throughout the building in accordance with the requirements detailed in NFPA 72, local/state codes, and with the instructions supplied with the equipment.

The type(s) of detector employed, and their physical location must be selected carefully to make sure that they detect the types of fire likely to occur in the protected area. Even so, many factors may prevent the necessary levels of combustion products from reaching the sensing chambers and thus the system may not indicate an alarm condition.

Heat detectors protect property, not life.

## **INSTALLATION OF A FIRE ALARM SYSTEM MAY LOWER INSURANCE RATES, BUT IT IS NOT A SUBSTITUTE FOR FIRE INSURANCE!**

Smoke detectors shall be installed in the same room(s) as the command centre, any equipment used for transmission of the alarm condition, and in locations where power supplies are mounted. Otherwise, a developing fire may damage the system and its ability to report the fire alarm condition, refer to NFPA 72.

The system will not operate without power. Standby batteries shall be properly maintained and replaced regularly.

Regular maintenance will make sure that the system is operating at its optimum performance. Arrange a maintenance agreement with the manufacturer's local representative to make sure that the system is maintained by a professional fire alarm installer in accordance with National and any local/state codes. Maintain a written record of all inspections and maintenance performed.

## General Installation Notes

**Before you install this product make sure that you comply with the ratings shown inside the equipment and in the specifications section of this manual.**

**Make sure that you have read and understood the instructions provided in this manual before you work on the panel. If you are not sure, stop work and seek guidance from the manufacturer or supplier.**

**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESDS procedures can damage the equipment.**



**This equipment generates, uses, and can radiate radio frequency energy. If it is not installed in accordance with the instructions in this manual, it may cause interference to radio communications.**

**Make sure that the installation wire sizes are adequate to deliver the required load current and maintain compatibility with the specific device operating voltages.**

**A secure dedicated ground connection is required. Although no system is immune to the effects of lightning strikes, a secure ground connection will reduce susceptibility. The use of overhead or outside aerial wiring is not recommended.**

**Following installation or after any system change (including changes to operating software or configuration settings) the system shall be tested in accordance with the acceptance requirements in NFPA 72 and any local/state codes. All affected functions or devices shall be 100% tested. In addition, at least 10% of initiating devices not directly affected by the change must be tested.**



*This equipment has been tested and found to be compliant with the limits for a Class A computing device, pursuant to Subpart B of Part 15 of FCC Rules, which is designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case, the user will be required to correct the interference at their expense.*

## Ambient Temperature and Environment

This equipment meets the requirements for operation at 32°F - 120°F (0°C - 49°C) and relative humidity of 93% RH. However, standby battery life is drastically reduced at higher temperatures. The recommended room temperature for installation is 60°F - 86°F (15°C - 27°C).

## Product Firmware and Software

Shield continuously strives to keep up with the latest industry enhancements and changes, as such; periodic upgrades occur to the panels internal firmware and to its Windows™ based Shield, Dynamix Tools, Neo NX Config Tool and Neo NX10-AMP software. To make sure that the correct version of firmware and software are being used, Shield recommends that our partners be vigilant of technical information received from Shield and periodically review the Shield secured website for the most current versions of both. If you have any questions or concerns about the appropriate software and/or firmware, contact the Shield Technical Support Team.



# 1 Introduction

## 1.1 Product Description

This manual covers the installation and operation of the Neo NX Pre-Configured & Modular Command Centres. Whether it be pre-configured or modular, command centres are available as either 3x3 or 3x5 command centres. 3x3 command centres are 21.7" wide by 24.1" high, while 3x5 command centres are 21.7" wide by 37.3" high. Each command centre comes in a standard Shield red enclosure, if an optional grey enclosure is required add a -G to the end of the pre-configured or modular command centre's part number.

### Pre-Configured 3x3 Command Centres:

- NX10-FACC-1 is a single loop analogue addressable command centre that includes two notification appliance circuits, two audio amplifier circuits, a live voice paging microphone and an NX10-EM-ASW-16 switch/LED module.
- NX10-FACC-2 is a two-loop analogue addressable command centre that includes two notification appliance circuits, two audio amplifier circuits, a live voice paging microphone and an NX10-EM-ASW-16 switch/LED module.
- NX10-FACC-4 is a four-loop analogue addressable command centre that includes four notification appliance circuits, two audio amplifier circuits, a live voice paging microphone and an NX10-EM-ASW-16 switch/LED module.
- NX10-FACC-1P is a single loop analogue addressable command centre that includes two notification appliance circuits, two audio amplifier circuits, a live voice paging microphone, a firefighter telephone assembly and an NX10-EM-ASW-16 switch/LED module.
- NX10-FACC-2P is a two-loop analogue addressable command centre that includes two notification appliance circuits, two audio amplifier circuits, a live voice paging microphone, a firefighter telephone assembly and an NX10-EM-ASW-16 switch/LED module.
- NX10-FACC-4P is a four-loop analogue addressable command centre that includes four notification appliance circuits, two audio amplifier circuits, a live voice paging microphone, a firefighter telephone assembly and an NX10-EM-ASW-16 switch/LED module.

### Pre-Configured 3x5 Command Centres:

- NX10-FALCC-1 is a single loop analogue addressable command centre that includes two notification appliance circuits, two audio amplifier circuits, a live voice paging microphone and an NX10-EM-ASW-16 switch/LED module.
- NX10-FALCC-2 is a two-loop analogue addressable command centre that includes two notification appliance circuits, two audio amplifier circuits, a live voice paging microphone and an NX10-EM-ASW-16 switch/LED module.
- NX10-FALCC-4 is a four-loop analogue addressable command centre that includes four notification appliance circuits, two audio amplifier circuits, a live voice paging microphone and an NX10-EM-ASW-16 switch/LED module.
- NX10-FALCC-1P is a single loop analogue addressable command centre that includes two notification appliance circuits, two audio amplifier circuits, a live voice paging microphone, a firefighter telephone assembly and an NX10-EM-ASW-16 switch/LED module.
- NX10-FALCC-2P is a two-loop analogue addressable command centre that includes two notification appliance circuits, two audio amplifier circuits, a live voice paging microphone, a firefighter telephone assembly and an NX10-EM-ASW-16 switch/LED module.
- NX10-FALCC-4P is a four-loop analogue addressable command centre that includes four notification appliance circuits, two audio amplifier circuits, a live voice paging microphone, a firefighter telephone assembly and an NX10-EM-ASW-16 switch/LED module.

### Modular 3x3 Command Centres:

- NX10-CC01-BB command centre backbox.
- NX10-CC01-ID1 command centre inner door with one double and seven single aperture locations.
- NX10-CC01-ID2 command centre inner door with two double and five single aperture locations.
- NX10-CC01-ID3 command centre inner door with nine single aperture locations.
- NX10-CC01-OD command centre outer door.

### Modular 3x5 Command Centres:

- NX10-CC02-BB command centre backbox.
- NX10-CC02-ID1 command centre inner door with one double and thirteen single aperture locations.
- NX10-CC02-ID3 command centre inner door with fifteen single aperture locations.
- NX10-CC02-ID4 command centre inner door with two double and eleven single aperture locations.
- NX10-CC02-OD command centre outer door.

The NX10-ACS base card of the pre-configured and modular command centres are compatibility tested for use with the Shield range of intelligent detectors and modules, refer to Section 1.2.2 SLC Devices for a full list of devices. Each SLC (Signalling Line Circuit) loop supports the connection of 126 devices in any combination of intelligent detectors and modules.

## 1.2 System Components

### 1.2.1 Internal Peripherals

The following internal peripherals can be installed in any Neo NX command centre:

		Document
NX10-ACS-ACB	AC Board	NX686-033
NX10-ACS-1L	One Loop Panel PCB	NX686-034
NX10-ACS-2L	Two Loop Panel PCB	NX686-034
NX10-EM-LPD	Combined SLC/NAC Expander Module (cannot be used with NX10-ACS-1L)	NX686-011
NX10-EM-PSU	5 Amp Expansion Power Supply Module (cannot be used with NX10-ACS-1L)	NX686-012
NX10-ACS-DSP	Alphanumeric Graphical Display and Keyboard	NX686-035
NX10-FANET4	Network Interface Module, Style 4 (Class B)	NX686-013
NX10-FANET7	Network Interface Module, Style 7 (Class A)	NX686-013
NX10-AMP-80	Audio Amplifier with two 40-Watt Speaker Circuits	NX686-032
NX10-ZS	Audio Zone Splitter Module	NX686-054
NX10-EM-PSU6	6 Amp Power Supply Charger for NX10-AMP-80 Amplifier	NX686-028
NX10-EM-ASW-16	Switch Module with 16 Switches and 48 LEDs	NX686-020
NX10-FA-LED16	LED Annunciator Module, 16 Red and 16 Yellow	NX686-020
NX10-FA-LED32R	LED Annunciator Module, 32 Red	NX686-020
NX10-FA-LED32Y	LED Annunciator Module, 32 Yellow	NX686-020
NX10-EM-IO48*	16 Switch Input and 48 LED Driver Outputs	NX686-082
NX10-EM-PRN*	Printer Module with Mounting Plate	NX686-022
NX10-MIC*	Microphone Assembly	NX686-030
NX10-TEL2-MCCS	Firefighter Phone System2 Command Centre Phone with Enclosure	NX686-066
NX10-TEL2-MCCS/P	Firefighter Phone System2 Command Centre PTT Phone with Enclosure	NX686-066
NX10-TEL2-RISE	Firefighter Phone System2 Telephone Riser	NX686-068
NX10-TEL2-PPB	NX10-TEL2-RISE Plug-in Audio Module	NX686-067

## 1.2.2 SLC Devices

Addressable Pull Stations		Document
S-A4061	Polycarbonate Dual Action Pull Station	APD0519A130107
Analog/Addressable Detectors		
S-A5011	Enhanced Photoelectric Smoke Detector	39215-388
S-A5014	Enhanced Multi-Criteria Smoke Detector	39215-388
S-A5013	New Intelligent Heat Detector	39215-388
S-A5013	Intelligent Heat Detector	39214-429
Base		
S-A5001	SA Series 4" Low-Profile Detector Base (Isolating)	39215-388
Addressable Modules		
S-A5041	Enhanced Switch Monitor Module	APD00994 A220503
S-A5043	Enhanced Relay Output Module	APD1000 A220503
S-A5044	Enhanced NAC Module	APD1002 A220503
S-A5042	Enhanced Dual Switch Monitor Module	APD0996 A220503
S-A4043	Switch Monitor Module	39214-426
S-A4041	Mini Monitor Module	39214-632
S-A4044	Priority Switch Monitor Module	39214-426
S-A4042	Dual Switch Monitor Module	39214-432
S-A4045	I/O Relay Output & Switch Monitor Module	39214-427
S-A4046	NAC Output Module	39214-428
S-A4050	Relay Module	39214-425
Loop Isolator Module		
S-A4051	Isolator Module (requires S-A4002 Isolator Mounting Base)	39214-424
S-A4002	Isolator Mounting Base for S-A4051 (fits 3" octagon electrical box)	39214-424
Loop Powered Sounder/Beacons and Sounder Beacon Bases		
S-A4025	Enhanced Open Area Sounder/Beacon (Loop Powered) - Red	69214-690
S-A4021	Open Area Sounder (Loop Powered) - Red	39214-633
Apollo XP95 Analog/Addressable Detectors		
S-A4011E	XP95A Photoelectric Smoke Detector	39215-388
S-A4014E	XP95A Multi-Criteria Smoke Detector	39215-388
S-A4013E	XP95A Heat Detector	39215-388
S-A4011	Photoelectric Smoke Detector	39214-035
S-A4014	Multi Sensor Detector	39214-035
S-A4013	Heat Detector	39214-035



*If you have a device with an APO suffix or no suffix at all, contact Shield Technical Support for compatibility information.*

## 1.2.3 NAC Devices

On board notification appliance circuits (NACs) are 24 VDC filtered and regulated. Any constant 24 VDC or pulsed 24 VDC, non-synchronized, signalling device that meet the voltage and current requirements of the signal circuit are considered compatible. For a list of compatible synchronization protocol devices refer to Shield Device Compatibility Document NX686-081.

### 1.2.4 Network Devices

The following additional Ad-NeT-PluS network nodes can be added to a Neo NX command centre:

		Document
NX10-FAN-C	Remote Control Annunciator, Style 4 (Class B)	NX686-003
NX10-FAN-C/ST7	Remote Control Annunciator, Style 7 (Class A)	NX686-003
NX10-FAN-D	Remote Annunciator Only, Style 4 (Class B)	NX686-003
NX10-FAN-D/ST7	Remote Annunciator Only, Style 7 (Class A)	NX686-003
NX10-FA-PENN/ST4	Peripheral Expansion Network Node Module, Style 4 (Class B)	NX686-059
NX10-FA-PENN/ST7	Peripheral Expansion Network Node Module, Style 7 (Class A)	NX686-059
NX10-FA-BMS	Building Management Graphics Interface, Style 4 (Class B)	NX686-042
NX10-FA-BMS/ST7	Building Management Graphics Interface, Style 7 (Class A)	NX686-042

### 1.3 Programming Manuals

Neo NX command centres are programmed with Shield, Dynamix Tools, Neo NX Config Tool and Neo NX10-AMP software. Installers and programmers must be Shield factory certified, for additional information regarding certification contact Shield customer service/technical support.

		Document
Neo NX Config Tool	PC-NeT Programming Manual	NX686-100
Neo NX NX10-AMP Software	NX10-AMP Amplifier Programming Manual	NX686-055

## 2 Agency Listings / Approvals / Requirements

### 2.1 UL864 10th Edition

This product is listed for the following services and applications.

- Local
- Smoke Control
- Manual
- Automatic
- Waterflow
- Supervisory

This product must be installed, serviced, and maintained in accordance with the following standards and any local / state codes.

- NFPA 70 National Electrical Code
- NFPA 72 National Fire Alarm Code

### 2.2 FCC

#### 2.2.1 Emissions



**This equipment generates, uses, and can radiate radio frequency energy. If it is not installed in accordance with the instructions in this manual, it may cause interference to radio communications.**

This equipment has been tested and found to comply with the limits for a Class A computing device pursuant to Subpart B of Part 15 of FCC Rules, which is designed to provide reasonable protection against such interference when operated in a commercial environment. Operation of this equipment in a residential area is likely to cause interference in which case, the user will be required to correct the interference at their expense.

This page is intentionally blank

### 3 Enclosures

Whether it be a pre-configured or modular command centre, each command centre will need to include an enclosure backbox, inner door and outer door. Command centre size will depend on whether it is a 3x3 (21.7" wide by 24.1" high) or 3x5 (21.7" wide by 37.3" high) command centre.



*Inner and outer doors are mounted to the command centre backbox with AX-HPINs*

*The area should be readily accessible with enough room to easily install and maintain the panel. Enough knockouts are provided for wiring convenience in both the top and side walls of the backbox.*

1. Check for any shipping damage.
2. Mount the enclosure's backbox in a clean, dry, vibration-free area where extreme temperatures are not encountered.
3. Locate the top of the cabinet approximately 5½ feet (1.7 m) above the floor with the hinge mounting on the left.
4. Determine the number of conductors required for the devices and circuits to be installed.
5. Select the appropriate knockout(s) and pull the required conductors into the backbox, separating power limited from non-power limited conductors. (Refer to the recommended cable routing diagram Section 8).


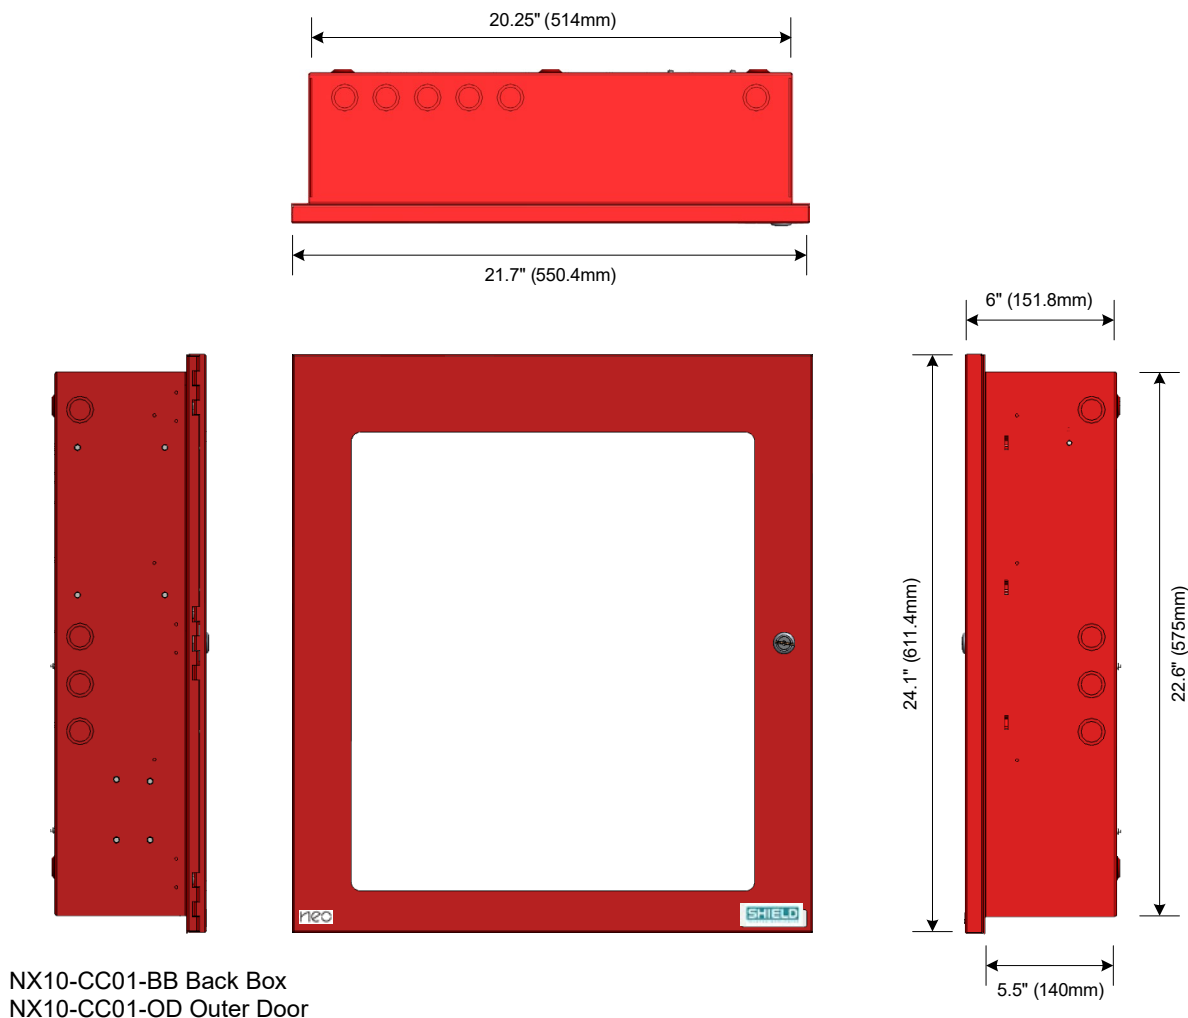


Figure 1 - 3x3 Command Center Enclosure Dimensions

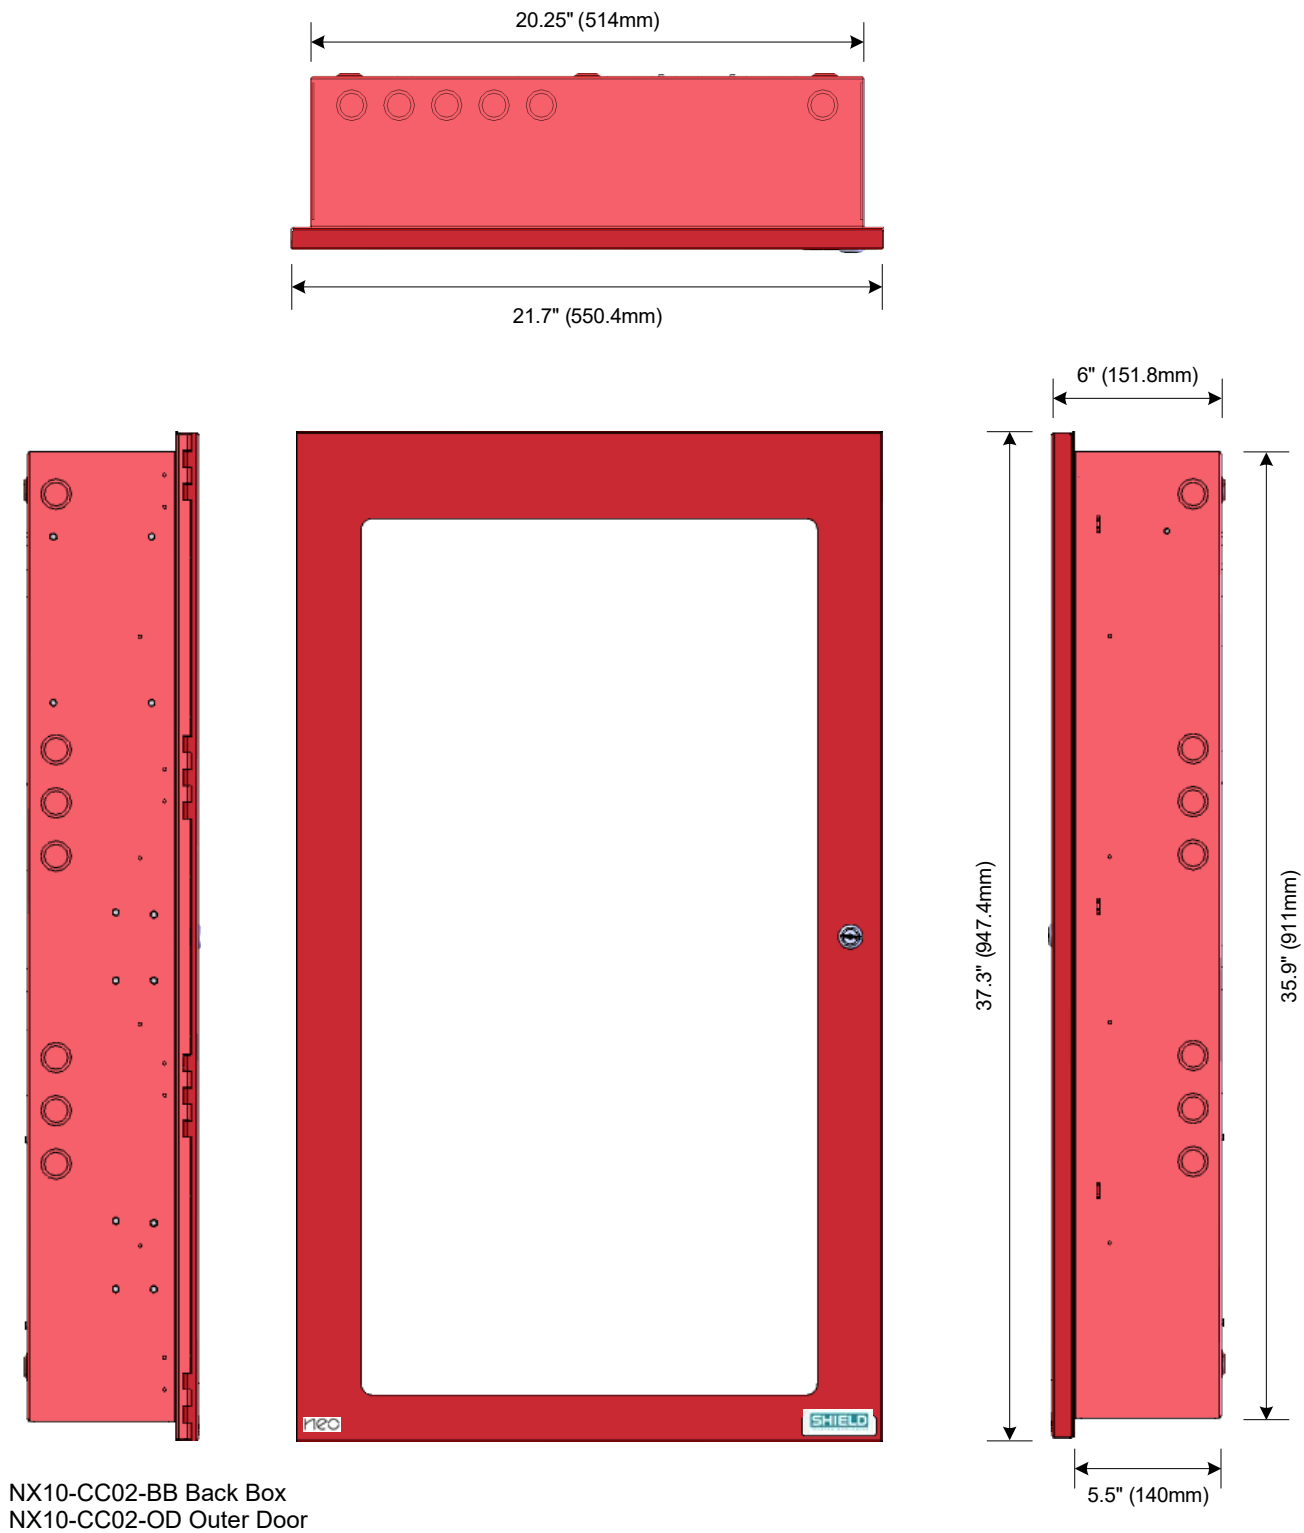

*Figure 2 - 3x5 Command Centre Enclosure Dimensions*



### 3.1 Backbox Installation

Pre-configured command centres are shipped fully assembled, while modular command centres require assembly in the field. If installing a pre-configured command centre backbox, first remove the command centre's inner and outer doors and then remove all installed circuit boards. Whether it be a 3x3 (NX10-CC01-BB) or 3x5 (NX10-CC02-BB) command centre backbox, the command centre backbox may be surface or semi-flush mounted. All wiring should be in accordance with National Electric Code (NEC), State and Local codes.



*The 3x3 command centre backbox (NX10-CC01-BB) includes sixteen (16) and the 3x5 command centre backbox (NX10-CC02-BB) includes twenty-two (22) double knockouts (1/2" or 3/4") for wiring requirements. Care should be taken when using the inner 1/2" knockout to avoid knocking out the 3/4" knockout.*

To surface mount the NX10-CC01-BB or NX10-CC02-BB command centre backbox there are five pre-drilled holes located on the rear of the backbox (Figure 3). The top centre mounting hole is keyed for ease of mounting.

1. Place the backbox on the wall and mark the top keyed mounting hole.
2. Drill the marked location and partially install the mounting screw in the wall.
3. Hang the backbox on the mounting screw.
4. Level the backbox and mark the remaining holes and then drill the holes.
5. Insert all screws and firmly tighten.

For semi flush mounting, in addition to the rear mounting holes, 1/8" knockouts are located on the sides and top of the command centre backbox for securing the enclosure to the wall studs.

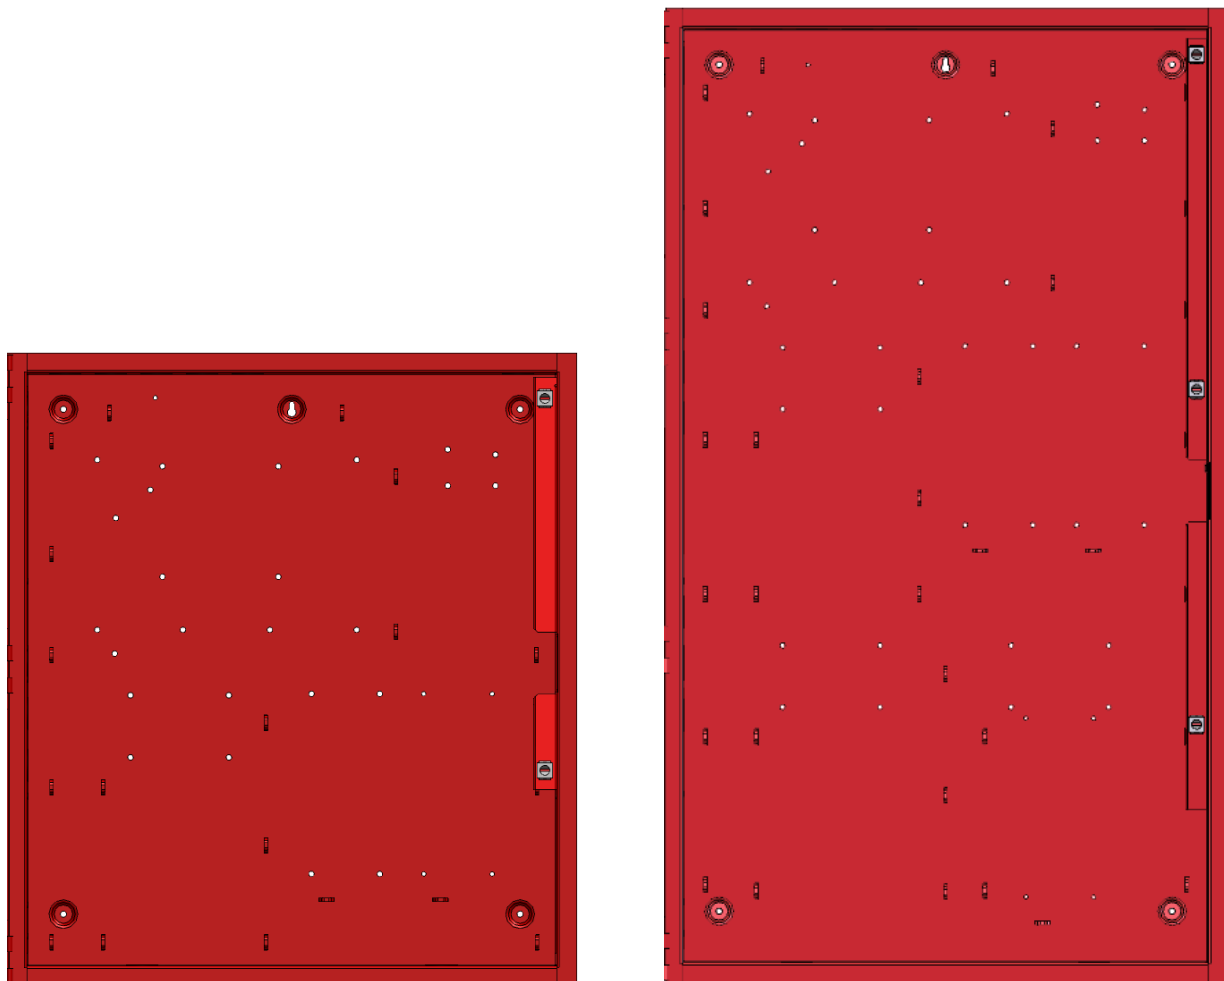


Figure 3 - NX10-CC01-BB and NX10-CC02-BB Backboxes

## 3.2 Inner Door Assembly and Installation

Pre-configured command centres are shipped with aperture modules and blank plates already installed based on the pre-configured command centre purchased. Modular command centre inner doors are purchased with no aperture modules or blank plates.

Below is a list of inner door modules and plates available for 3x3 NX10-FACC-x(P) and 3x5 NX10-FALCC-x(P) command centre inner doors. These modules and plates are either double or single aperture wide.

Double Aperture Modules and Blank Plate (size; 6 5/8" H x 11 1/4" W):

<b>NX10-ACS-DSP</b>	Keyboard Display
<b>NX10-TEL2-MCCS</b>	Firefighter Telephone Assembly with Standard Telephone
<b>NX10-TEL2-MCCS/P</b>	Firefighter Telephone Assembly with Push-To-Talk (PTT) Telephone
<b>AX-DAP</b>	Double Aperture Blank Plate

Single Aperture Modules and Blank Plate (size; 6 5/8" H x 5 5/8" W):

<b>NX10-EM-ASW-16</b>	Switch/LED Module
<b>NX10-EM-ACM-6</b>	Fan/Damper Module
<b>NX10-FA-LED16</b>	LED Annunciator Module, 16 Red and 16 Yellow
<b>NX10-FA-LED32R</b>	LED Annunciator Module, 32 Red
<b>NX10-FA-LED32Y</b>	LED Annunciator Module, 32 Yellow
<b>NX10-EM-IO48</b>	Switch and LED Driver
<b>NX10-MIC*</b>	Microphone Assembly
<b>NX10-EM-PRN*</b>	Printer Module with Mounting Plate
<b>AX-SAP</b>	Single Aperture Blank Plate

### 3.2.1 Pre-Configured 3x3 (NX10-FACC) and 3x5 (NX10-FALCC) Command Centre Inner Doors

- NX10-FACC(x) and NX10-FALCC(x) Pre-Configured Inner Doors include one of each:
  - NX10-ACS-DSP Keyboard Display
  - NX10-EM-ASW-16 Switch/LED Module
  - NX10-MIC Microphone Assembly



*Figure 4 - NX10-FACC(x) and NX10-FALCC(x) Inner Doors*

- NX10-FACC(x)P and NX10-FALCC(x)P Pre-Configured Inner Doors include one of each:
  - NX10-ACS-DSP Keyboard Display
  - NX10-EM-ASW-16 Switch/LED Module
  - NX10-MIC Microphone Assembly
  - NX10-TEL2-MCCS Firefighter Telephone Assembly

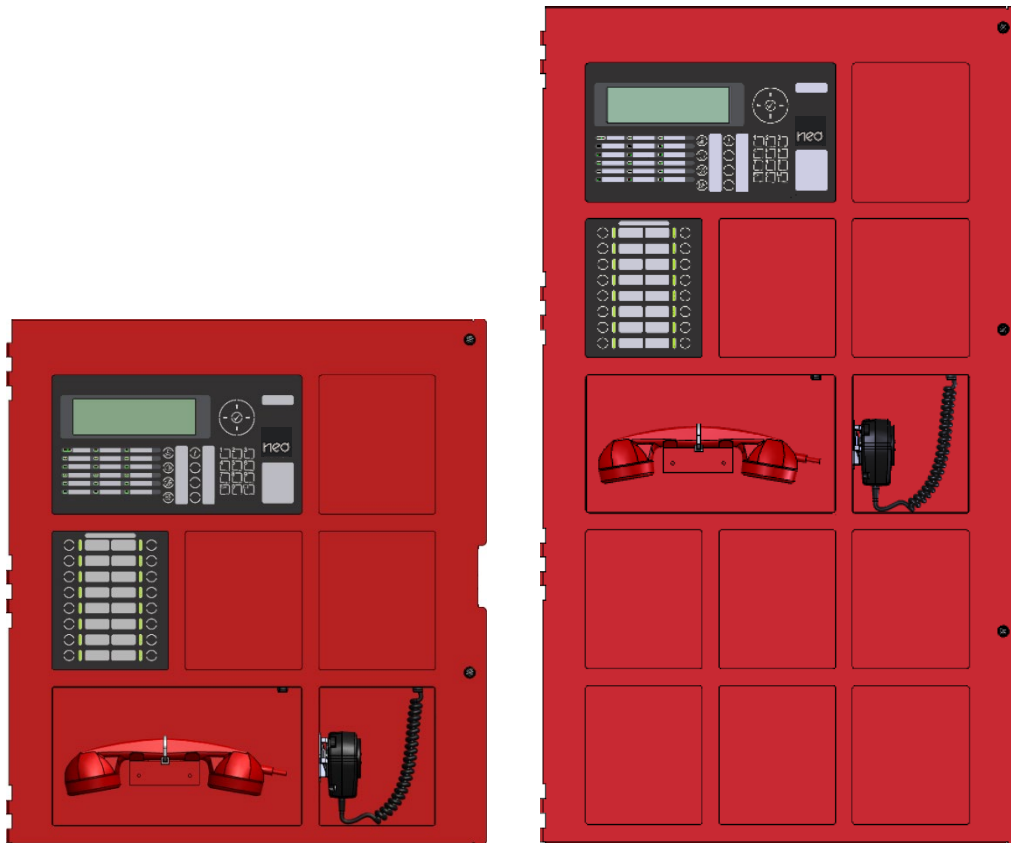



Figure 5 - NX10-FACC(x)P and NX10-FALCC(x)P Inner Doors

### 3.2.2 Modular 3x3 (NX10-CC01-X) and 3x5 (NX10-CC02-X) Command Centre Inner Doors

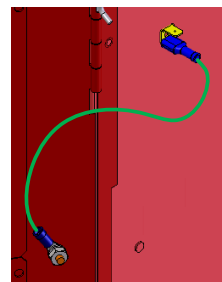There are three (3) inner door options available for both the NX10-CC01-X (3x3) and NX10-CC02-X (3x5) modular command centres. Modular command centre inner door selection is based on the quantity of double and single aperture modules required for the installation.




*Each modular command centre inner door is shipped with a pre-mounted ground cable, this ground cable must be plugged into the double spade located on the inner wall of the command centres backbox (see opposite).*



#### 3.2.2.1 NX10-CC01 (3x3) Modular Command Centre Inner Doors

NX10-FACC-1(x) (3x3) modular command centre inner doors include:

- NX10-CC01-ID1 inner door that supports one (1) double aperture module and seven (7) single aperture modules.
- NX10-CC01-ID2 inner door that supports two (2) double aperture modules and five (5) single aperture modules.
- NX10-CC01-ID3 inner door that supports nine (9) single aperture modules.

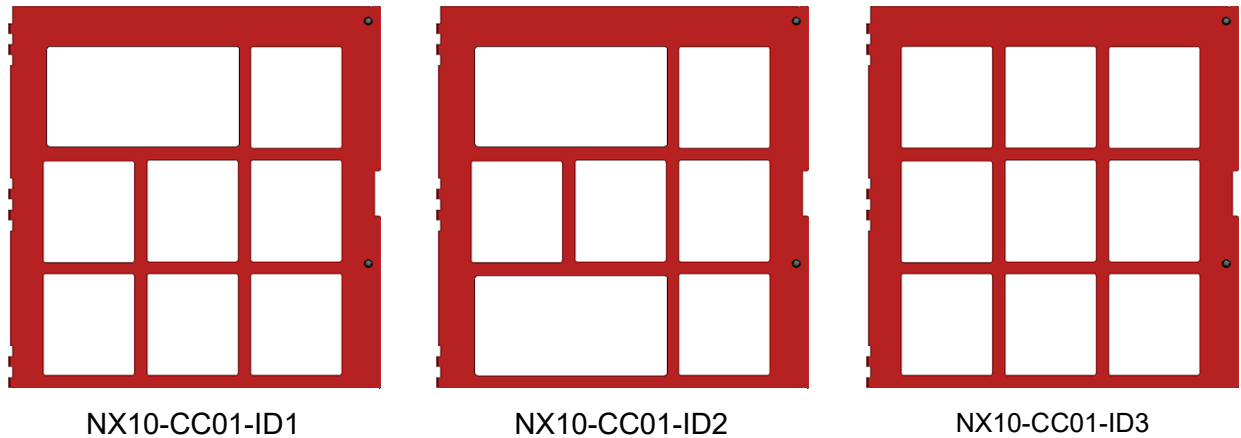


*Figure 6 – NX10-CC01-X (3x3) Modular Command Center Inner Doors*

### 3.2.2.2 NX10-CC02 (3x5) Modular Command Centre Inner Doors

NX10-CC02 (3x5) modular command centre inner doors include:

- NX10-CC02-ID1 inner door that supports one (1) double aperture module and thirteen (13) single aperture modules.
- NX10-CC02-ID3 inner door that supports fifteen (15) single aperture modules.
- NX10-CC02-ID4 inner door that supports two (2) double aperture modules and eleven (11) single aperture modules.

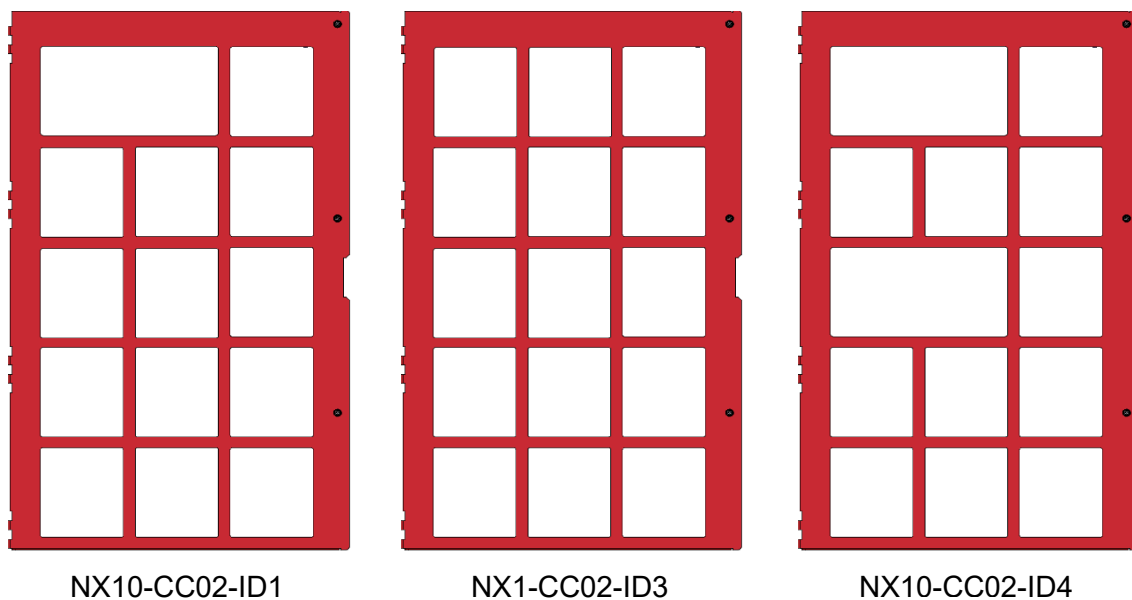


*Figure 7 - NX10-CC02 (3x5) Modular Command Center Inner Doors*

### 3.2.3 Inner Door Aperture Module and Blank Plate Installations

Except for the pre-configured command centres, which include aperture modules and blank plates, all command centre inner doors require the purchase of double and single aperture modules and/or blank plates. Additional aperture modules can be added to the pre-configured command centres by removing the previously installed blank plates.

Based on preference, aperture modules and/or blank plates can be installed prior to the inner door being mounting to the command centre backbox or after.

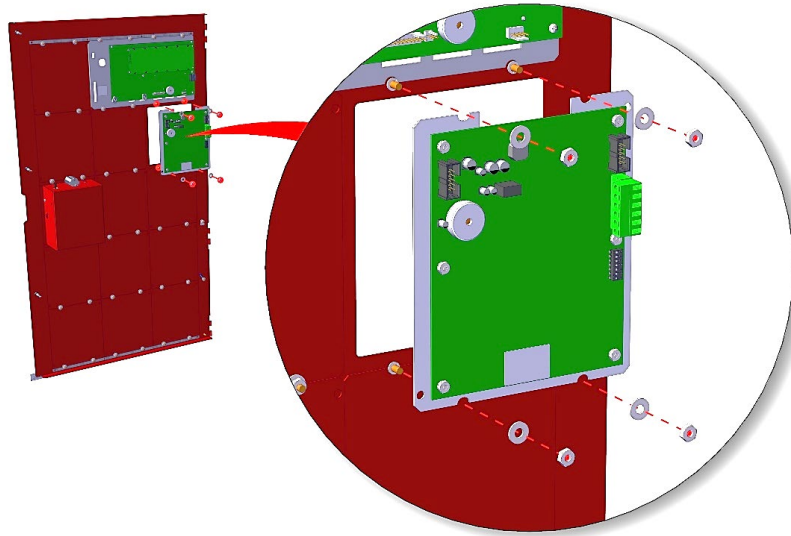

*Figure 8 - Module or Blank Plate Installation*

### 3.2.3.1 Pre-Configured 3x3 (NX10-FACC) and 3x5 (NX10-FALCC) Inner Doors

To install aperture modules into a pre-configured inner door of an NX10-FACC(x), NX10-FACC(x) P, NX10-FALCC or NX10-FALCC P:

1. Remove the four (4) nuts and washers securing the single aperture blank plate to inner door and remove the blank plate.
2. Place the aperture module into the aperture location between the male studs and secure with the previously removed four (4) washers and nuts.

### 3.2.3.2 Modular 3x3 (NX10-CC01-X) and 3x5 (NX10-CC02-X) Inner Doors

To install aperture modules or blank plates into a NX10-CC01 or NX10-CC02 inner door:

1. Remove the four (4) or eight (8) nuts and washers preinstalled on the male studs within the single or double aperture module location.
2. Place the aperture module or blank plate into the aperture location between the male studs and secure with the previously removed four (4) or eight (8) washers and nuts.

## 3.2.4 Modular Command Centre Inner Door Installation

### 3.2.4.1 Package Contents

Carefully unpack the inner door, within the box you will find the following items:

- One (1) NX10-CC01 or NX10-CC02 Inner Door
- Three (3) AX-HPIN Hinge Pins NX10-CC01-X or four (4) AX-HPIN Hinge Pins NX10-CC02-X

### 3.2.4.2 Install

1. Align the inner door hinges to the left side of the backbox hinges.
2. With the hinges aligned, slide the three (NX10-CC01) or four (NX10-CC02) supplied AX-HPINs (hinge pins) through the backbox and inner door hinges.
3. Plug the preinstalled earth cable of the inner door into the earth cable spade located on the left side wall of the command centre backbox.

### 3.3 Modular Command Centre Outer Door Installation

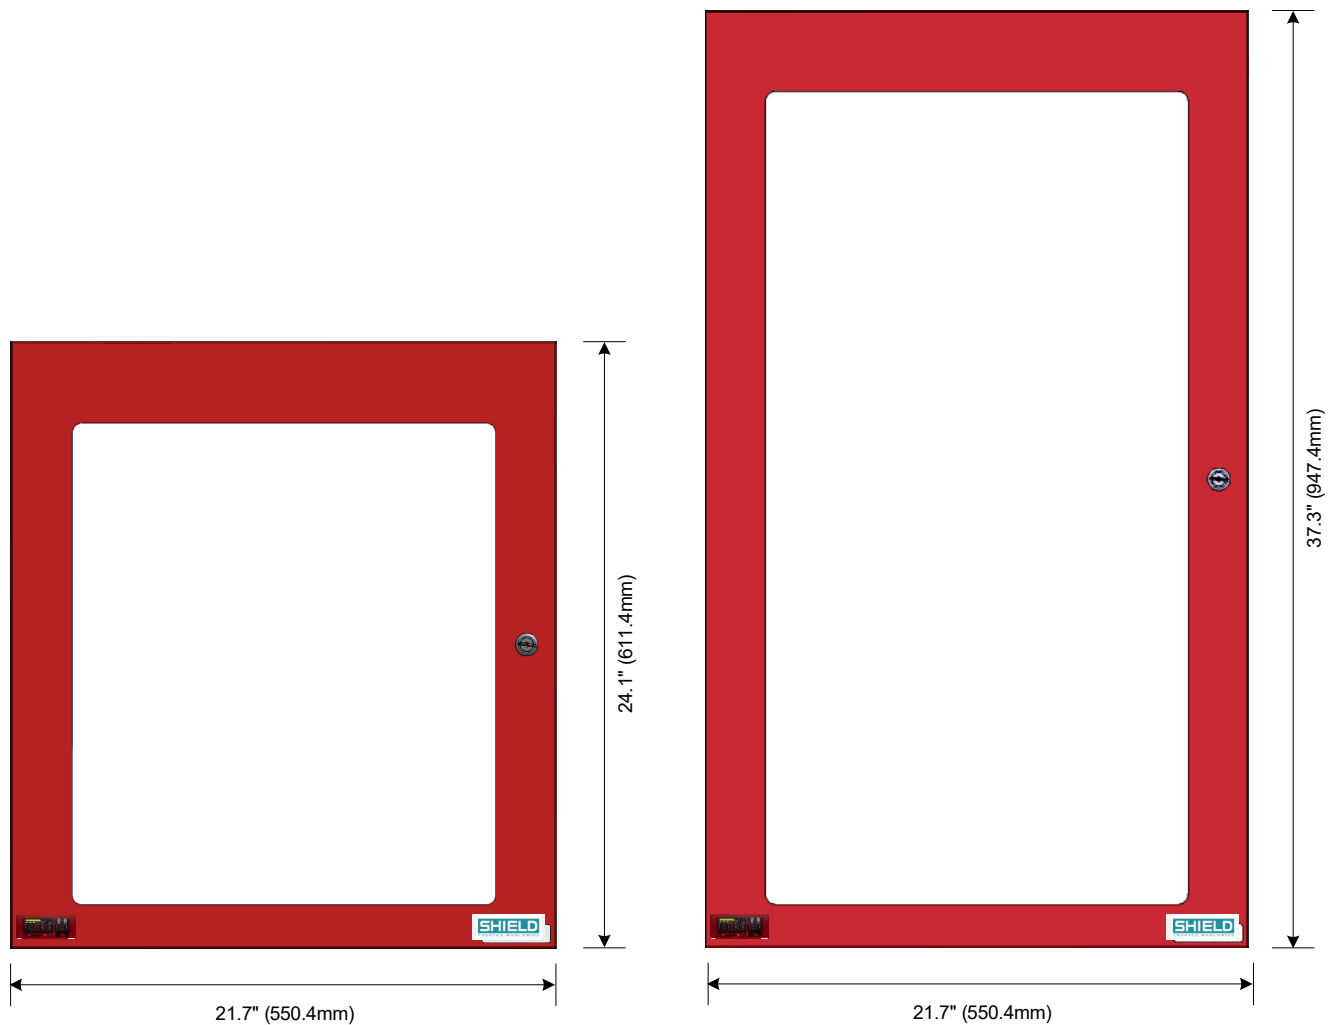


Figure 9 - NX10-CC01-OD and NX10-CC02-OD Outer Doors

Based on preference, outer doors can be installed after all work is completed on the backbox and inner door.

#### 3.3.1 Package Contents

Carefully unpack the outer door, within the box you will find the following items:

- One (1) NX10-CC01-OD or NX10-CC02-OD Outer Door
- Three (3) AX-HPIN Hinge Pins NX10-CC01-OD or four (4) AX-HPIN Hinge Pins NX10-CC02-OD
- Two (2) CAT30 Keys

#### 3.3.2 Install

1. Align the outer door hinges to the left side of the backbox hinges.
2. With the hinges aligned, slide the three (NX10-CC01-OD) or four (NX10-CC02-OD) supplied AX-HPINs (hinge pins) through the backbox and outer door hinges.

This page is intentionally blank



## 4 Main System Modules



**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESDS procedures can damage the equipment.**

**Before you install or remove any printed circuit boards, isolate all sources of power to the system (AC and battery).**

This section of the manual deals with the main system modules required to configure a modular command centre fire alarm control panel. Pre-configured command centres already include these essential modules.

Modular Command Centre without Audio:

FACP	NX10-ACS-ACB	NX10-ACS Base Card	NX10-ACS-DSP	NX10-EM-LPD	NX10-EM-PSU
1 Loop	✓	NX10-ACS-1L	✓		
2 Loop	✓	NX10-ACS-2L	✓		
4 Loop	✓	NX10-ACS-2L	✓	✓	✓

Modular Command Centre with Audio:

FACP	NX10-ACS-ACB	NX10-ACS Base Card	NX10-ACS-DSP	NX10-EM-LPD	NX10-EM-PSU	NX10-EM-PSU6	NX10-AMP-80	NX10-MIC
1 Loop	✓	NX10-ACS-1L	✓			✓	✓	✓
2 Loop	✓	NX10-ACS-2L	✓			✓	✓	✓
4 Loop	✓	NX10-ACS-2L	✓	✓	✓	✓	✓	✓

As additional optional modules can be added to the pre-configured and modular command centres, refer to the NX10-TEL2 Firefighter Telephone Assemblies and Riser, Optional System Modules and Optional Peripheral Bus (PBUS) Modules section of this manual.

### 4.1 NX10-ACS-ACB AC Board

The NX10-ACS-ACB AC board is the AC (120 / 240 VAC) interface for the pre-configured and modular command centre NX10-ACS base card.

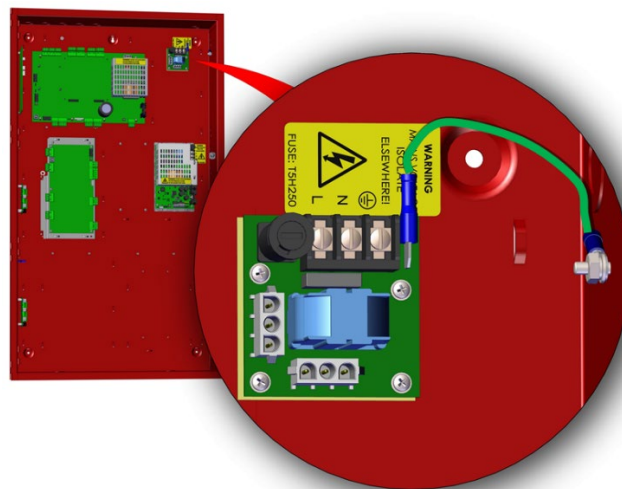


Figure 10 - NX10-ACS-ACB Board Location

### 4.1.1 Installation

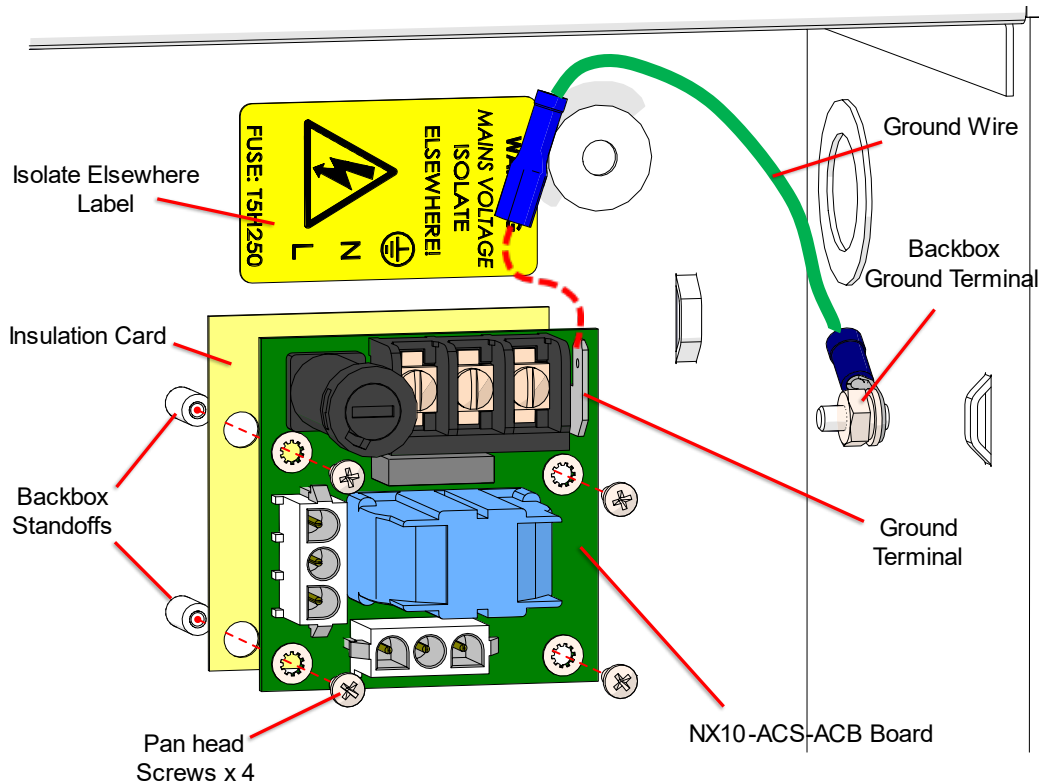


Figure 11 - NX10-ACS-ACB Board Installation

The NX10-ACS-ACB AC board is mounted in the upper right corner of the command centre backbox.



**Failure to connect NX10-ACS-ACB green ground wire to the ground screw (stud) of the backbox will defeat the protection circuitry designed to protect against lightning and static electricity.**

**Failure to tighten the panhead screws will defeat the protection circuitry designed to protect the card from damage due to lightning and static electricity.**

#### 4.1.1.1 Package Contents

Carefully unpack the NX10-ACS-ACB Board from the box, inside you will find:

- One (1) NX10-ACS-ACB Board
- One (1) NX10-ACS-ACB fiberglass laminated insulation card.
- One (1) Plastic bag containing:
  - One (1) Earth ground cable with washer, lock washer and hex nut
  - Four (4) panhead screws
  - One (1) Spare 5A, 250VAC Ceramic, Time Delay Fuse
  - One (1) AC isolate elsewhere label.

#### 4.1.1.2 Remove

1. Isolate the equipment from the AC Mains supply.
2. Disconnect the battery power supply.
3. Disconnect all used 3-pin Molex connectors.
4. Disconnect the Earth, Neutral and Live mains cables from the NX10-ACS-ACB Board (TB1).
5. Disconnect the earth cable spade connector from the NX10-ACS-ACB Board spade terminal.
6. Remove the four (4) panhead mounting screws and carefully remove the NX10-ACS-ACB Board from the backbox.

#### 4.1.1.3 Install

1. Make sure that the correctly rated fuse is installed in the NX10-ACS-ACB fuse holder.
2. Make sure that the Fiberglass Laminated Insulation Card is in position on the backbox standoffs (Figure 11).
3. Place the NX10-ACS-ACB in position on the backbox standoffs and install the four (4) supplied panhead screws.
4. Connect the earth cable spade connector to the NX10-ACS-ACB Board spade terminal.
5. If the AC Isolate elsewhere label is not fitted to the backbox or not visible, install the new label supplied. Make sure that the label is aligned with the Earth, Neutral and Live terminals.
6. Connect the Earth, Neutral and Live mains cables to the NX10-ACS-ACB Board (TB1).
7. Connect any 3-pin Molex connectors.

#### 4.1.2 Wiring

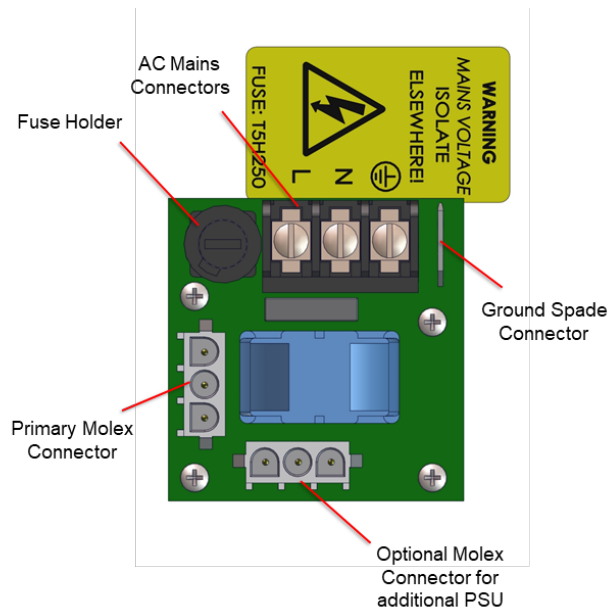



Figure 12 - NX10-ACS-ACB Wiring

#### 4.1.2.1 Terminal Summary

Designation		Description
TB1		Earth Ground
	N	AC Power Neutral
	L	AC-Power Load (Hot)
Primary Out		Molex 3-pin Connector to NX10-ACS Base Card
Auxiliary Out		Optional Molex 3-pin Connector for additional PSU

#### 4.1.2.2 Electrical Specifications

Mains Input	Supervised
Nominal Voltage	120V (1.4A (1 or 2 loop) / 2.8A (4 loop)) 240V (0.7A (1 or 2 loop) / 1.4A (4 loop))
Frequency	50/60Hz
Dedicated AC Branch Circuit Requirement	15A (over-current protection for this circuit must comply with Article 760 of the National Electrical Code (NEC) and/or local codes)
Brown-out	98V nominal
On-Board AC Fuse	5A, 250VAC Ceramic, Time Delay (size 5x20mm) (Shield part number 620-003, Bussmann S505-5-R, Littelfuse 0215005.XP)
AC Wiring	#14 or #12 AWG Refer to NEC. If multiple AC wires are required under any of the input terminals, use Shield part number 560-035 12AWG twin cable ferrule grey or Weidmuller part number 9037530000. If #10 AWG wire is required use TE Connectivity Plasti-Grip wire pin 12-10
Ground Terminal	Must be connected to a solid earth ground. Use #14 AWG (2 mm2) or larger wire with 600v insulation rating

## 4.2 NX10-ACS-1L One-Loop or NX10-ACS-2L Two-Loop Base Card

The NX10-ACS-1L one-loop or NX10-ACS-2L two-loop base card (referred to as NX10-ACS base card) is the main board of the Neo NX pre-configured or modular command centre. The NX10-ACS base card's mains supply voltage originates from the NX10-ACS-ACB board via an AC Molex connector.

### 4.2.1 Installation

The NX10-ACS base card is mounted to standoffs located on the rear of the command centre backbox.

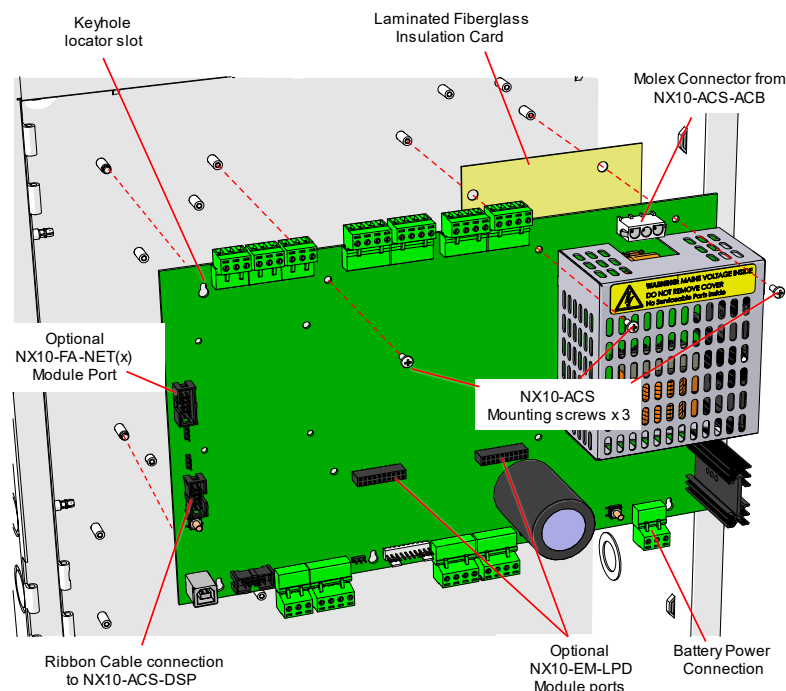


Figure 13 - NX10-ACS Base Card Installation

#### 4.2.1.1 Package Contents

- One (1) NX10-ACS-1L or NX10-ACS-2L
- One (1) NX10-ACS fiberglass laminated insulation card.
- One (1) NX686-300 Quick Start Document.
- One (1) Plastic bag containing:
  - One (1) double ended 3-pin male Molex cable harness.
  - Four (4) UL 10K Class B End of Line resistors
  - Three (3) panhead screws
  - One (1) red (+) and One (1) black (-) battery lead
  - One (1) battery link with 10A, 250V fuse
  - One (1) Spare 2-pin little jumper

#### 4.2.1.2 Remove

1. Disconnect all AC and DC power from the system.
2. Disconnect all the field wiring terminal blocks and the 3-pin Molex cable.
3. Disconnect the 10-pin ribbon cable that leads to the NX10-ACS-DSP keyboard display.
4. Remove any NX10-EM-LPD, if fitted to the NX10-ACS card.
5. Remove the three (3) panhead screws that secure the NX10-ACS base card to the backbox.
6. Carefully lift the NX10-ACS base card from the five (5) top-hat stand-offs.

#### 4.2.1.3 Install

1. Place the laminated fiberglass insulation card in position on the backbox (Figure 13).
2. Carefully slide the NX10-ACS base card onto the five (5) top-hat stand-offs.
3. Install the three (3) panhead screws that secure the NX10-ACS base card to the backbox.
4. Connect the 3-pin Molex cable originating from the NX10-ACS-ACB board and any field wiring terminal blocks.
5. Connect the 10-pin ribbon cable that leads from the NX10-ACS-DSP keyboard display.
6. Fill out the enclosure's UL label.

## 4.2.2 Wiring

### 4.2.2.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB1	ANC PSU Fault B ANC PSU Fault A	Supervised normally closed relay contact input. Normally used for NX10-EM-PSU power supply expansion module but can monitor any normally closed contact. Shipped with 0 Ohm EOL (end-of-line) resistor. Any ancillary contact monitored must be located within 20 feet of the NX10-ACS base card in rigid conduit.
	ANC PSU 0V ANC PSU V+	Used for the input of 27.4 VDC from the NX10-EM-PSU power supply expansion module. (No Connection on NX10-ACS-1L)
TB2	BAT – BAT +	Negative power connection of battery Positive power connection of battery
TB3	NAC-1 B+ NAC-1 B- NAC-1 A+ NAC-1 A-	Notification appliance circuit 1, Class B positive Notification appliance circuit 1, Class B negative Notification appliance circuit 1, Class A positive, Return Notification appliance circuit 1, Class A negative, Return
TB4	NAC-2 B+ NAC-2 B- NAC-2 A+ NAC-2 A-	Notification appliance circuit 2, Class B positive Notification appliance circuit 2, Class B negative Notification appliance circuit 2, Class A positive, Return Notification appliance circuit 2, Class A negative, Return
TB5 Fail-Safe Trouble Relay (default)	RELAY 2 NC RELAY 2 NO RELAY 2 COM	NC (open contact as relay is inverted on power up) NO (closed contact as relay is inverted on power up) COM (relay contact common)
TB6 Supervisory Relay (default)	RELAY 3 NC RELAY 3 NO RELAY 3 COM	NC (closed contact) NO (open contact) COM (relay contact common)
TB7 Alarm Relay (default)	RELAY 1 NC RELAY 1 NO RELAY 1 COM	NC (closed contact) NO (open contact) COM (relay contact common)
TB8	AUX-1 0V AUX-1 V+ AUX-2 0V AUX-2 V+	Resettable 24 VDC Auxiliary Power, 0V (negative) Resettable 24 VDC Auxiliary Power, V+ (positive) Non-Resettable 24 VDC Auxiliary Power, 0V (negative) Non-Resettable 24 VDC Auxiliary Power, V+ (positive)
TB9	RS-232 Ground RS-232 Receive RS-232 Transmit	DB9 Printer Cable Interface:
TB10	PBUS B PBUS A PBUS B PBUS A	PBUS B = COMM B Output PBUS A = COMM A Output PBUS B = COMM B Output PBUS A = COMM A Output
TB11	LOOP-1 OUT+ LOOP-1 OUT- LOOP-1 IN+ LOOP-1 IN-	LOOP-1 OUT+ = Class B positive output LOOP-1 OUT- = Class B negative output LOOP-1 IN+ = Class A positive Return LOOP-1 IN- = Class A negative Return
TB12 (NX10-ACS-2L)	LOOP-2 OUT+ LOOP-2 OUT- LOOP-2 IN+ LOOP-2 IN-	LOOP-2 OUT+ = Class B positive output LOOP-2 OUT- = Class B negative output LOOP-2 IN+ = Class A positive Return LOOP-2 IN- = Class A negative Return
J1	LOCK MEM	Upload/download lock, position one locked, position two unlocked
J2	MASTER UC PROGRAM	Position one PROG firmware, position two panel RUN

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
PL1	Molex Connector	AC Mains Molex connector, prewired to NX10-ACS-ACB board
PL2	DISPLAY	10-Pin Serial Port for NX10-ACS-DSP Keyboard Display Module
PL3	NETWORK	10-Pin Serial Port for optional NX10-FANET4 or NX10-FANET7 Network Module
PL4	O/C OUTPUTS	10-Pin Output Open Collector for optional NX10-EM-RL10 10 Eight Point Relay Module
PL5	USB	USB Port for Uploading/Downloading Shield, Dynamix Tools, Neo NX Config Tool and for Downloading to the Shield, Dynamix Tools, Neo NX Service Tool.



*RS232 wiring must be located within 20 feet of the NX10-ACS base card within the same room wired in rigid conduit.*

#### 4.2.2.2 Electrical Specifications

<b>NX10-ACS Base Card</b>	5A Power (Section 4.2.4.2.)
<b>Battery Circuit Supervision</b>	Non-Power-Limited, Supervised for Short Circuit, Open Circuit, Ground Fault, Charger Failure, Battery Disconnection and Battery Cell Failure If the batteries are disconnected the charger output is turned off.
<b>Battery Charging Current</b>	2.3 Amp, Temperature Compensated
<b>Nominal Charging Voltage</b>	27.4 VDC
<b>Battery Type</b>	Sealed Lead-Acid
<b>Minimum Battery Capacity</b>	7Ah
<b>Maximum Battery Capacity</b>	75Ah
<b>Battery Deep Discharge Protection</b>	Battery Disconnection < 19 VDC Nominal
<b>Battery Link Wire Fuse</b>	10A, 250 VAC Ceramic, Time Delay (size 5x10mm) Shield Part#: 620-008 Bussmann Part#: S505-10-R Littelfuse Part#: 0215010.XP

#### 4.2.3 LEDs

LED	Function	Description
1	Heartbeat LED – PSU	Normal: Flashes at 1Hz
2	Heartbeat LED – Main Microprocessor	Normal: Flashes at 1Hz
3	Serial Expansion Card	ON = Serial Expansion Card Connected
4	USB	ON = USB Connected
5	PBUS Communications – Transmit	Flashes when data transmitted to PBUS modules
6	PBUS Communications – Receive	Flashes when data received from PBUS modules
7	Heartbeat LED – SLC #1	Flashes when communicating on the SLC
8	Heartbeat LED – SLC #2 (NX10-ACS-2L)	Flashes when communicating on the SLC
9	Serial Communications – Transmit	Flashes when data transmitted
10	Serial Communications – Receive	Flashes when data received

## 4.2.4 Battery Charger

### 4.2.4.1 Wiring

To wire batteries to the NX10-ACS base card, connect the two (2) supplied battery leads to the BAT+ (red battery lead) and BAT- (black battery lead) terminals of the NX10-ACS base card. Connect the red battery lead (BAT+) to the positive lead of one 12 VDC battery and connect the black battery lead (BAT-) to the negative lead of the second 12 VDC battery. Finally, connect the supplied battery link with 10A, 250V fuse from the negative lead of the first 12 VDC battery to the positive lead of the second 12 VDC battery. If a fully charged set of batteries are connected to the NX10-ACS base card, the panel can be powered without AC by pressing the Start from Battery Button (Figure 14).

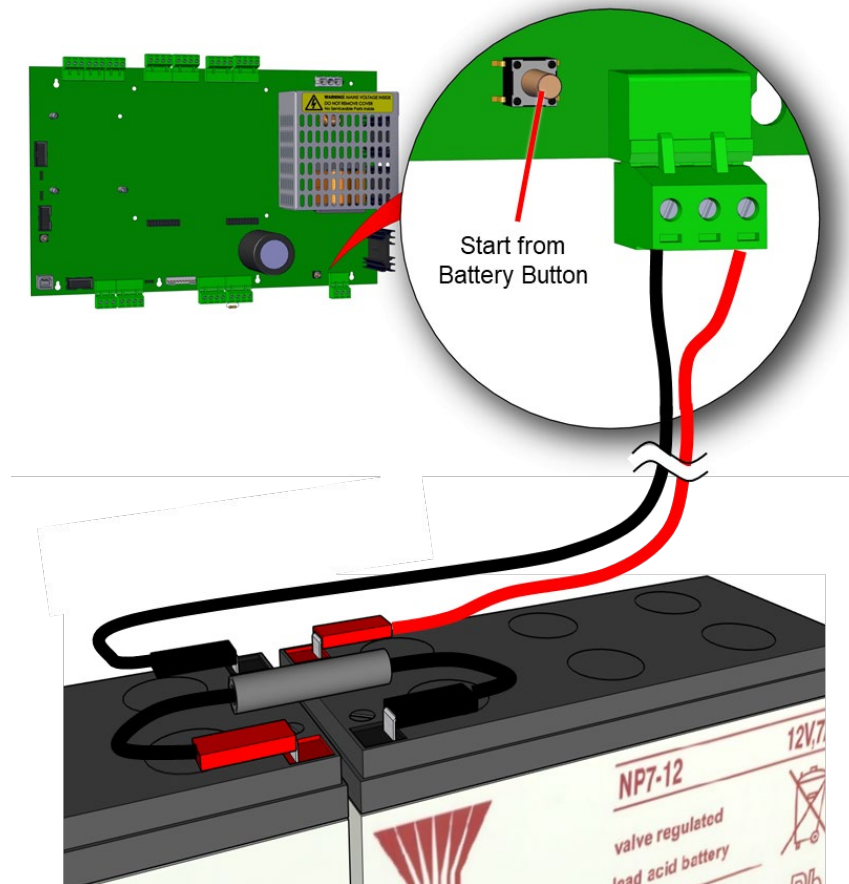


Figure 14 - Battery Connection



#### 4.2.4.2 Standby Battery Calculations

##### 4.2.4.2.1 NX10-FACC-1 One-Loop Command Centre

		Quiescent Load			Alarm Load			
Equipment		I (A)	x	Total	I (A)	x	Total	
NX10-ACS-1L (One-Loop)		0.110	1.0	= 0.110	0.195	1.0	= 0.195	
Sensor / SLC Current <sup>1</sup>	SLC #1		1.25 <sup>2</sup>	=		1.25	=	
NX10-FANET4 or NX10-FANET7 Network Card		0.02 or 0.062	1.0	=	0.02 or 0.062	1.0	=	
NX10-FAN-C (D) – Style 4 or 7		0.078	1 to (x) <sup>3</sup>	=	0.140	1 to (x)	=	
NX10-EM-ASW-16, NX10-EM-ACM-6, NX10-FA-LED16, NX10-FA-LED32R, NX10-FA-LED32Y or NX10-EM-IO48		0.014	1 to 16 <sup>4</sup>	=	0.055	1 to 16	=	
AUX #1 (Resettable) Supply Output <sup>5</sup>			1.0	=		1.0	=	
AUX #2 Supply Output <sup>5</sup>			1.0	=		1.0	=	
NAC Output 1 <sup>6</sup>						1.0	=	
NAC Output 2 <sup>6</sup>						1.0	=	
Total		ΣQuiescent Load		=	ΣAlarm Load		=	
		x 24 hr. or 60 hr.		Ah	x 0.0833 <sup>7</sup> hr.		Ah	
		Total Quiescent Current		Ah	Total Alarm Current		Ah	
		Total Load (Quiescent + Alarm)						Ah
		Total Load x 1.25 (battery de-rating factor)						Ah

<sup>1</sup> Maximum 0.5A load per SLC. Refer to the technical information for each device to calculate the load on the loop for both the quiescent condition and fire alarm condition for all loop devices. By default, a maximum of 5 detector LED indicators will be turned on in an alarm condition. (This number can be changed via the Shield, Dynamix Tools, Neo NX Config Tool).

<sup>2</sup> The calculated loop loading must be multiplied by a factor of 1.25 to account for the efficiency of the SLC loop DC/DC converters which maintain a constant voltage output on the SLC loops even when the system is on battery backup.

<sup>3</sup> The NX10-FAN is a networked remote annunciator, the number of annunciators is based on network nodes and power available.

<sup>4</sup> 16 switch LED modules can be installed on an NX10-FACP system.

<sup>5</sup> Maximum 0.5A load per AUX. Calculate the required load for each auxiliary output in both the quiescent and alarm conditions. Refer to the technical information for each device that is to be powered from the panel AUX Output to determine the overall AUX loading currents. The sum of all these additional currents should be entered in these fields.

<sup>6</sup> Maximum 2.0A load per notification appliance circuit.

<sup>7</sup> 5 minutes in alarm, change to .166 for 10 minutes in alarm.

#### 4.2.4.2.2 NX10-FACC-2 Two-Loop Command Centre

		Quiescent Load			Alarm Load			
Equipment		I (A)	x	Total	I (A)	x	Total	
NX10-ACS-2L (Two-Loop)		0.110	1.0	= 0.110	0.195	1.0	= 0.195	
Sensor / SLC Current <sup>8</sup>	SLC #1		1.25 <sup>9</sup>	=		1.25	=	
	SLC #2		1.25 <sup>9</sup>	=		1.25	=	
NX10-FANET4 or NX10-FANET7 Network Card		0.02 or 0.062	1.0	=	0.02 or 0.062	1.0	=	
NX10-FAN-C (D) – Style 4 or 7		0.078	1 to (x) <sup>10</sup>	=	0.140	1 to (x)	=	
NX10-EM-ASW-16, NX10-EM-ACM-6, NX10-FA-LED16, NX10-FA-LED32R, NX10-FA-LED32Y or NX10-EM-IO48		0.014	1 to 16 <sup>11</sup>	=	0.055	1 to 16	=	
AUX #1 (Resettable) Supply Output <sup>12</sup>			1.0	=		1.0	=	
AUX #2 Supply Output <sup>12</sup>			1.0	=		1.0	=	
NAC Output 1 <sup>13</sup>						1.0	=	
NAC Output 2 <sup>13</sup>						1.0	=	
Total		ΣQuiescent Load		=	ΣAlarm Load		=	
		x 24 hr. or 60 hr.		Ah	x 0.0833 <sup>14</sup> hr.		Ah	
		Total Quiescent Current		Ah	Total Alarm Current		Ah	
		Total Load (Quiescent + Alarm)						Ah
		Total Load x 1.25 (battery de-rating factor)						Ah

<sup>8</sup> Maximum 0.5A load per SLC. Refer to the technical information for each device to calculate the load on the loop for both the quiescent condition and fire alarm condition for all loop devices. By default, a maximum of 5 detector LED indicators will be turned on in an alarm condition. (This number can be changed via the Shield, Dynamix Tools, Neo NX Config Tool).

<sup>9</sup> The calculated loop loading must be multiplied by a factor of 1.25 to account for the efficiency of the SLC loop DC/DC converters which maintain a constant voltage output on the SLC loops even when the system is on battery backup.

<sup>10</sup> The NX10-FAN is a networked remote annunciator, number of annunciators is based on network nodes and power available.

<sup>11</sup> 16 switch LED modules can be installed on an NX10-FACP system.

<sup>12</sup> Maximum 0.5A load per AUX. Calculate the required load for each auxiliary output in both the quiescent and alarm conditions. Refer to the technical information for each device that is to be powered from the panel AUX Output to determine the overall AUX loading currents. The sum of all these additional currents should be entered in these fields.

<sup>13</sup> Maximum 2.0A load per notification appliance circuit.

<sup>14</sup> 5 minutes in alarm, change to .166 for 10 minutes in alarm.

#### 4.2.4.2.3 NX10-FACC-4 with NX10-EM-LPD 4 Four-Loop Command Centre

		Quiescent Load			Alarm Load			
Equipment		I (A)	x	Total	I (A)	x	Total	
NX10-ACS-2L (Two-Loop)		0.110	1.0	= 0.110	0.195	1.0	= 0.195	
Sensor / SLC Current <sup>15</sup>	SLC #1		1.25 <sup>16</sup>	=		1.25	=	
	SLC #2		1.25 <sup>16</sup>	=		1.25	=	
	SLC #3		1.25 <sup>16</sup>	=		1.25	=	
	SLC #4		1.25 <sup>16</sup>	=		1.25	=	
NX10-FANET4 or NX10-FANET7 Network Card		0.02 or 0.062	1.0	=	0.02 or 0.062	1.0	=	
NX10-FAN-C (D) – Style 4 or 7		0.078	1 to (x) <sup>17</sup>	=	0.140	1 to (x)	=	
NX10-EM-ASW-16, NX10-EM-ACM-6, NX10-FA-LED16, NX10-FA-LED32R, NX10-FA-LED32Y or NX10-EM-IO48		0.014	1 to 16 <sup>18</sup>	=	0.055	1 to 16	=	
							=	
AUX #1 (Resettable) Supply Output <sup>19</sup>			1.0	=		1.0	=	
AUX #2 Supply Output <sup>19</sup>			1.0	=		1.0	=	
NAC Output 1 <sup>20</sup>						1.0	=	
NAC Output 2 <sup>20</sup>								
NAC Output 3 <sup>20</sup>								
NAC Output 4 <sup>20</sup>						1.0	=	
Total		ΣQuiescent Load		=	ΣAlarm Load		=	
		x 24 hr. or 60 hr.		Ah	x 0.0833 <sup>21</sup> hr.		Ah	
		Total Quiescent Current		Ah	Total Alarm Current		Ah	
		Total Load (Quiescent + Alarm)						Ah
		Total Load x 1.25 (battery de-rating factor)						Ah

<sup>15</sup> Maximum 0.5A load per SLC. Refer to the technical information for each device to calculate the load on the loop for both the quiescent condition and fire alarm condition for all loop devices. By default, a maximum of 5 detector LED indicators will be turned on in an alarm condition. (This number can be changed via the Shield, Dynamix Tools, Neo NX Config Tool).

<sup>16</sup> The calculated loop loading must be multiplied by a factor of 1.25 to account for the efficiency of the SLC loop DC/DC converters which maintain a constant voltage output on the SLC loops even when the system is on battery backup.

<sup>17</sup> The NX10-FAN is a networked remote annunciator, number of annunciators is based on network nodes and power available.

<sup>18</sup> 16 switch LED modules can be installed on an NX10-FACP system.

<sup>19</sup> Maximum 0.5A load per AUX. Calculate the required load for each auxiliary output in both the quiescent and alarm conditions. Refer to the technical information for each device that is to be powered from the panel AUX Output to determine the overall AUX loading currents. The sum of all these additional currents should be entered in these fields.

<sup>20</sup> Maximum 2.0A load per notification appliance circuit.

<sup>21</sup> 5 minutes in alarm, change to .166 for 10 minutes in alarm.

### 4.2.5 Signalling Line Circuit (SLC)

The NX10-ACS-1L base card provides one Class X, A or B signalling line circuit. The NX10-ACS-2L base card provides two Class X, A or B signalling line circuits.



*Class X wiring requires the use of Shield devices with built-in isolators.*

#### 4.2.5.1 Wiring

To wire the signalling line circuit Class B, wire the NX10-ACS base card Loop OUT + and OUT - to the positive and negative inputs of the field analog/addressable devices. In addition, wire (jumper) the Loop OUT + and OUT - terminals to the Loop IN + and IN - terminals, as shown in (Figure 15). This wiring (jumper arrangement) of the OUT and IN terminals is to maintain signalling line circuit voltage monitoring of the SLC circuit.



*For multiple wires to be used during Class B wiring under the Loop OUT + and OUT - terminals use Shield twin cable ferrules 18AWG to 12AWG, manufactured by Weidmuller.*

To wire the signalling line circuit Class A, wire the NX10-ACS base card Loop OUT + and OUT - to the positive and negative inputs of the field analog/addressable devices, at the last wired analog/addressable device wire the positive and negative outputs to the Loop IN + and IN - terminals of the NX10-ACS base card.

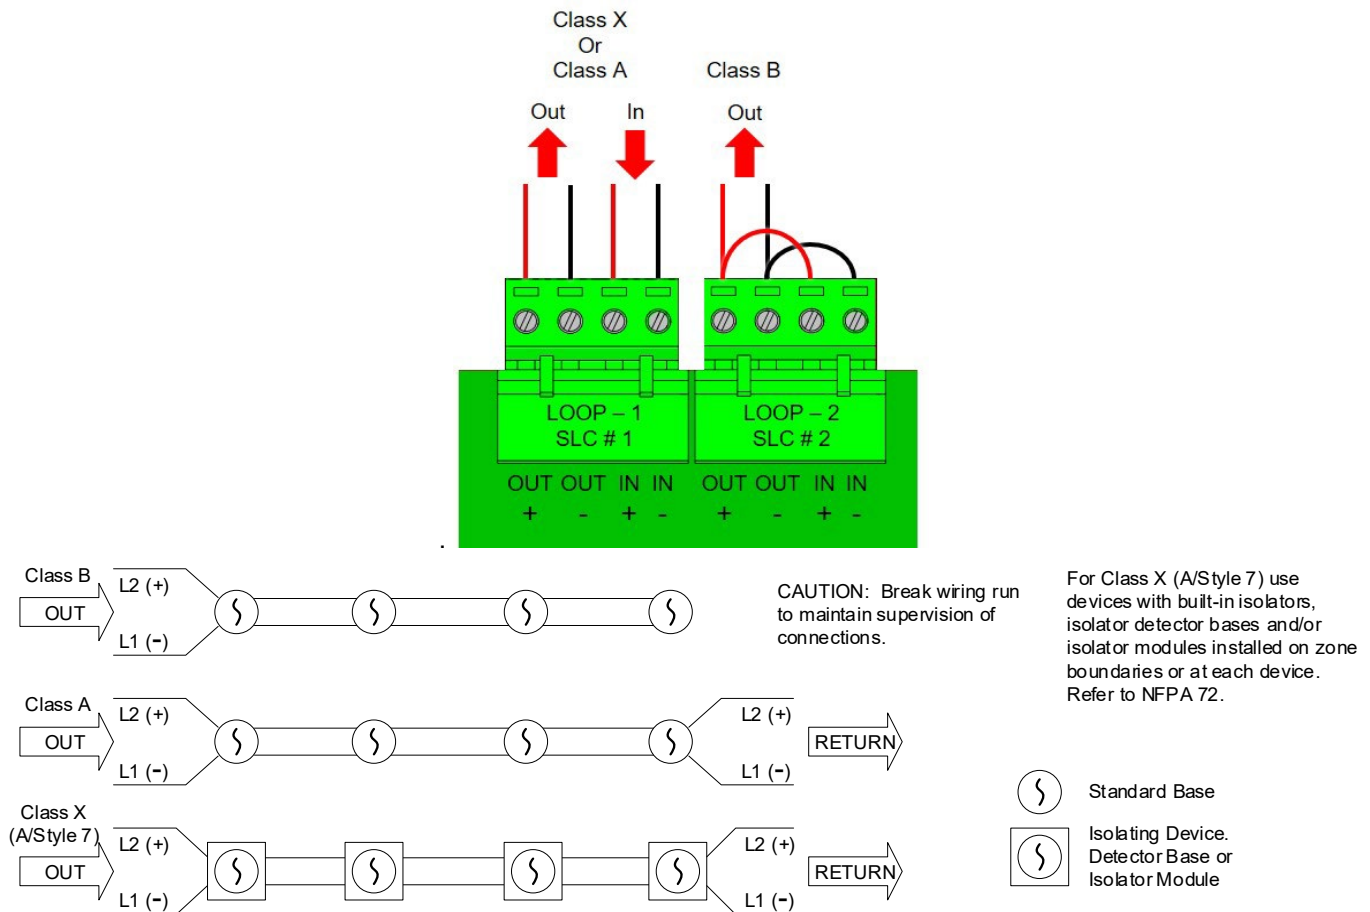


Figure 15 - Base Card SLC Circuit Wiring



During normal operation, the NX10-ACS base card will drive the SLC from the OUT connections, if a short circuit or open circuit condition is detected it will drive the SLC from both OUT and IN (RETURN) sides. While in panel programming, the NX10-ACS base card will drive the SLC from the OUT connections only to enable easier SLC wiring trouble diagnosis.

#### 4.2.5.1.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB11	LOOP-1 OUT+ LOOP-1 OUT- LOOP-1 IN+ LOOP-1 IN-	LOOP-1 OUT+ = Class B positive output LOOP-1 OUT- = Class B negative output LOOP-1 IN+ = Class A positive Return LOOP-1 IN- = Class A negative Return
TB12 (NX10-ACS-2L)	LOOP-2 OUT+ LOOP-2 OUT- LOOP-2 IN+ LOOP-2 IN-	LOOP-2 OUT+ = Class B positive output LOOP-2 OUT- = Class B negative output LOOP-2 IN+ = Class A positive Return LOOP-2 IN- = Class A negative Return

#### 4.2.5.1.2 Electrical Specifications

Supervision	Supervised for Short Circuit, Open Circuit and Ground Fault POWER-LIMITED
Max. Voltage, Rated Current and Frequency	24 VDC, Filtered Regulated 0.5 Amp Total Output Load must not exceed panel supply rating, maximum 5A (8A if NX10-EM-PSU installed).
Minimum Return Voltage	17 VDC
Max. Line Impedance	Below
Analog/Addressable Device Compatibility	Refer to Section 1.2.2 SLC Devices
Wiring Classification	Class A, Class X or Class B
Impedance values for testing at which ground faults are annunciated	0 Ohms

#### Signalling Line Circuit (SLC) Line Impedance

Maximum circuit impedance depends on the SLC loop load current. The voltage-drop (load current x cable resistance) over the cable always needs to be considered to make sure the devices are receiving an adequate supply voltage (table below):

Maximum Circuit Impedance	72Ω
Insulation Resistance (Core-Core and Core-Screen)	2M Ω
Maximum Circuit Impedance is the sum of the resistance of both cable conductors.	

Circuit Loading	Max. Circuit Impedance
100mA	55.0Ω
200mA	27.5Ω
300mA	18.3Ω
400mA	13.7Ω
500mA	11.0Ω

## 4.2.6 Notification Appliance Circuit (NAC)

The NX10-ACS-1L and the NX10-ACS-2L base card provides two Class A or B notification appliance circuits. Each notification appliance circuit can be programmed for synchronized or non-synchronized strobes/signal patterns. Protocols include Gentex, Wheelock and System Sensor. In addition to the synchronization programming, silence able or non-silence able strobe programming is available.



*For a list of notification appliance compatibilities refer to Shield Device Compatibility Document NX686-081.*

The default operation of each notification appliance circuit is non-synchronized, turn ON steady for any alarm condition and turn off when silenced or reset. If non-silence able synchronization strobes are programmed, strobes will continue to flash after signal silence. In addition, each notification appliance circuit is capable of being programmed for Positive Alarm Sequence (P.A.S.) signalling.


### 4.2.6.1 Wiring

To wire the notification appliance circuits Class B, wire B+ and B- to the positive and negative inputs of the notification appliance devices, B+ to positive and B- to negative. Terminate the supplied UL Listed 10K end-of-line (EOL) resistor at the last notification appliance.

To wire the notification appliance circuits Class A, wire B+ and B- to the positive and negative inputs of the notification appliance devices, B+ to positive and B- to negative. At the last notification appliance, return the B+ wire to A+ and the B- wire to A- on the notification appliance circuit terminals.



*Notification appliance circuit polarity markings represent alarm (active) condition.*

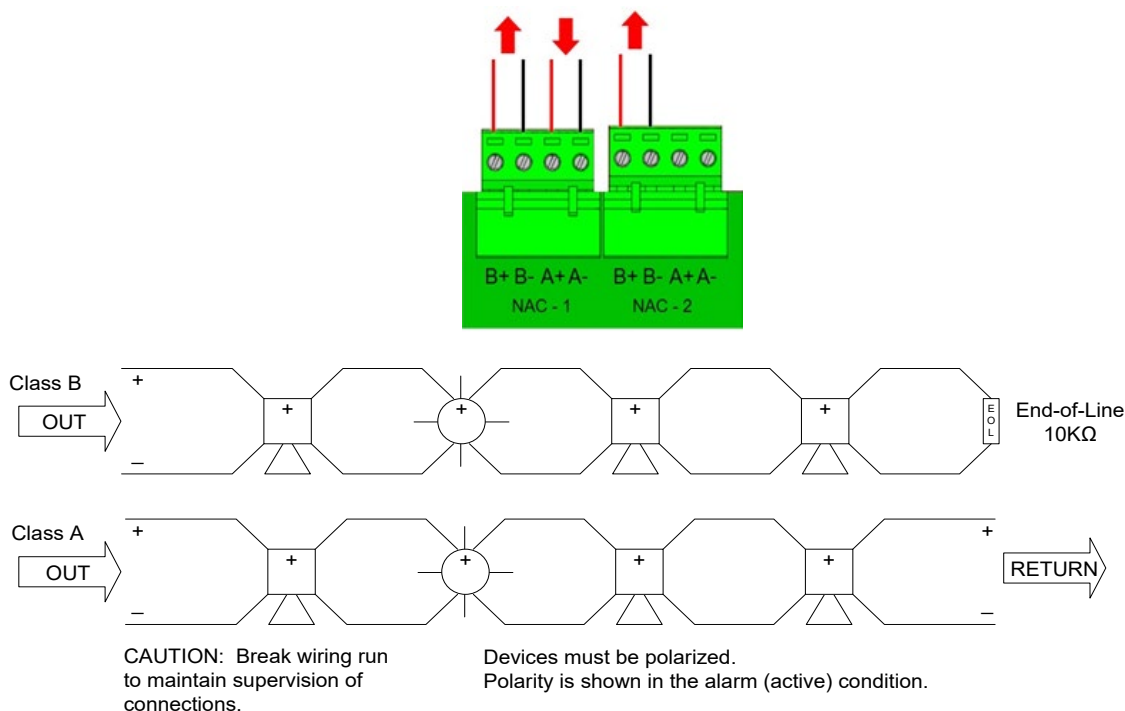

*Figure 16 - Base Card NAC Circuit Wiring*

#### 4.2.6.1.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB3	NAC-1 B+ NAC-1 B- NAC-1 A+ NAC-1 A-	Notification appliance circuit 1, Class B positive Notification appliance circuit 1, Class B negative Notification appliance circuit 1, Class A positive, Return Notification appliance circuit 1, Class A negative, Return
TB4	NAC-2 B+ NAC-2 B- NAC-2 A+ NAC-2 A-	Notification appliance circuit 2, Class B positive Notification appliance circuit 2, Class B negative Notification appliance circuit 2, Class A positive, Return Notification appliance circuit 2, Class A negative, Return

#### 4.2.6.1.2 Electrical Specifications

Supervision	Supervised for Short Circuit, Open Circuit and Ground Fault POWER-LIMITED
Max. Current, Rated Voltage and Frequency	2 Amps @ 24 VDC, Filtered and Regulated Power, per NAC circuit, not to exceed 7 Amps across all four NAC circuits when the Shield NX10-EM-PSU Expansion Power Supply Module is installed
Max. Line Impedance	1.5Ω
Rating Designation	Filtered, Regulated 24 VDC
Max. RMS Voltage Range Limits for Non-Synchronized Appliance (non-pulsing load)	16 – 33 VDC
Synchronized NAC Appliance (Repetitive pulsing load)	Magnitude Impedance load equal to 5 times the maximum circuit rating for a duration of 16.7ms @ a frequency of 2 Hz, rated RMS value (16 – 33) during individual application of surge impedance. For a list of synchronized notification appliance compatibilities, refer to Shield Device Compatibility Document NX686-081
Wiring Classification	Class A or Class B
Impedance values for testing at which ground faults are annunciated	0 Ohms
Class B EOL (end-of-line) Resistor	10K, (supplied with the NX10-ACS base card)

#### Notification Appliance Circuit Voltage Drop

The voltage drop on notification appliance circuits should be calculated to make sure that the minimum voltage at the end of the circuit does not exceed the minimum required by each notification appliance at the minimum alarm circuit output voltage.

The voltage at the end of the circuit is given by:

Minimum Alarm Voltage =  $V_{OUT(MIN)} - (I_{ALARM} \times R_{CABLE})$

Minimum Output Voltage ( $V_{OUT(MIN)}$ ) is  $V_{BAT(MIN)} - 0.5V = 20.5V$

Alarm Current ( $I_{ALARM}$ ) is the sum of the loads presented by the notification appliances in alarm.

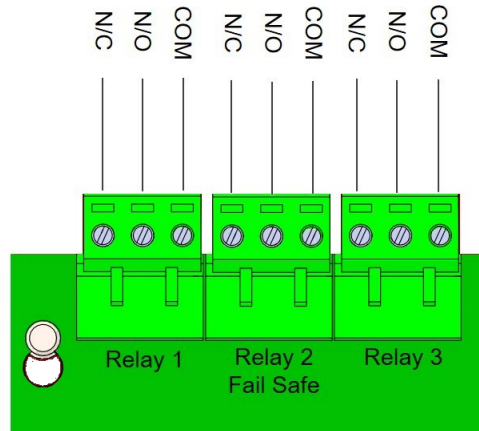
Cable Resistance ( $R_{CABLE}$ ) is the sum of the cable resistance in both wires x cable length.

Typical wire size	Resistance ( $R_{CABLE}$ ):	Loop Resistance (2 Wires)
18 AWG solid:	~ 6.5 Ohms/1000ft	13 Ohms /1000ft
16 AWG solid	~ 4.1 Ohms/1000ft	8.2 Ohms /1000ft
14 AWG solid	~ 2.6 Ohms/1000ft	5.2 Ohms /1000ft
12 AWG solid	~ 1.8 Ohms/1000ft	3.6 Ohms / 1000ft

## 4.2.7 Relay Contacts

The NX10-ACS base card includes three programmable Form C relay contacts, defaulted Alarm, Trouble (fail-safe configured) and Supervisory.

### 4.2.7.1 Wiring



#### 4.2.7.1.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB5 Fail-Safe Trouble Relay (default)	RELAY 2 NC RELAY 2 NO RELAY 2 COM	NC (open contact as relay is inverted on power up) NO (closed contact as relay is inverted on power up) COM (relay contact common)
TB6 Supervisory Relay (default)	RELAY 3 NC RELAY 3 NO RELAY 3 COM	NC (closed contact) NO (open contact) COM (relay contact common)
TB7 Alarm Relay (default)	RELAY 1 NC RELAY 1 NO RELAY 1 COM	NC (closed contact) NO (open contact) COM (relay contact common)

#### 4.2.7.1.2 Electrical Specifications

Wiring	POWER-LIMITED
Designation	Programmable (Defaulted Common Alarm, Trouble and Supervisory)
Voltage, Current Frequency Power Factor	30 VDC/VAC 1 Amp PF=1 (resistive)

## 4.2.8 Peripheral Bus (PBUS) Communication Circuit

The peripheral bus (PBUS, RS-485) communication circuit of the NX10-ACS base card is for the connection of optional peripheral bus modules available for the pre-configured and modular command centre.

Peripheral bus modules include:

- NX10-EM-ASW-16 Switch/LED Module
- NX10-FA-LED16 16 Red/Yellow LED Module
- NX10-FA-LED32R 32 Red LED Module
- NX10-FA-LED32Y 32 Yellow LED Module
- NX10-EM-IO48 Switch LED Driver Module
- NX10-EM-ACM-6 Fan/Damper Module,
- NX10-AMP-80 Audio Amplifier Module.



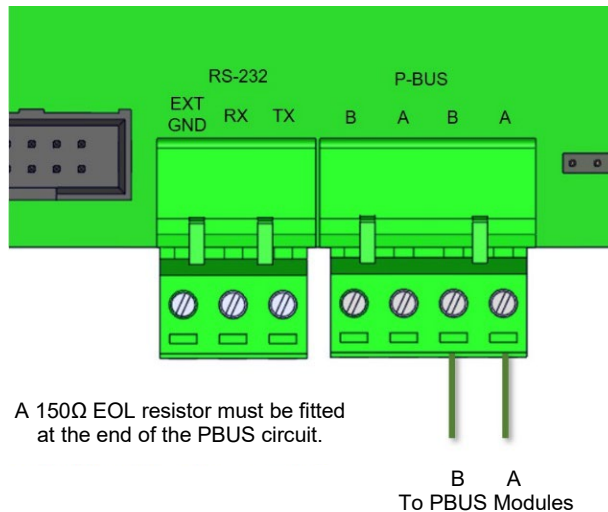


*Peripheral bus (PBUS) modules must be mounted within 20 feet of the NX10-ACS base card in the same room and in rigid conduit.*

*For peripheral bus module installation and wiring, refer to the NX10-AMP-80 Audio Amplifier Module and/or Optional Peripheral Bus (PBUS) Modules sections of this manual.*

#### 4.2.8.1 Wiring

To wire to a peripheral bus module, wire either of the A and B terminals of the NX10-ACS base card to the optional peripheral bus module A and B terminals, A to A and B to B. At the last peripheral bus module terminate the wiring with either a built on-board or supplied 150 Ohm end-of-line (EOL) filtering resistor.



##### 4.2.8.1.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB10	PBUS B PBUS A PBUS B PBUS A	PBUS B = COMM B Output PBUS A = COMM A Output PBUS B = COMM B Output PBUS A = COMM A Output

##### 4.2.8.1.2 Electrical Specifications

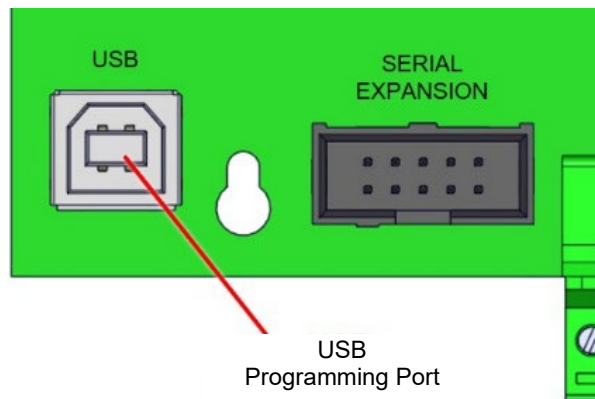
PBUS Circuit Supervision	SUPERVISED, POWER-LIMITED
Communication Method	CCITT RS-485
Max. Line Impedance	50 Ohms
Max. Peripheral Bus Modules	32
Max. Type of Peripheral Bus Module	16
Filtering Resistor End-Of-Line (EOL)	150 Ohm, Built On-Board or Supplied with Peripheral Bus Module



*Peripheral Bus optional modules **MUST** be mounted within 20 feet of the NX10-ACS base card in the same room in rigid conduit, the peripheral bus circuit is not protected for short circuit and ground fault conditions. For multiple wires to be used under the PBUS terminals use Shield twin cable ferrules 18AWG to 12AWG, manufactured by Weidmuller.*

### 4.2.9 USB Port

The NX10-ACS base card provides a USB port for Shield, Dynamix Tools, Neo NX Config Tool upload/download programming and for use with the Shield, Dynamix Tools, Neo NX Service Tool.




### 4.2.10 RS-232 Port

The NX10-ACS base card provides an RS-232 port for programming and connection of ancillary reporting devices (i.e., printer, CRT, etc.)


#### 4.2.10.1 Wiring



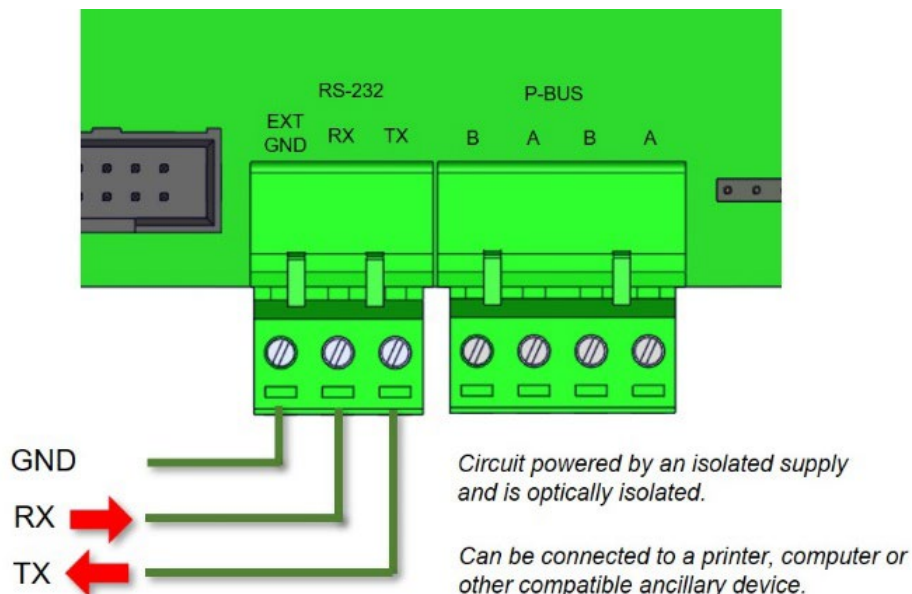*RS232 wiring must be located within 20 feet of the NX10-ACS base card within the same room wired in rigid conduit.*



#### 4.2.10.1.1 Pin-Out

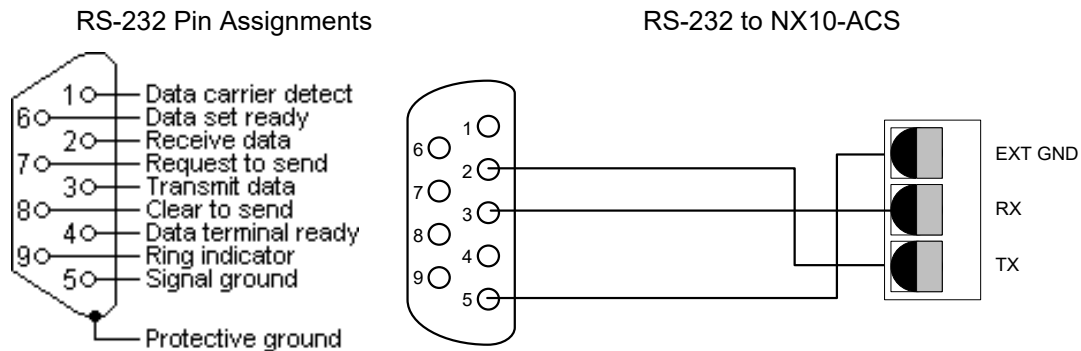

#### 4.2.10.1.2 Electrical Specifications


Supervision	SUPERVISED, POWER-LIMITED
Communication Method	CCITT RS-232
Wire Range	22-12 AWG
Baud Rate:	9600
Parity	None
Date Bits	Eight (8)
Stop Bits	One (1)

#### 4.2.11 Ancillary Contact Monitoring Input

NX10-ACS base card provides an ancillary contact monitoring input which allows the NX10-ACS to monitor any normally closed contact for supervision. If the contact opens a trouble/fault is generated by the NX10-ACS base card. This input is normally used for the Shield NX10-EM-PSU module and in a hardwired audio amplifier installation, for the monitoring of the NX10-EM-PSU6 and NX10-AMP-80 modules.



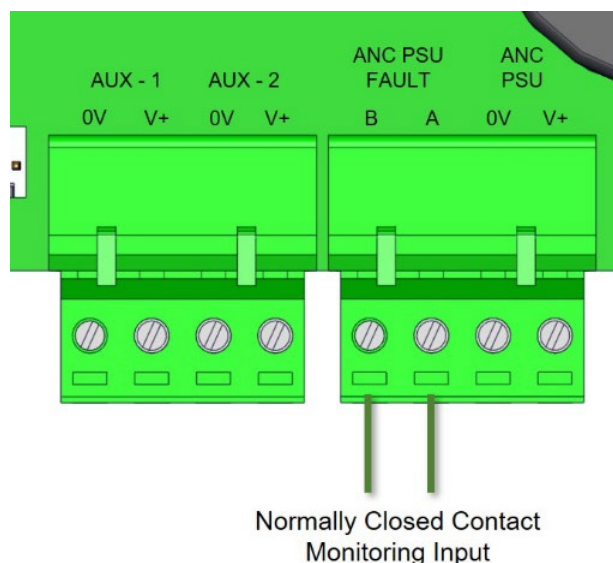*Any ancillary contact monitored must be located within 20 feet of the NX10-ACS base card in the same room and in rigid conduit.*



#### 4.2.12 NX10-ACS-2L Ancillary NX10-EM-PSU DC Input

The NX10-ACS-2L base card provides an ancillary NX10-EM-PSU DC power input which allows an additional 3 Amp, 24 VDC power to be supplied to the NX10-ACS-2L base card. This additional power is specifically for notification appliance circuit and signalling line circuit power requirements when the optional NX10-EM-LPD modules is used.

#### 4.2.13 AUX Power Outputs

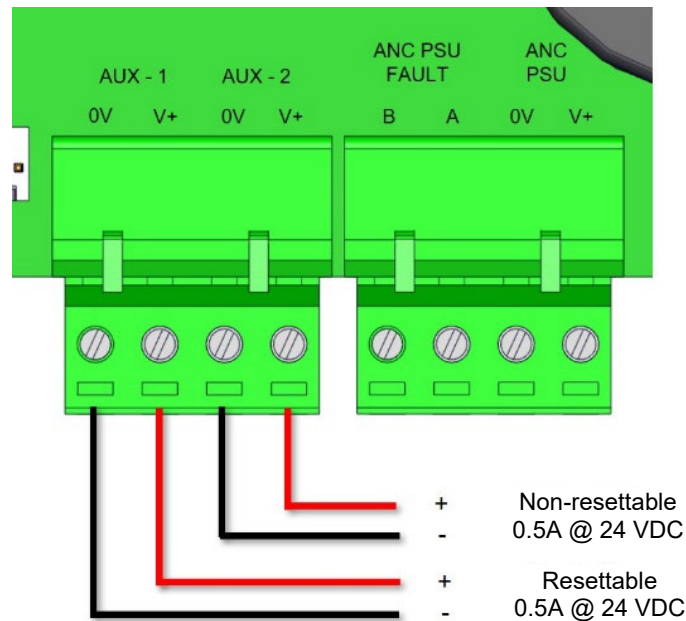
The NX10-ACS base card provides two 24 VDC power outputs, one resettable and one non-resettable.

Circuit Supervision	SUPERVISED, POWER-LIMITED
Voltage -current	24 VDC @ 0.5A <sup>22</sup>
Aux#1	4-wire smoke detector power or similar application. Power turns OFF for 10-15 seconds on reset.
Aux#2	24 VDC (nominal) power output for internal peripheral cards or external equipment.
Wire Range	22-12 AWG



*Use appropriately sized wire for the current load to ensure device compatibility.*

##### 4.2.13.1 Wiring




<sup>22</sup> TOTAL OUTPUT LOAD must not exceed panel supply rating – maximum 5A (8A if NX10-EM-PSU installed).

## 4.2.14 Open Collector Output
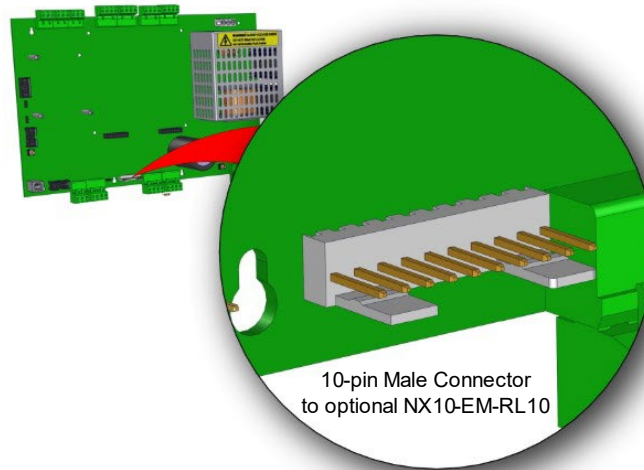
### 4.2.14.1 Wiring

The NX10-ACS base card includes a 10-pin O/C (Open Collector) output keyed header for connection to an optional NX10-EM-RL10 10-Point Relay Module. For information regarding the installation of the optional NX10-EM-RL10 module refer to NX10-EM-RL10 10-Point Relay Module section of this manual.



## 4.3 NX10-EM-LPD Combined SLC/NAC Expansion Module

The NX10-EM-LPD SLC/NAC combined expansion module is a module that provides two additional Class X, A or Class B signalling line circuits (SLC) and Class A or Class B notification appliance circuits (NAC) to the NX10-ACS-2L base card.



*Class X wiring requires the use of Shield devices with built-in isolators.*

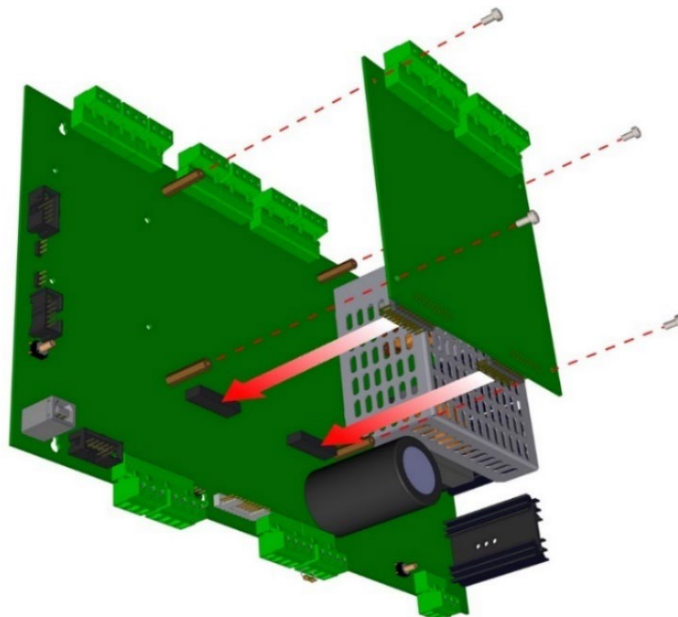


Figure 17 - NX10-EM-LPD Module Installation to an NX10-ACS-2L Base Card

### 4.3.1 Installation



This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.

Failure to tighten the panhead screws will defeat the protection circuitry designed to protect the module from damage due to lightning and static electricity.

#### 4.3.1.1 Package Contents

Carefully unpack the NX10-EM-LPD module, within the box you will find the following items:

- One (1) NX10-EM-LPD Module
- One (1) plastic bag containing:
  - Four (4) metal hexagon spacers
  - Four (4) panhead screws
  - Two (2) UL 10K end-of-line resistors

#### 4.3.1.2 Remove

1. Disconnect AC and DC power.
2. Disconnect the connectors from the SLC/NAC terminal blocks.
3. Remove the four (4) panhead screws securing the module to the NX10-ACS-2L base card (Figure 17).
4. Carefully unplug the NX10-EM-LPD module from the connectors on the base card and remove from the enclosure.

#### 4.3.1.3 Install

1. If not fitted already, insert, and carefully tighten the four (4) metal hexagon spacers to the NX10-ACS base card (Figure 17).
2. Carefully position the module over the spacers while plugging the two 20-pin male connectors into the NX10-ACS-2L base card's two black 20-pin female connectors (PL7 and PL8).
3. With the module correctly plugged into the base card, secure the module with the four (4) supplied panhead screws (Figure 17).

### 4.3.2 Wiring

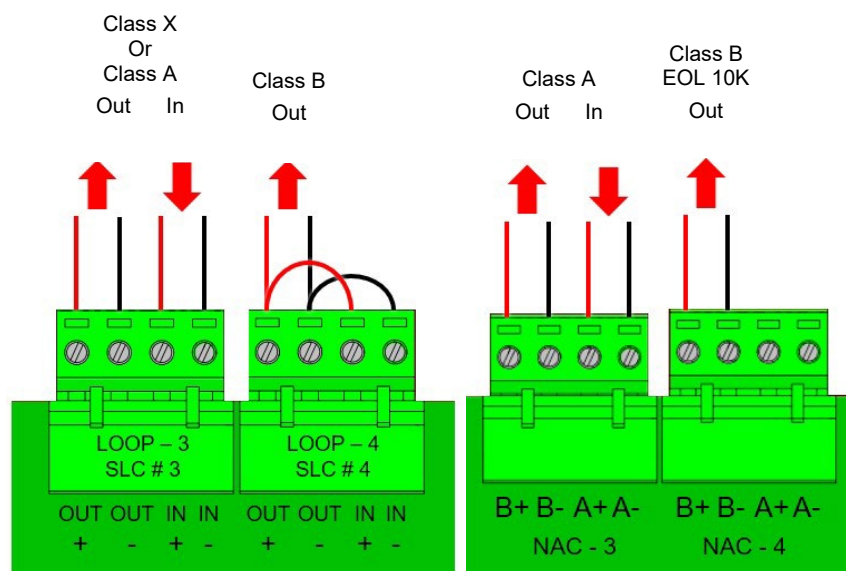


Figure 18 - NX10-EM-LPD SLC and NAC Wiring

#### 4.3.2.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB3	LOOP-3 OUT+ LOOP-3 OUT- LOOP-3 IN+ LOOP-3 IN-	LOOP-3 OUT+ = Class B positive output LOOP-3 OUT- = Class B negative output LOOP-3 IN+ = Class A positive Return LOOP-3 IN- = Class A negative Return
TB4	LOOP-4 OUT+ LOOP-4 OUT- LOOP-4 IN+ LOOP-4 IN-	LOOP-4 OUT+ = Class B positive output LOOP-4 OUT- = Class B negative output LOOP-4 IN+ = Class A positive Return LOOP-4 IN- = Class A negative Return
TB1	NAC-3 B+ NAC-3 B- NAC-3 A+ NAC-3 A-	Notification appliance circuit 3, Class B positive Notification appliance circuit 3, Class B negative Notification appliance circuit 3, Class A positive, Return Notification appliance circuit 3, Class A negative, Return
TB2	NAC-4 B+ NAC-4 B- NAC-4 A+ NAC-4 A-	Notification appliance circuit 4, Class B positive Notification appliance circuit 4, Class B negative Notification appliance circuit 4, Class A positive, Return Notification appliance circuit 4, Class A negative, Return

#### 4.3.2.2 Electrical Specifications

##### 4.3.2.2.1 Signalling Line Circuit (SLC)

Supervision	Supervised for Short Circuit, Open Circuit and Ground Fault POWER-LIMITED
Max. Voltage, Rated Current and Frequency	24 VDC, Filtered Regulated 0.5 Amp Total Output Load must not exceed panel supply rating, maximum 5A (8A if NX10-EM-PSU installed).
Minimum Return Voltage	17 VDC
Max. Line Impedance	See NX10-ACS base card SLC circuits
Analog/Addressable Device Compatibility	Refer to Section 1.2.2 SLC Devices
Wiring Classification	Class A, Class X or Class B
Impedance values for testing at which ground faults are annunciated	0 Ohms

##### 4.3.2.2.2 Notification Appliance Circuit (NAC)

Supervision	Supervised for Short Circuit, Open Circuit and Ground Fault POWER-LIMITED
Max. Current, Rated Voltage and Frequency	2 Amps @ 24 VDC, Filtered and Regulated Power, per NAC circuit, not to exceed 7 Amps across all four NAC circuits (if NX10-EM-PSU installed)
Max. Line Impedance	1.5Ω
Rating Designation	Filtered, Regulated 24 VDC
Max. RMS Voltage Range Limits for Non-Synchronized Appliance (non-pulsing load)	16 – 33 VDC (below)
Synchronized NAC Appliance (Repetitive pulsing load)	Magnitude Impedance load equal to 5 times the maximum circuit rating for a duration of 16.7ms @ a frequency of 2 Hz, rated RMS value (16 – 33) during individual application of surge impedance. For a list of synchronized notification appliance compatibilities, refer to Shield Device Compatibility Document NX686-081
Wiring Classification	Class A or Class B
Impedance values for testing at which ground faults are annunciated	0 Ohms
Class B EOL (end-of-line) Resistor	10K, Part#: 855-027-103 (supplied with the NX10-ACS base card)



### 4.3.2.3 LEDs

LED	Function	Description
1	Heartbeat LED – SLC #3	Flashes when communicating on the SLC
2	Heartbeat LED – SLC #4	Flashes when communicating on the SLC

### 4.3.2.4 Signalling Line Circuit (SLC)

To wire the signalling line circuit Class B, wire the NX10-EM-LPD SLC/NAC combined expansion module Loop OUT + and OUT - to the positive and negative inputs of the field analog/addressable devices. Also, wire (jumper) the Loop OUT + and OUT – terminals to the Loop IN + and IN – terminals, as shown in (Figure 18). This wiring (jumper arrangement) of the OUT and IN terminals is to maintain signalling line circuit voltage monitoring of the SLC circuit.



*For multiple wires to be used during Class B wiring under the Loop OUT + and OUT – terminals use Shield twin cable ferrules 18AWG to 12AWG, manufactured by Weidmuller.*

### 4.3.2.5 Notification Appliance Circuit (NAC)

To wire the notification appliance circuits Class B, wire B+ and B- to the positive and negative inputs of the notification appliance devices, B+ to positive and B- to negative. Terminate the supplied UL Listed 10K end-of-line (EOL) resistor at the last notification appliance. To wire the notification appliance circuits Class A, wire B+ and B- to the positive and negative inputs of the notification appliance devices, B+ to positive and B- to negative. At the last notification appliance, return the B+ wire to A+ and the B- wire to A- on the notification appliance circuit terminals (Figure 18).



*Notification appliance circuit polarity markings represent alarm (active) condition.*



#### 4.4 NX10-EM-PSU Expansion Power Supply

The NX10-EM-PSU expansion power supply module is an optional module that can be added to an NX10-ACS-2L base card to provide 3A of additional power for the Shield optional NX10-EM-LPD SLC/NAC combined expansion module.



*The NX10-ACS-1L base card cannot support the NX10-EM-PSU expansion power supply module.*

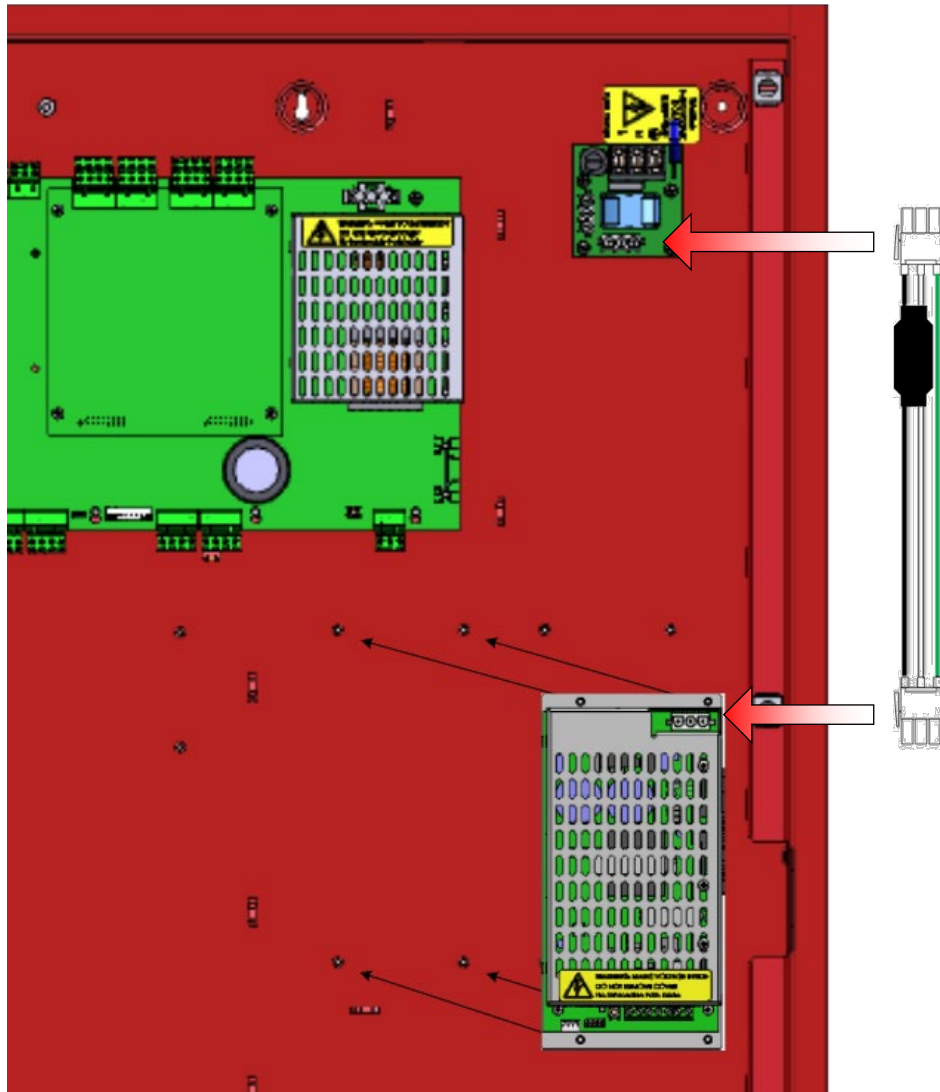


Figure 19 - NX10-EM-PSU Installation

#### 4.4.1 Installation



**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.**

**Failure to tighten the panhead screws will defeat the protection circuitry designed to protect the module from damage due to lightning and static electricity.**

##### 4.4.1.1 Package Contents

Carefully unpack the module from its box, within the box you will find a plastic bag containing the following items:

- One (1) AC Molex cable harness
- One (1) NX10-EM-PSU DC cable harness
- Two (2) cable ties
- Four (4) panhead screws

##### 4.4.1.2 Remove

1. Make sure that the panel has been isolated from the main (AC) and battery (DC) power supplies.
2. Unplug the Molex connector from the NX10-EM-PSU socket (PL1).
3. Disconnect all NX10-EM-PSU terminal block wiring.
4. Remove the four (4) panhead screws that secure the NX10-EM-PSU to the backbox and carefully remove the NX10-EM-PSU module (Figure 19).

##### 4.4.1.3 Install

1. Mount the NX10-EM-PSU module to the enclosure's installed blind threads, located on the right-side of the command centre backbox below the NX10-ACS-2L base card, using the four (4) screws supplied with the module (Figure 19)
2. With the NX10-EM-PSU module installed, plug the heat shrink wrapped, ferrite core end of the provided AC Molex cable harness into the NX10-ACS-ACB board, male Molex connector (PL1).
3. Plug the other end of the Molex cable harness into the NX10-EM-PSU Molex connector (PL1). It is recommended to use the supplied cable ties to secure the AC Molex cable harness to the enclosure's backbox.



Figure 20 - AC Molex Cable Harness

#### 4.4.2 Wiring

To interface the additional power to the NX10-ACS-2L two-loop base card, connect the four (4) flying leads of the supplied NX10-EM-PSU DC cable harness to the proper terminals of the NX10-EM-PSU module (green lead to common (C), second green lead to normally open (NO), black lead to negative (-) and red lead to positive (+) [Figure 21].

After the leads are wired to the correct NX10-EM-PSU module terminals, remove the four-position terminal block of the NX10-ACS-2L two-loop base card, located at the ANC PSU FAULT and ANC PSU terminals (Figure 21). With the four-position terminal block removed, plug the four-position terminal block installed on the NX10-EM-PSU DC cable harness into the removed four-position terminal block location.



*The power from the NX10-EM-PSU expansion power supply module is not power limited and must run as shown in Figure 21. Power limited wiring must maintain a .25" spacing from these wires.*



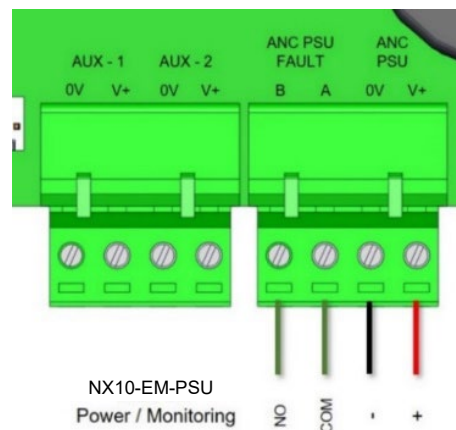


Figure 21 - NX10-EM-PSU Wiring

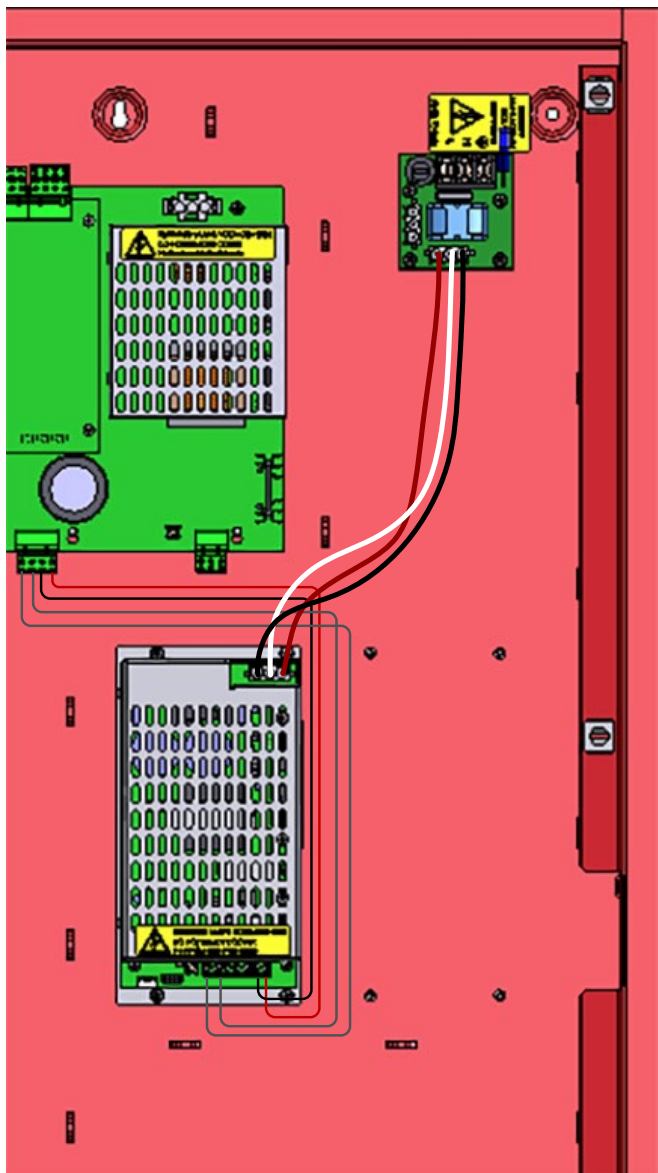

The NX10-EM-PSU is used as an expansion power supply for the Neo NX fire alarm control panel, make sure that the jumper J1 located on the NX10-EM-PSU is configured for PSU ONLY mode or the NX10-EM-PSU module will report a trouble condition.

#### 4.4.2.1 Terminal Summary

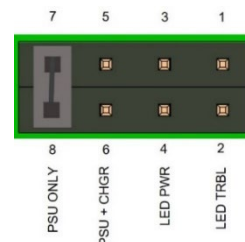

If multiple wires are required under any of the terminals, use Weidmuller twin cable ferrules.

Keep a minimum of 1/4" (6.4 mm) separation between all power-limited and non-power-limited conductors. AC and battery wiring are non-power limited.

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
PL1	N/A	Supervised Molex Connector for NX10-ACS-ACB AC Harness Earth Ground AC Power Neutral AC Power Load (Hot)
TB2 (fail-safe relay)	COM N-O N-C	Relay Common Relay Normally Open Relay Normally Closed
TB1	0V +VO +BAT -BAT	Negative 24 VDC Positive 24 VDC Unused Unused

#### 4.4.2.2 Electrical Specifications

Mains Input	Supervised
Nominal Voltage Frequency	120V (1.7A), 240V (0.61A) 50/60Hz
24 VDC Power	Supervised, Filtered and Regulated POWER-LIMITED
Max. Current	3A

#### 4.4.2.3 LEDs

Designation	Colour	Description
HEARTBEAT	Green	Heartbeat
MAINS FLT.	Yellow	Mains Fault

## 4.5 NX10-EM-PSU6 Power Supply Charger Module

The NX10-EM-PSU6 power supply charger module is a 24 VDC @ 5A filter, regulated power supply and battery charger capable of meeting various installation power requirements including powering the Shield NX10-AMP-80 audio amplifier module. The NX10-CC01-BB (3x3) backbox can support two NX10-EM-PSU6 modules, while the NX10-CC02-BB (3x5) backbox can support three (Figure 22). Each pre-configured command centre includes one NX10-EM-PSU6 power supply charger module.

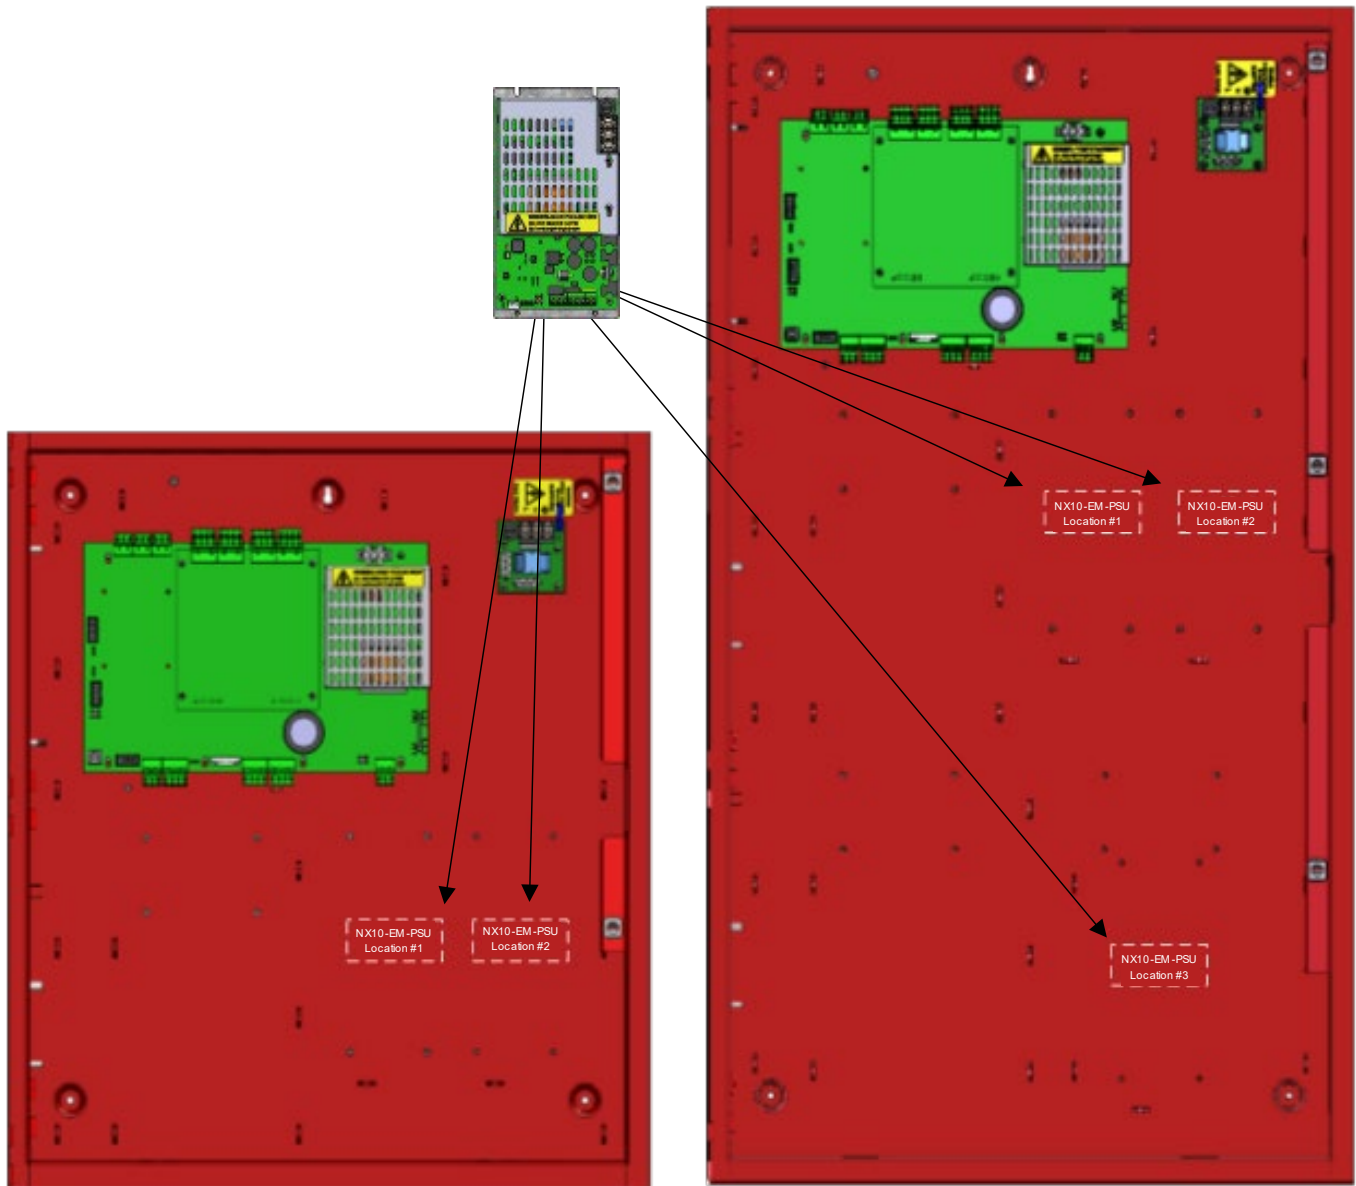


Figure 22 - NX10-EM-PSU6 Mounting Locations

### 4.5.1 Installation



**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.**

**Failure to tighten the panhead screws will defeat the protection circuitry designed to protect the module from damage due to lightning and static electricity.**

#### 4.5.1.1 Package Contents

- One (1) NX10-EM-PSU6 Module
- One (1) plastic bag containing:
  - One (1) AC Molex cable harness with flying leads
  - One (1) AC Mains Isolate Label
  - Two (2) cable ties
  - Four (4) panhead screws
  - One (1) red (+) and One (1) black (-) battery lead
  - One (1) battery link with 10A, 250V fuse
  - One (1) spare 5A, 250V AC fuse

#### 4.5.1.2 Remove

1. Disconnect AC and DC power.
2. Remove the AC cable wiring from TB3.
3. Disconnect the NX10-EM-PSU6 output wires.
4. Remove the four (4) panhead screws that secure the NX10-EM-PSU6 to the backbox.
5. Carefully remove the NX10-EM-PSU6 from the backbox.

#### 4.5.1.3 Install

1. Determine the mounting location within the backbox (Figure 22).
2. Loosely install two (2) of the supplied panhead screws into the top mounting holes of the determined mounting location.
3. Carefully slid the NX10-EM-PSU6 module's top keyed mounting tabs under the two (2) previously installed panhead screws and tighten the screws.
4. Insert and tighten the remaining two (2) panhead screws at the bottom of the NX10-EM-PSU6 module.
5. Attach the Isolate Elsewhere label, make sure that the L, N and GND symbols align with the terminals of TB3.



4.5.2 Wiring

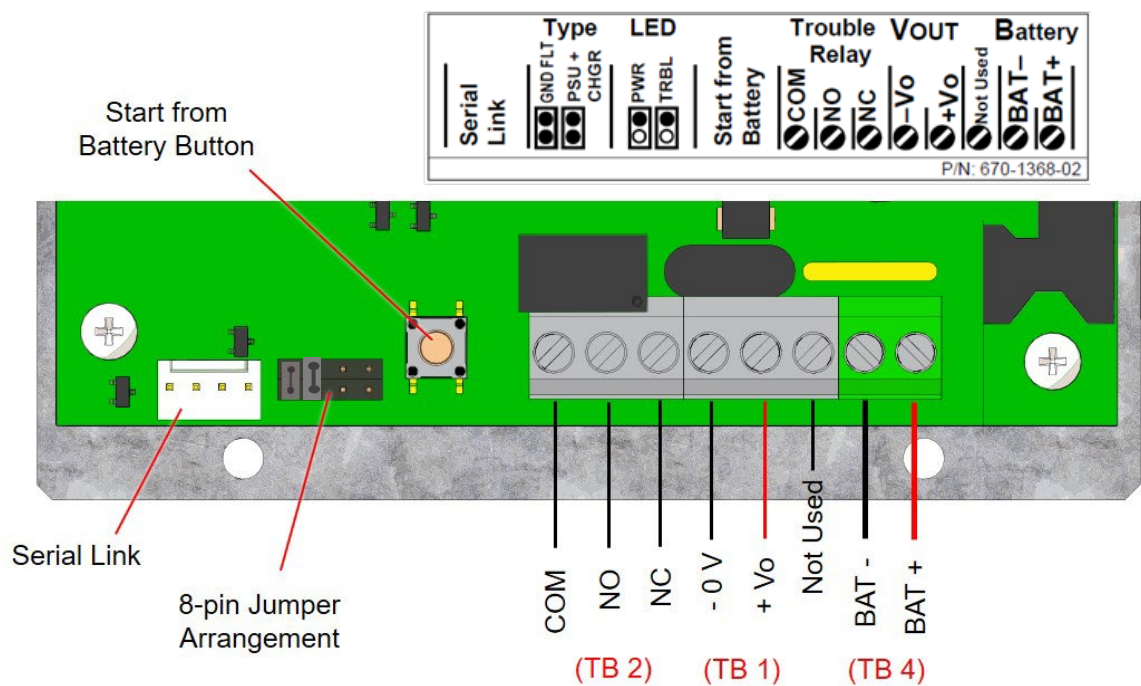



Figure 23 - NX10-EM-PSU6 Wiring

4.5.2.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB3		Earth Ground
	N	AC Power Neutral
	L	AC Power Load (Hot) If multiple AC wires are required under any of the input terminals, use 12AWG twin cable ferrule grey or Weidmuller part number 9037530000. If #10 AWG wire is required use TE Connectivity Plasti-Grip wire pin 12-10
TB2 (fail-safe relay)	COM NO NC	Relay Common Relay Normally Open (without power) Relay Normally Closed (without power)
TB1	0V +VO	Negative 24 VDC Positive 24 VDC
TB4	-BAT +BAT	Battery Negative Battery Positive

#### 4.5.2.2 Electrical Specifications

Mains Input	Supervised
Nominal Voltage, Frequency	120V (1.7A), 240V (0.61A), 50/60Hz
24 VDC Power	Supervised, POWER-LIMITED
Max. Current	5A Continuous
Dedicated AC Branch Circuit Requirement or Molex connector located on the NX10-ACS-ACB module	15A (over-current protection for this circuit must comply with Article 760 of the National Electrical Code (NEC) and/or local codes)
Brown-out	98V nominal
On-Board AC Fuse	5A, 250VAC Ceramic, Time Delay (size 5x20mm) (Bussmann S505-5-R, Littelfuse 0215005.XP)
AC Wiring	#14 or #12 AWG Refer to NEC. If multiple AC wires are required under any of the input terminals, use 12AWG twin cable ferrule grey or Weidmuller part number 9037530000. If #10 AWG wire is required use TE Connectivity Plasti-Grip wire pin 12-10
Ground Terminal	Must be connected to a solid earth ground. Use #14 AWG (2 mm <sup>2</sup> ) or larger wire with 600v insulation rating
Battery Circuit Supervision	Non-Power-Limited Circuit, Supervised for Short Circuit, Open Circuit, Ground Fault, Charger Failure, Battery Disconnection and Battery Cell Failure <b>Note:</b> If the batteries are disconnected the charger output is turned off.
Battery Charging Current	1 Amp, Temperature Compensated
Nominal Charging Voltage	27.4 VDC
Battery Type	Sealed Lead-Acid
Minimum Battery Capacity	7Ah
Maximum Battery Capacity	26Ah
Battery Deep Discharge Protection	Battery Disconnection < 19 VDC Nominal
Battery Link Wire Fuse	10A, 250 VAC Ceramic, Time Delay (size 5x10mm) Bussmann Part#: S505-10-R Littelfuse Part#: 0215010.XP

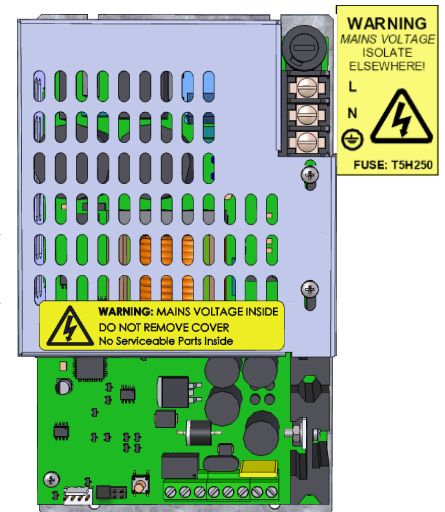
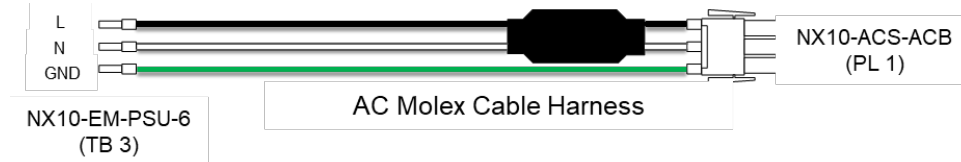
#### 4.5.2.2.1 LEDs

Designation	Colour	Description
HEARTBEAT	Green	Heartbeat
EARTH FAULT	Yellow	Ground Fault
MAINS FLT.	Yellow	Mains Fault
CHGR. FLT.	Yellow	Charger Fault
BAT. O/C	Yellow	Battery Open Circuit
BAT. LOW	Yellow	Battery Low
BAT. CON	Yellow	Battery Disconnected



### 4.5.2.3 AC Wiring

AC wiring for the power supply charger module can originate from the second Molex connector located on the NX10-ACS-ACB board or from a separate AC feed. To wire via the NX10-ACS-ACB board, plug the Molex connector of the three-wire cable assembly, supplied with the NX10-EM-PSU6 module, into the NX10-ACS-ACB PL1 Molex connector and terminate the three wires of the cable assembly to the correct AC and ground terminals of the NX10-EM-PSU6 TB3 terminal block (Black to Load, White to Neutral and Green to Ground).



### 4.5.2.4 Supervision

The NX10-EM-PSU6 module's fail-safe trouble relay contact terminals (TB2) COM, NO (closed unless NX10-EM-PSU6 is in trouble) or NC (open unless NX10-EM-PSU6 is in trouble) must be monitored by the command centre (Figure 23)



*The NX10-EM-PSU6 power supply charger module's fail-safe trouble relay contact must be monitored by the command centre.*

### 4.5.2.5 24 VDC Power

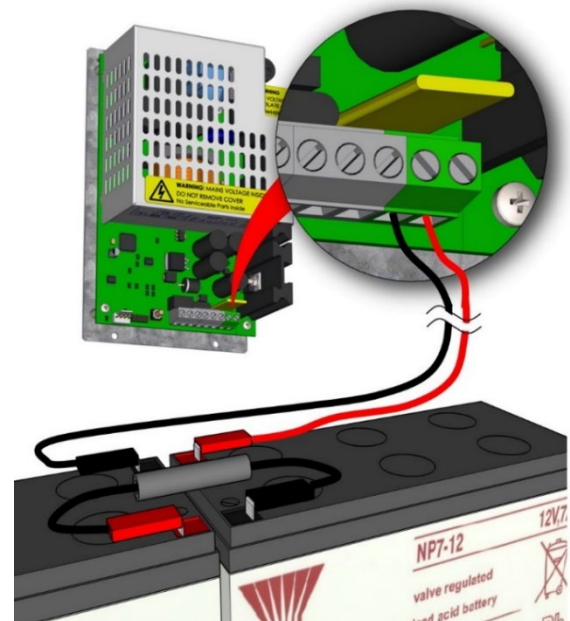
Terminals (TB 1) +VO (positive) and 0V (negative) are the 24 VDC @ 5A power output terminals of the NX10-EM-PSU6 power supply charger, wire these terminals to the devices requiring 24 VDC power (Figure 23).

### 4.5.2.6 Battery Charger

The NX10-EM-PSU6 requires its own set of batteries. To wire the batteries to the NX10-EM-PSU6 module, first connect the supplied in-line fuse cable harness, red slip-on connector to the positive terminal of the first 12 VDC battery and the black slip-on connector to the negative terminal of the second 12 VDC battery. Wire the supplied red cable with red slip-on connector to the +BAT terminal of the NX10-EM-PSU6 module and wire the supplied black cable with black slip-on connector to the -BAT terminal. Connect the red and black cables to the associated positive and negative terminals of the two batteries, red slip-on connector to the positive terminal of the second battery and black slip-on connector to the negative terminal of the first battery (opposite).

The internal series resistance of the batteries is continuously checked, if the resistance increases above  $0.8\Omega$  then the NX10-EM-PSU6 module will indicate a battery cell failure.

Start the NX10-EM-PSU6 power supply charger on AC power first then connect the batteries. If AC power is not available, the NX10-EM-PSU6 module can be started directly from the batteries. Connect a fully charged set of batteries and press the "START FROM BATTERY" push button.





Due to space limitation, the NX10-EM-PSU6 batteries may need to be installed in a separate battery enclosure.

#### 4.5.2.6.1 Standby Battery Calculations

	Quiescent Load			Alarm Load		
Equipment	I (A)	x	Total	I (A)	x	Total
NX10-EM-PSU6						
NX10-AMP-80	0.050	1.0	= 0.050	0.220	1.0	= 0.220
Amplifier 1 <sup>23</sup>					1.0	=
Amplifier 2 <sup>26</sup>					1.0	=
Total	ΣQuiescent Load		=	ΣAlarm Load		=
	x 24 hr. or 60 hr.		Ah	x 0.0833 <sup>24</sup> hr.		
	Total Quiescent Current		Ah	Total Alarm Current		Ah
	Total Load (Quiescent + Alarm)					Ah
	Total Load x 1.25 (battery de-rating factor)					Ah

Converting Watts to Amps:<sup>25</sup>

1 Watt = 0.051A

40 Watts = 2.04A

<sup>23</sup> Add total speaker circuit load of each amplifier, 40 watts maximum per amplifier.

<sup>24</sup> 5 minutes in alarm, change to .166 for 10 minutes in alarm.

<sup>25</sup> These conversions are based on measurements performed by Shield engineering.

### 4.5.3 Optional Common System Ground Fault Monitoring

Located on the NX10-EM-PSU6 PCB (printed circuit board) is an eight (8) pin jumper arrangement, one of those pairs of pins is a jumper (pins 7 and 8) for setting up the NX10-EM-PSU6 ground fault detection. The NX10-EM-PSU6 module is shipped with this jumper installed across pins 7 and 8, configuring the NX10-EM-PSU6 to monitor for ground fault conditions (Figure 24).

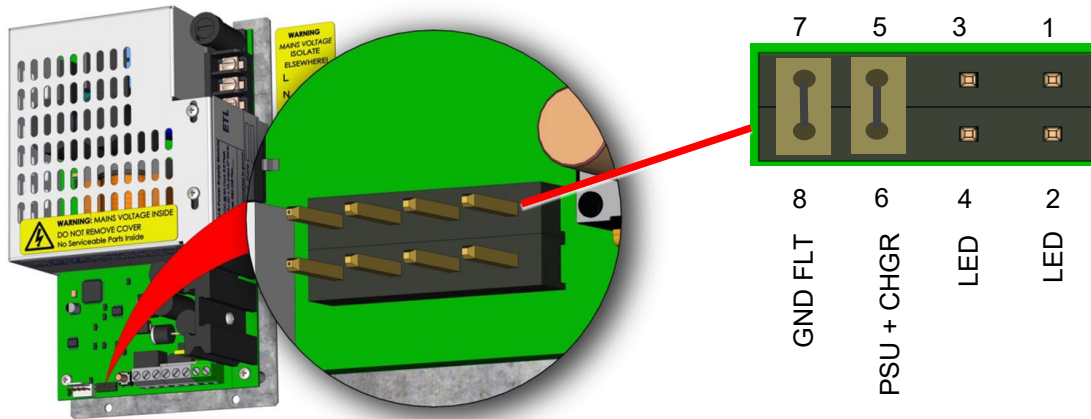


Figure 24 - Common System Ground Fault Monitoring

#### 4.5.3.1 Jumper Arrangement and Wiring

To allow the command centre NX10-ACS base card to monitor the NX10-EM-PSU6 module for ground fault detection, the factory installed jumper across pins 7 and 8 on the NX10-EM-PSU6 module must be removed to avoid paralleling ground fault detection circuitry (Figure 24). In addition, wire a cable from the -V0 terminal of the NX10-EM-PSU6 module to the ANC PSU 0V terminal located on the NX10-ACS base card. As there will be two (2) wires required under the NX10-EM-PSU6 module's -V0 terminal, use a Shield twin cable ferrule, manufactured by Weidmuller.

### 4.6 NX10-AMP-80 Audio Amplifier Module

The NX10-AMP-80 audio amplifier module is an optional module that provides digital audio capabilities to a pre-configured or modular command centre. The audio amplifier module incorporates two (2) independent 40-Watt amplifier output circuits (speaker circuits) capable of being wired either Class A or B. The two 40-Watt amplifiers are activated simultaneously and can be turned on via system software (peripheral bus (PBUS) controlled) or by a hardwired contact closure (hardwired controlled). In addition, when used with a Shield NX10-MIC microphone assembly, the NX10-AMP-80 audio amplifier module can provide live voice communications.



*The second 40-Watt amplifier of the NX10-AMP-80 module can be configured as a backup amplifier to the primary amplifier in the Shield, Dynamix Tools, Neo NX10-AMP software*

When configured as a peripheral bus-controlled amplifier, the monitoring and control of the audio amplifier is done via the command centre's NX10-ACS base card which is configured within the Shield, Dynamix Tools, Neo NX Config Tool. In the configuration tool, the audio amplifier module is configured as either a microphone bus amplifier (Mic Bus Amp or Remote Mic Bus Amp) used for live voice communications to area amplifiers (Floor Amp), or as a single installation amplifier, configured as an area amplifier (Floor Amp) providing all-call audio broadcasting and live voice communications.



*When Ad-NeT-PluS networks incorporate audio amplifiers, 150 nodes maximum will guarantee 10 second synchronization of audio messages/tones across the network.*

The NX10-CC01-BB (3x3) command centre backbox can support one NX10-AMP-80 module, while the NX10-CC02-BB (3x5) command centre back box can support three (Figure 25). Each pre-configured command centre includes one audio amplifier module.

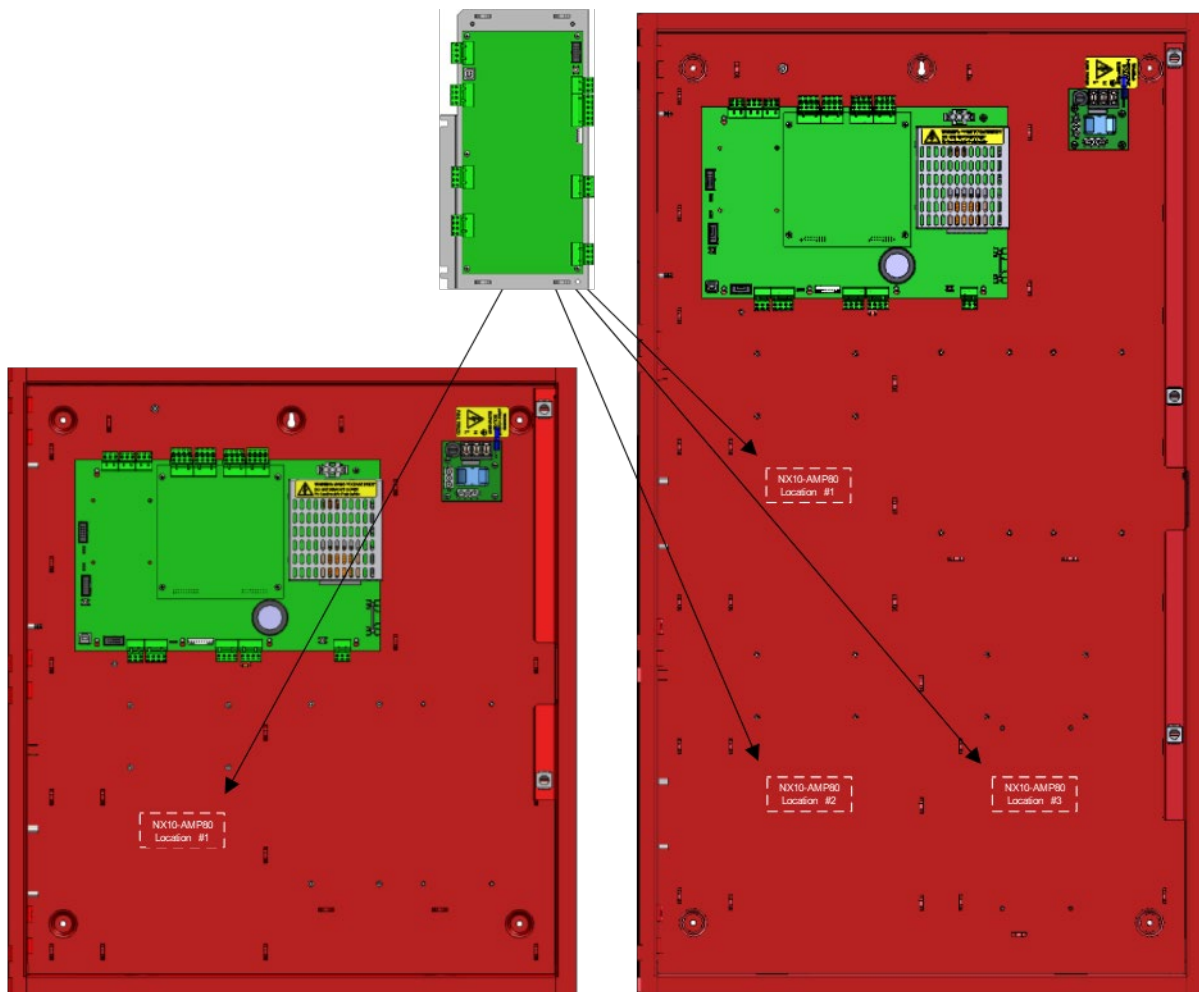


Figure 25 - NX10-AMP-80 Mounting Locations

#### 4.6.1 Installation



This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.

The NX10-AMP-80 audio amplifier module is preassembled on a mounting plate, do not remove the mounting plate from the audio amplifier module, this plate is part of the heatsink assembly for the amplifier circuitry. If replacing an audio amplifier module, the replacement audio amplifier module will be supplied with the preassembled mounting plate.

#### 4.6.1.1 Package Contents

- One (1) NX10-AMP-80 Module
- One (1) plastic bag containing:
  - Two (2) 10K Class B, UL end-of-line resistors
  - One (1) 6-pin female supervision plug
  - Three (3) panhead screws

#### 4.6.1.2 Remove

1. Disconnect AC and DC power.
2. Disconnect all used terminal blocks.
3. If connected remove the 6-pin NX10-MIC assembly cable from the PL2 MIC connector.
4. Remove the two (2) panhead screws that secure the NX10-AMP-80 mounting plate to the backbox.
5. Carefully slide the NX10-AMP-80 module with mounting plate from under the left-side tabs of the NX10-AMP-80 and remove from the enclosure.

#### 4.6.1.3 Install

1. Install the NX10-AMP-80 audio amplifier module with plate assembly in one of the available mounting locations within the backbox below the NX10-ACS base card (Figure 25).
2. Carefully slide the NX10-AMP-80 mounting plate tabs under the two left-side bottom tabs located in the backbox (Figure 26).
3. Position the mounting plate onto the two mounting posts and secure with the two (2) supplied panhead screws (Figure 26).

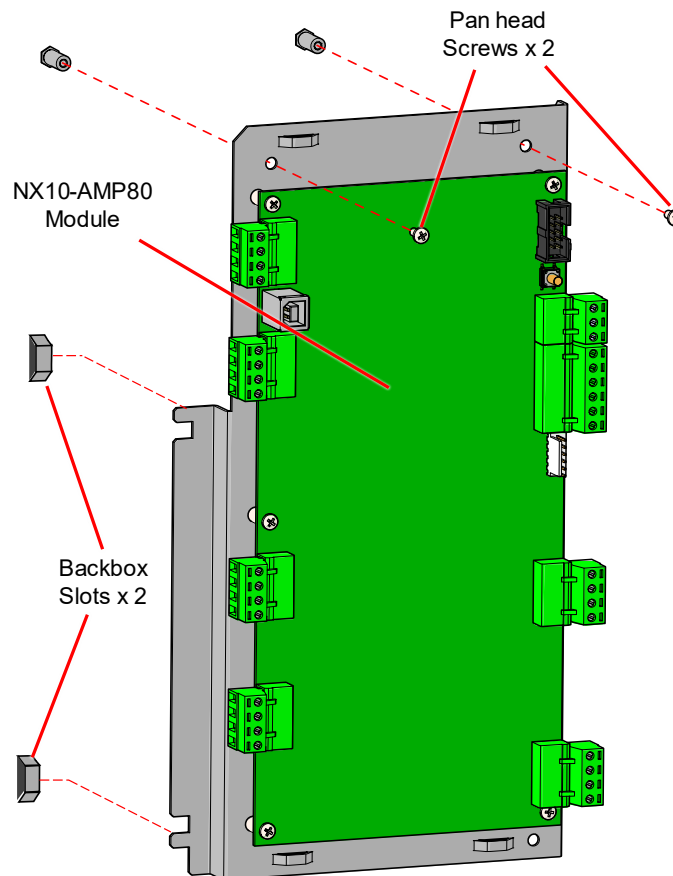


Figure 26 - NX10-AMP-80 Module Installation

## 4.6.2 Activations

As previously indicated, the NX10-AMP-80 audio amplifier module can be activated either via software (peripheral bus (PBUS) controlled) or hardwired relay (hardwired controlled).

### 4.6.2.1 Peripheral Bus (PBUS) Controlled

As a command centre peripheral bus (PBUS) controlled audio amplifier, the audio amplifier would be configured in the Shield, Dynamix Tools, Neo NX Config Tool as either a Mic Bus Amp (microphone dedicated amplifier), a Remote Mic Bus Amp (remote command centre microphone dedicated amplifier) or a Floor Amp (area amplifier).

#### 4.6.2.1.1 Mic Bus Amp

A Mic Bus Amp activates when a Page Area, Page All Areas, Dynamic Paging (Page Evac Areas, Page Alert Areas, Page Inactive Areas), or Page from Phone button is activated (pressed) at the main command centre or at a remote command centre.

When a command centre associated page button or buttons are activated (pressed), all associated area amplifiers (Floor Amp) will begin preparation for rebroadcasting (amplifier “Booster Mode”) the Mic Bus Amp circuit (live voice). In addition, all associated page button green LEDs will flash to indicate that the specific floor (area) amplifiers are preparing for live voice communications. When the floor (area) amplifiers are ready for paging, the green LED will illuminate steady and keying the push-to-talk microphone button will allow live voice communications to be broadcasted to the selected floor (area) amplifiers.

#### 4.6.2.1.2 Remote Mic Bus Amp

A Remote Mic Bus Amp activates whenever a Page Area, Page All Areas, Dynamic Paging (Page Evac Areas, Page Alert Areas, Page Inactive Areas), or Page from Phone button is activated (pressed) at the remote command centre.

When a remote command centre’s associated page button or buttons are activated (pressed), the main command centre’s associated Mic Bus Amp will prepare for rebroadcasting (amplifier “booster mode”) of the Remote Mic Bus Amp circuit (live voice). In addition, all remote command centre associated page button green LEDs will flash to indicate that the specific floor (area) amplifiers are preparing for live voice communications. When the floor (area) amplifiers are ready for paging, the green LED will illuminate steady and keying the push-to-talk microphone button at the remote command centre will allow live voice communications to be broadcasted to the selected floor (area) amplifiers.

#### 4.6.2.1.3 Floor Amp

A Floor Amp activates whenever an automatic message event, manual message button or a request to page is received at the specific floor (area) amplifier.

When a request to play a message is received at the floor (area) amplifier, the request will be accompanied with a message number (1 to 16) to play. This message number indicates to the floor (area) amplifier which of one (1) through sixteen (16) possible on-board programmed messages to play. The sixteen (16) messages/tones of the floor (area) amplifier can be tailored to meet any specific installation messaging demands such as alarms, alerts, CO events, warnings, and other event type messaging requirements.

If other Floor Amps, either allocated to the same floor (area) amplifier number or to different floor (area) amplifier numbers are installed within the installation, the Shield Neo NX10-AMP software can be configured to synchronize all identical messages throughout an entire facility. With multiple peripheral bus (PBUS) controlled audio amplifiers, multiple floors (areas) can be broadcasting synchronized messages throughout a facility (i.e.: alarm message to fire floor, floor above and floor below and alert message to the remainder of the facility).



*Refer to the Shield NX10-AMP Programming Manual regarding the programming of an NX10-AMP-80 audio amplifier module via the Shield, Dynamix Tools, Neo NX10-AMP software.*

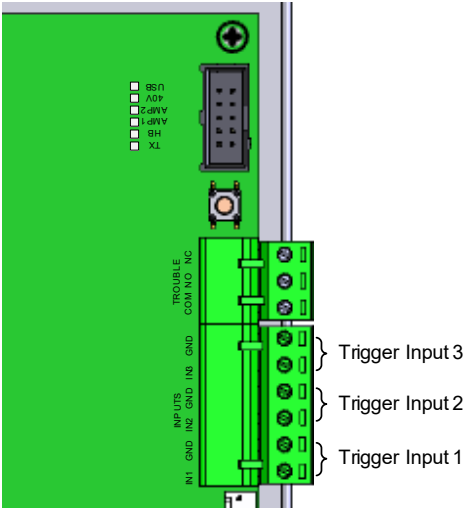


Within the Shield, Dynamix Tools, Neo NX Config Tool, the first four (4) message numbers (1, 2 3, and 4) are pre-labelled (non-editable); Alarm, Alert, All Clear and Pre-announce. Though these message numbers are pre-labelled and cannot be changed in the Neo NX Config Tool, the floor (area) amplifier can have any message programmed within the message 1, 2 and 3 locations. The message 4 location cannot be utilized for any other message type, this message location is dedicated to a field programmed pre-announcement tone/message, if utilized, which will be played prior to the activation of the command centre or remote command centre microphone push-to-talk button.

#### 4.6.2.2 Hardwired Controlled

A hardwired controlled audio amplifier activates whenever one of three (3) relay-controlled Inputs (IN1 & GND [input 1], IN2 & GND [input 2] and IN3 & GND [input 3]) are activate (see opposite).

Based on the input activation (built-in priority), the audio amplifier will either broadcast one of two (2) field programmable messages/tones (programmed via the Shield, Dynamix Tools, Neo NX10-AMP software) or rebroadcast (amplifier “booster mode”) a remote audio amplifier’s live voice page or message/tone. Based on the input prioritization, if inputs 1 and 2 are active, the audio amplifier will broadcast its on-board message/tone #1. If all inputs are activated, the audio amplifier will rebroadcast a remote audio amplifier’s signal (see below).



Hardwired Controlled Input Prioritization		
Control	Input Active Operation	Priority
Input 1 (IN1 & GND)	Play Field Programmed Message/Tone #1 (default Alarm Message)	2 (Medium)
Input 2 (IN2 & GND)	Play Field Programmed Message/Tone #2 (default All Clear Message)	3 (Low)
Input 3 (IN2 & GND)	Rebroadcast a Remote Audio Amplifier Live Voice Communications or Message/Tone	1 (High)

### 4.6.3 Configurations and Wiring

As previously stated, an audio amplifier module can be configured as a peripheral bus controlled or hardwired controlled amplifier. Based on which amplifier type is configured, specific configurations and wirings will be different. The common configuration and wiring requirements will be, 24 VDC power wiring, microphone supervision plug if not interfacing to an NX10-MIC microphone assembly, remote audio amplifier input wiring from either a Mic Bus Amp (peripheral bus controlled) or remote audio amplifier (hardwired controlled) and of course, the audio amplifier output circuit (speaker circuit) wiring.

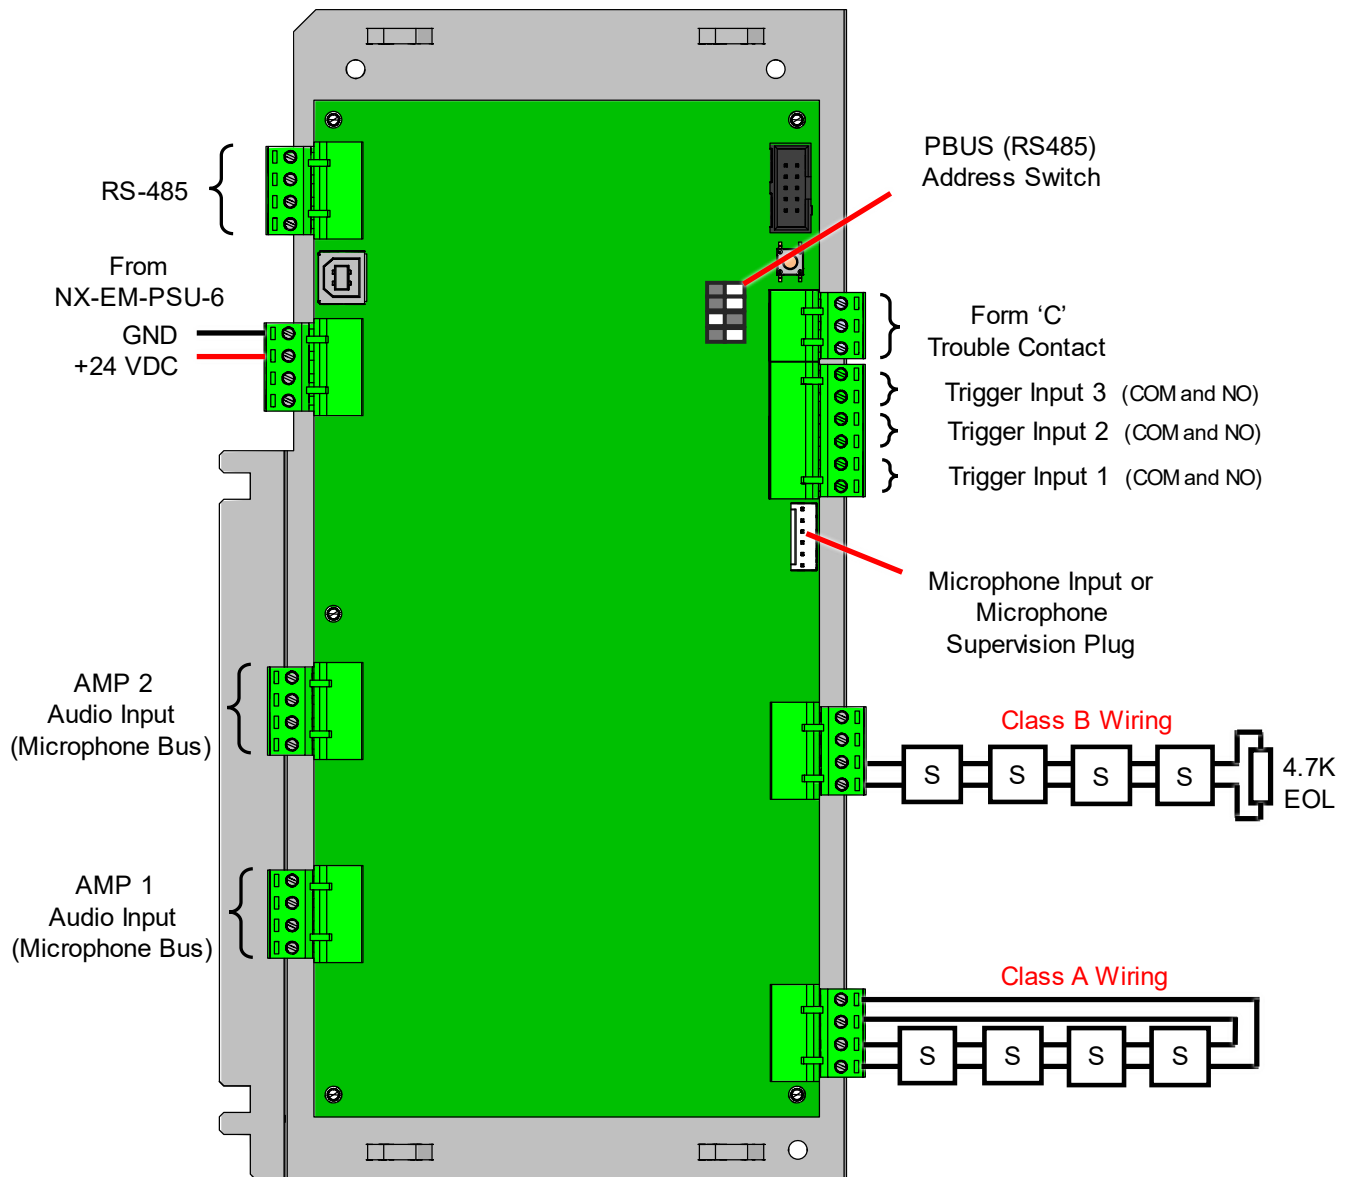


Figure 27 - NX10-AMP-80 Wiring



#### 4.6.3.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation		Terminal Description
TB1	AMP 1 IN	OUT-	Remote Audio OUT (Negative)
		OUT+	Remote Audio OUT (Positive)
		IN-	Remote Audio IN (Negative)
		IN+	Remote Audio IN (Positive)
TB2	AMP 2 IN	OUT-	Remote Audio OUT (Negative)
		OUT+	Remote Audio OUT (Positive)
		IN-	Remote Audio IN (Negative)
		IN+	Remote Audio IN (Positive)
TB3	RS485	B	Peripheral Bus Communication B In/Out
		A	Peripheral Bus Communication A In/Out
		B	Peripheral Bus Communication B In/Out
		A	Peripheral Bus Communication A In/Out
TB4	POWER	+24V	24 VDC Power (Positive) In/Out
		GND	24 VDC Power (Negative) In/Out
		+24V	24 VDC Power (Positive) In/Out
		GND	24 VDC Power (Negative) In/Out
TB5	AMP1 SPKR	B+	Class B (Positive) Amplifier 1 Speaker Circuit Output
		B-	Class B (Negative) Amplifier 1 Speaker Circuit Output
		A-	Class A (Negative) Amplifier 1 Speaker Circuit Return
		A+	Class A (Positive) Amplifier 1 Speaker Circuit Return
TB6	AMP2 SPKR	B+	Class B (Positive) Amplifier 2 Speaker Circuit Output
		B-	Class B (Negative) Amplifier 2 Speaker Circuit Output
		A-	Class A (Negative) Amplifier 2 Speaker Circuit Return
		A+	Class A (Positive) Amplifier 2 Speaker Circuit Return
TB7	INPUTS	IN1	Input 1 (Hardwired = Activates Message 1, Peripheral Bus = Supervises NX10-EM-PSU6)
		GND	Input 1 Negative Voltage for Switching
		IN2	Input 2 (Hardwired = Activates Message 2)
		GND	Input 2 Negative Voltage for Switching
		IN3	Input 3 (Hardwired = Activates Amplifier Booster, Rebroadcasts Remote Audio)
		GND	Input 3 Negative Voltage for Switching
TB8	TROUBLE	COM	Trouble Relay Common
		NO	Trouble Relay Normally Open (Closed when Powered)
		NC	Trouble Relay Normally Closed (Open when Powered)
PL2	MIC		6-Pin Male Connector for NX10-MIC Microphone Assembly Input or Supervisory Jumper
PL3	USB		USB Port for NX10-AMP-80 Programming
J1	BACKUP TEST		OFF/ON Jumper for Testing Backup Amplifier

### 4.6.3.2 Electrical Specifications

Supervision	Supervised for Short Circuit, Open Circuit and Ground Fault POWER-LIMITED
Operating Voltage	24 VDC
Operating Current Quiescent Active	50mA 220mA, plus 51mA per 1 Watt of audio (maximum 4.3A @ 80 Watt)
Audio Amplifier Wattage Amp1 Amp2	40 Watt @ 25Vrms 40 Watt @ 25Vrms
Audio Amplifier Circuit AMP1 (Speaker Circuit 1) AMP2 (Speaker Circuit 2)	* Circuits Activated Simultaneously Class A or B (10K end-of-line) Class A or B (10K end-of-line)
Audio Amplifier Audio Input Amp1 Amp2	25 Vrms max. 25 Vrms max.
Trouble Relay Contact Rating	1A @ 30 VDC

#### 4.6.3.2.1 LEDs

LED	Designation	Colour	Description
LED1	HB	Green	Heartbeat
LED2	A1	Green	Amplifier 1 Status
LED3	A2	Green	Amplifier 2 Status
LED4	TX	Green	Peripheral Bus Transmit
LED5	40V	Green	40V Power
LED6	USB	Green	USB Port Active

### 4.6.3.3 Common (Peripheral Bus and Hardwired Controlled) Wiring

#### 4.6.3.3.1 24 VDC Power

The audio amplifier module requires 24 VDC power from a Shield NX10-EM-PSU6 power supply charger module. For information regarding installation of the NX10-EM-PSU6 power supply charger module refer to NX10-EM-PSU6 Power Supply Charger Module section of this manual.

To connect the 24 VDC power from the power supply charger module, wire the +V0 terminal of the power supply charger module to the Power +24V terminal of the audio amplifier module. Wire the 0V terminal of the power supply charger module to the Power GND terminal of the audio amplifier module (see Figure 28).


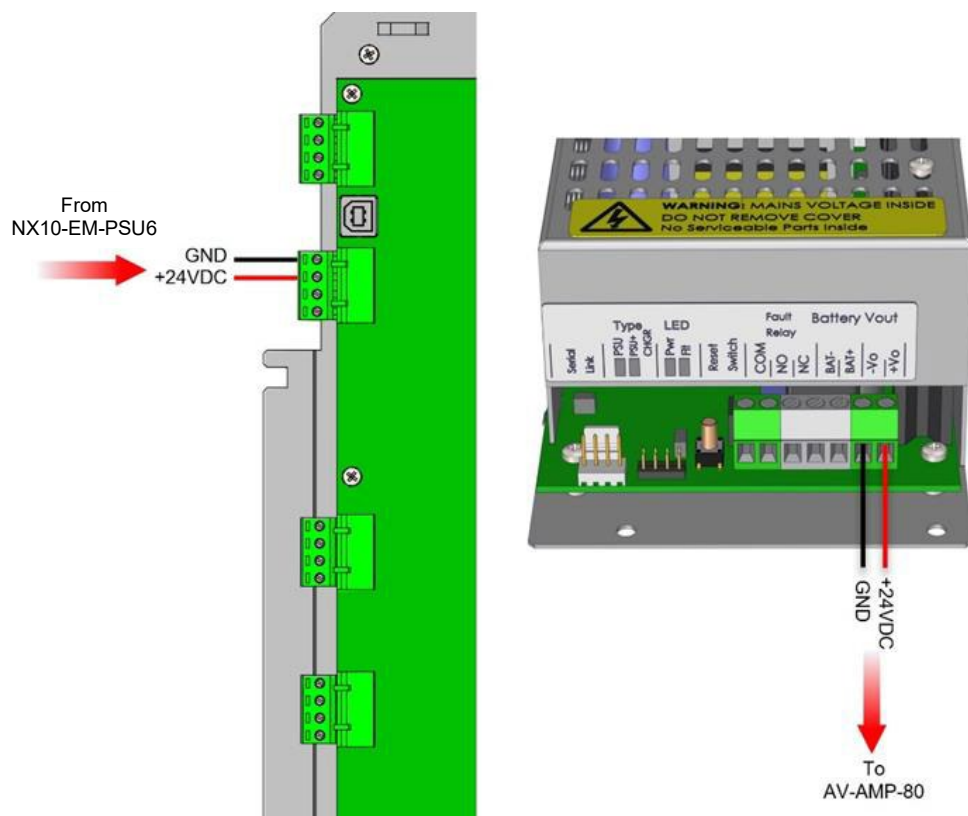


Figure 28 - NX10-AMP-80 24 VDC Wiring

#### 4.6.3.3.2 Microphone Assembly or Microphone Supervision Plug

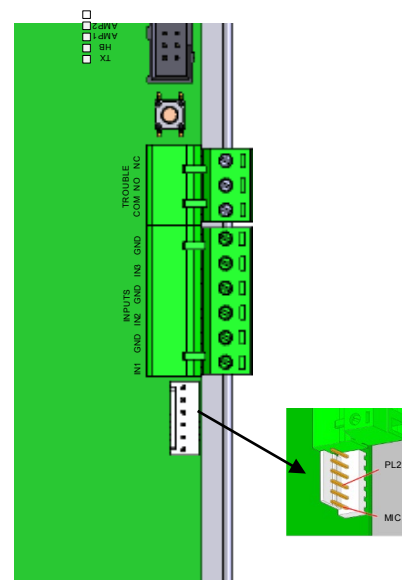For information regarding the installation and wiring of an NX10-MIC microphone assembly, refer to the NX10-MIC Microphone Assembly section of this manual.

If not utilizing an NX10-MIC microphone assembly, install the supplied 6-pin female microphone supervision plug into the 6-pin male connector (MIC PL2) located on the audio amplifier module. The 6-pin plug is keyed so it can only be inserted one-way (see opposite).




#### 4.6.3.3.3 Remote Audio Amplifier Input

As previously indicated, the remote audio amplifier input wiring to an audio amplifier module is the same whether it be a peripheral bus controlled or hardwired controlled amplifier. Where the differences exist is based on what type of controlled amplifier is generating the incoming audio. In a peripheral bus Floor Amp, the incoming audio will originate from a peripheral bus Mic Bus Amp, in a hardwired amplifier, the incoming audio will originate from another hardwired audio amplifier. If wiring incoming audio to a peripheral bus Mic Bus Amp, the incoming audio wiring will originate from a peripheral bus Remote Mic Bus amplifier.

To rebroadcast an audio signal from a remote location (Mic Bus Amp, Remote Mic Bus, or hardwired amplifier), the remote audio amplifier's speaker circuit (25 Vrms signal) must be connected to the audio inputs (AMP1 and AMP2) of the installed audio amplifier module.

Wire the remote audio amplifier's speaker circuit B+ and B- terminals to the installed audio amplifier's AMP1 IN+ and IN-, B+ to IN+ and B- to IN-. If the second onboard amplifier of the audio amplifier requires the rebroadcasted audio signal also, wire the audio amplifier's AMP1 OUT+ and OUT- terminals to the audio amplifier's AMP2 IN+ and IN-, OUT+ to IN+ and OUT- to IN- (see opposite).

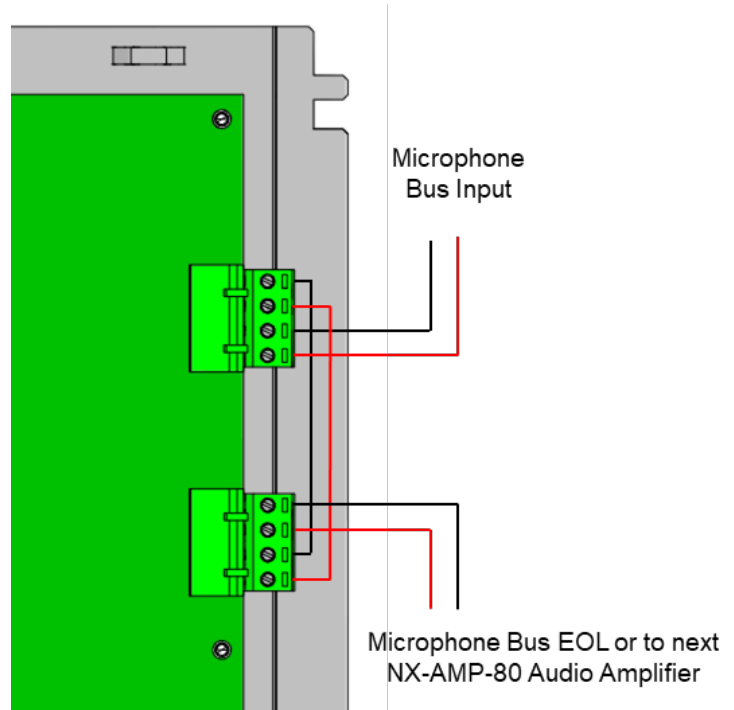
If the remote audio amplifier's speaker circuit is wired Class B and is not required for additional installation audio amplifiers, connect the remote audio amplifier's 10K end-of-line resistor on the OUT+ and OUT- terminals of the audio amplifier's AMP2 terminals. If the remote audio amplifier's speaker circuit is wired Class A or if the remote audio amplifier speaker circuit is required for additional installation audio amplifiers, wire the OUT+ and OUT- terminals of the audio amplifier's AMP2 terminals back to the remote audio amplifier's speaker circuit A+ and A- terminals or wire the OUT+ and OUT- terminals of the audio amplifier's AMP2 terminals to the next audio amplifier's AMP1 IN+ and IN- terminals.



*When utilizing the rebroadcasting “Boost Mode” feature of the audio amplifier, the input audio signal can be boosted (rebroadcasted) three (3) times (i.e.: amplifier generating audio signal → 1<sup>st</sup> amplifier to boost signal → 2<sup>nd</sup> amplifier to boost signal → 3<sup>rd</sup> amplifier boosts signal to area speakers).*

#### 4.6.3.3.4 Audio Amplifier Circuits (Speaker Circuits)

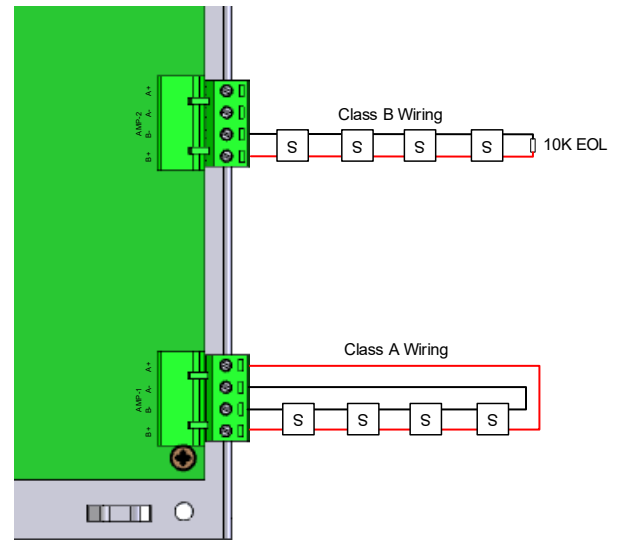Each audio amplifier module incorporates two (2) independent 40-Watt audio amplifier circuits (speaker circuits) capable of being wired Class A or B. To wire the circuit Class B, wire AMP1 and/or AMP2 (speaker circuits) B+ and B- terminals to the field speakers and terminate the last speaker with the supplied 10K end-of-line (EOL) resistor. If wiring the circuit Class A, return the last speaker wiring to the AMP1 and/or AMP2 (speaker circuit) A+ and A- terminals (see opposite).



#### 4.6.3.4 Peripheral Bus (PBUS) Specific Configuration and Wiring

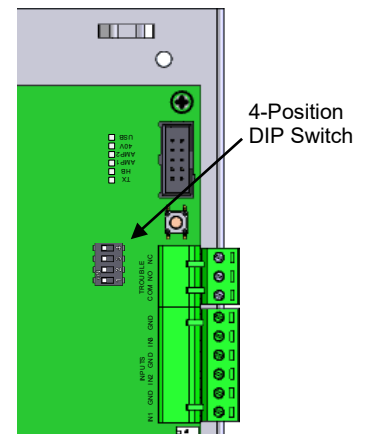
As a peripheral bus (PBUS) controlled audio amplifier, the audio amplifier module will require a peripheral bus address and connection to the NX10-ACS base card peripheral bus. In addition, besides the NX10-EM-PSU6 power supply charger 24 VDC, the audio amplifier module will require a supervision connection to the NX10-EM-PSU6 power supply charger.

##### 4.6.3.4.1 Addressing

To address a peripheral bus (PBUS) audio amplifier module, locate the 4-position DIP (DIL) switch on the audio amplifier module (see opposite).

Utilizing the 4-position DIP (DIL) switch, set the audio amplifier module to its required address, addresses range from 0 to 15. A peripheral bus (PBUS) of the NX10-ACS base card can support up to 16 audio amplifier modules (see below).


Address	1	2	3	4
0	OFF	OFF	OFF	OFF
1	ON	OFF	OFF	OFF
2	OFF	ON	OFF	OFF
3	ON	ON	OFF	OFF
4	OFF	OFF	ON	OFF
5	ON	OFF	ON	OFF
6	OFF	ON	ON	OFF
7	ON	ON	ON	OFF
8	OFF	OFF	OFF	ON
9	ON	OFF	OFF	ON
10	OFF	ON	OFF	ON
11	ON	ON	OFF	ON
12	OFF	OFF	ON	ON
13	ON	OFF	ON	ON
14	OFF	ON	ON	ON
15	ON	ON	ON	ON



*A Shield peripheral bus (PBUS) can support up to 32 peripheral bus (PBUS) modules and sixteen (16) of one type. Peripheral bus (PBUS) modules must be mounted within 20 feet from where the peripheral bus originates in the same room and in rigid conduit.*

#### 4.6.3.4.2 Peripheral Bus (PBUS) Wiring

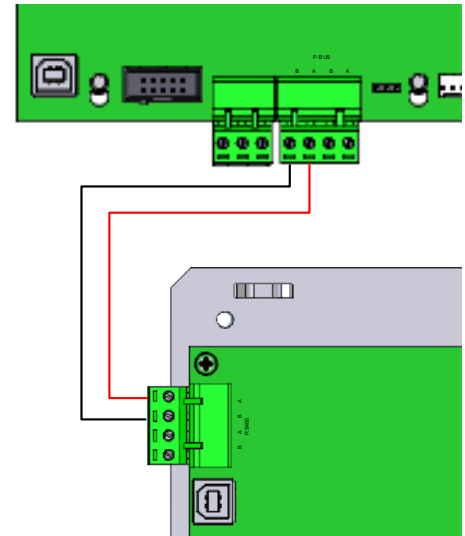To wire the audio amplifier module to the NX10-ACS base card's peripheral bus (PBUS), wire the RS485 terminals A and B of the audio amplifier module to the A and B terminals of the NX10-ACS base card peripheral bus (PBUS). Terminals from both modules; A to A and B to B (see opposite).



#### 4.6.3.4.3 NX10-EM-PSU6 Supervision

To supervise the audio amplifier's associated NX10-EM-PSU6 power supply charge module, wire the Input terminals IN1 and GND of the NX10-AMP-80 module to the fail-safe COM and NO terminals of the power supply charger module. IN1 terminal (audio amplifier module) to COM terminal (power supply charger module), GND terminal (audio amplifier module) to NO terminal (power supply charger module) [Figure 29].

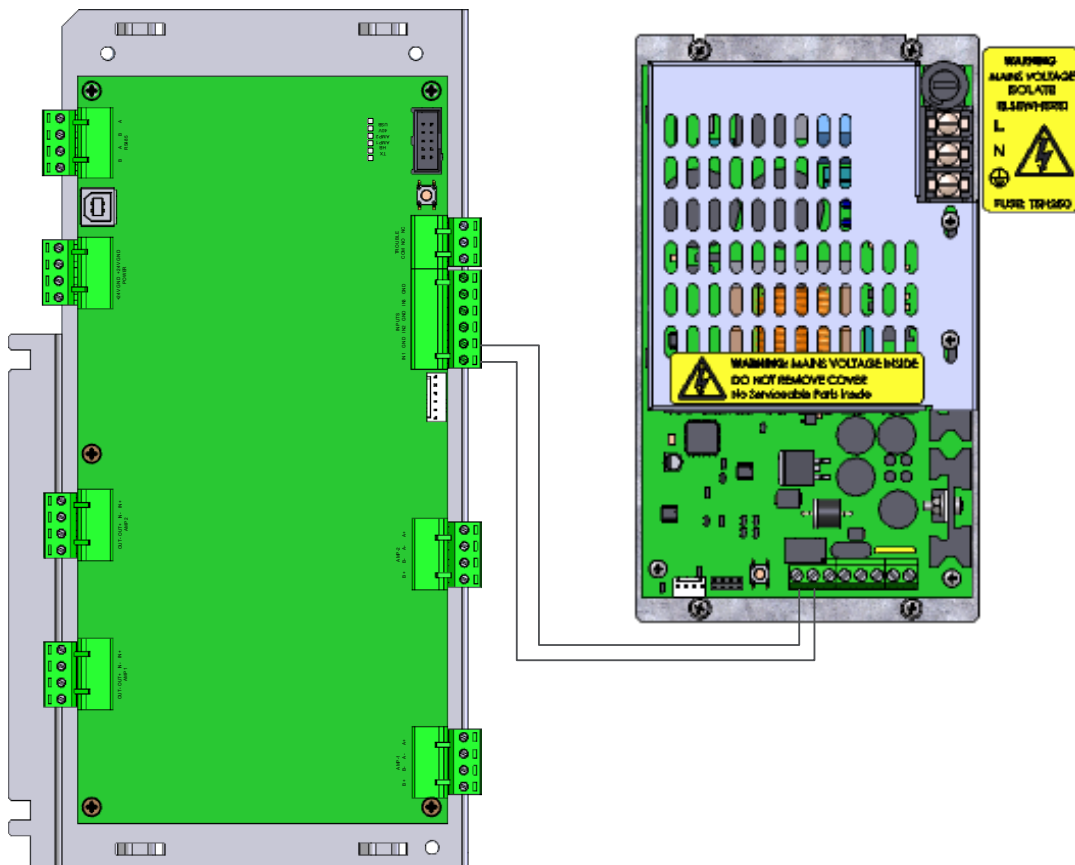


Figure 29 - Peripheral Bus Audio Amplifier NX10-EM-PSU6 Monitoring



*If a peripheral bus (PBUS) controlled amplifier is not monitoring an associated NX10-EM-PSU6 power supply charger, a jumper must be installed on the Input IN1 and GND terminals of the audio amplifier module.*

#### 4.6.3.4.4 Mic Bus Amp Audio Amplifier Circuit Wiring

As a microphone bus amplifier, the amplifier will provide for the transmission of live voice communications from the command centre's microphone to floor (area) amplifiers via the dedicated 40-Watt audio amplifier circuits (speaker circuits).

To wire the microphone bus circuit(s) to the floor (area) amplifiers, wire from AMP1 B+ and B- and/or AMP2 B+ and B- circuits to the floor (area) amplifier AMP1 IN+ and IN-. At the floor (area) amplifier wire the microphone bus circuit from AMP1 OUT+ and OUT- to the AMP2 IN+ and IN-. If other floor (area) amplifiers are installed, wire the floor (area) AMP2 OUT+ and OUT- to the next floor (area) audio amplifier AMP1 IN+ and IN-. If this is the last floor (area) amplifier and the microphone bus circuit is to be wired Class B, place the supplied 10K end-of-line resistor across the AMP2 OUT+ and OUT- terminals. If wired Class A, wire the AMP2 OUT+ and OUT- back to the microphone bus amplifier circuit(s) AMP1 A+ and A- or AMP2 A+ and A- (see Figure 30).

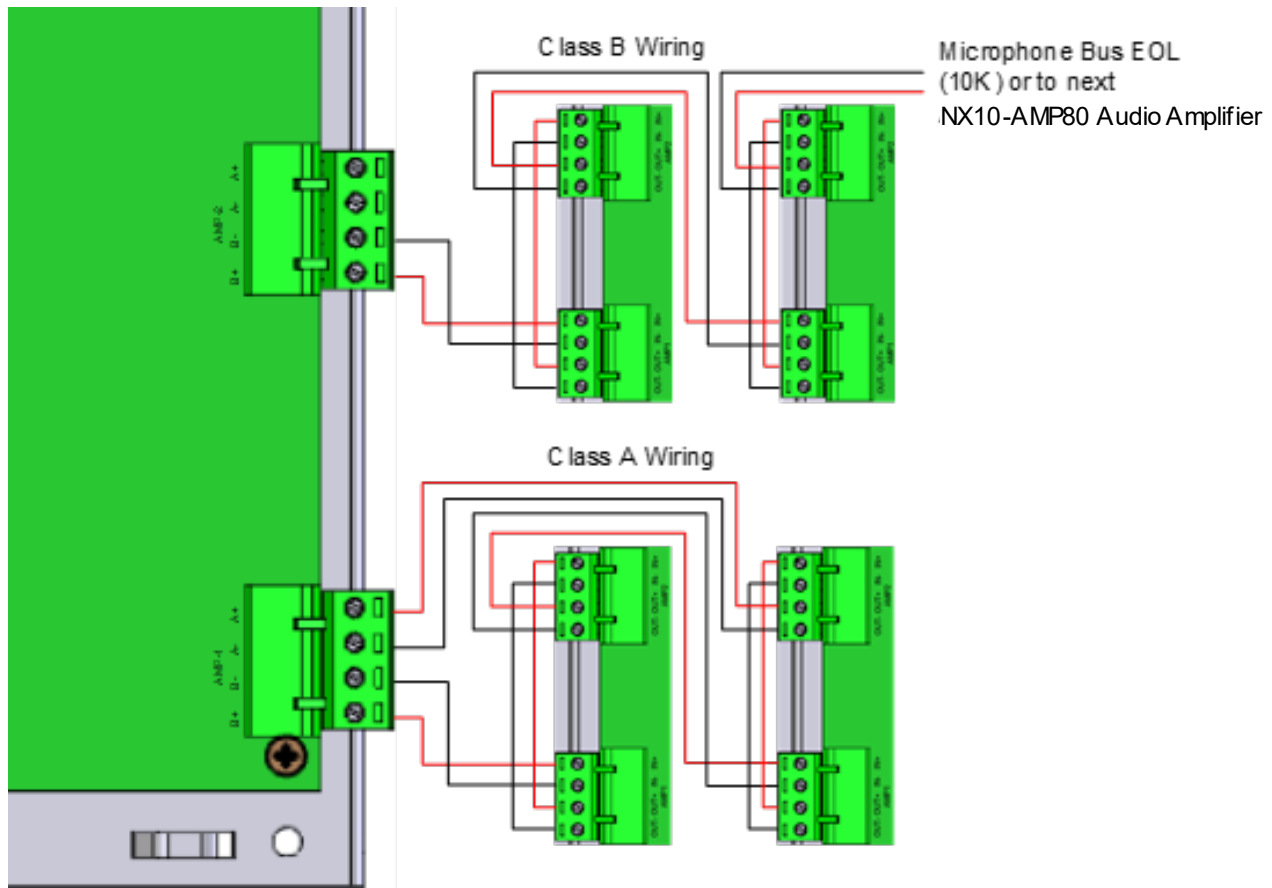


Figure 30 - Mic Bus Amp to Floor (Area) Amps Wiring (Class B or A)

#### 4.6.3.5 Hardwired Specific Configuration and Wiring

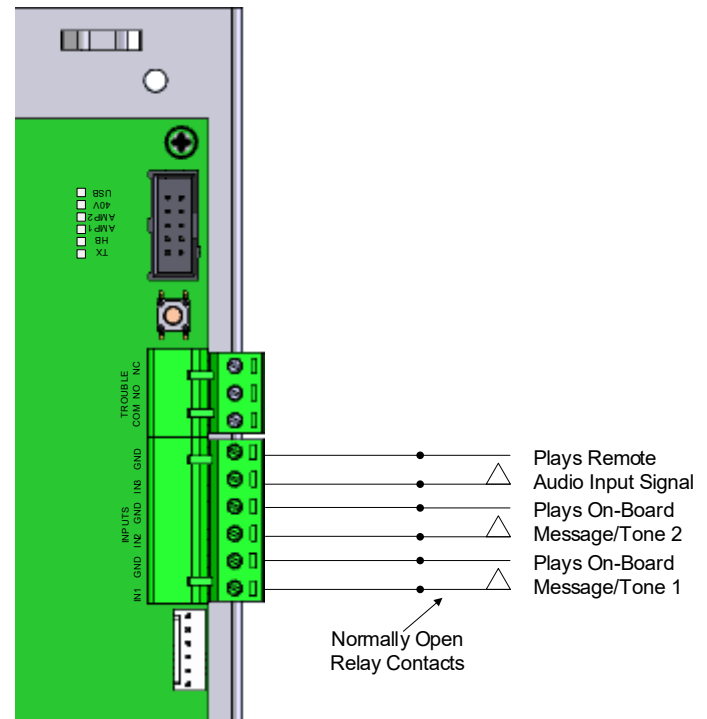
As a hardwired controlled audio amplifier, the audio amplifier module will require connection to up to three (3) relay contacts for message/tone control and remote audio input signal control. In addition, the audio amplifier and its associated power supply charger module will require supervision by an NX10-ACS base card.

#### 4.6.3.5.1 Relay Activation

To activate message 1 of the audio amplifier module, program a normally open relay (closed on active event) to activate on any event requiring message 1 to be broadcasted. Wire the normally open relay to the audio amplifier's INPUTS IN1 and GND. Whenever the relay contact is active the audio amplifier module will broadcast message 1, unless input 3 is active.

To activate message 2 of the audio amplifier module, program a normally open relay (closed on active event) to activate on any event requiring message 2 to be broadcasted. Wire the normally open relay to the audio amplifier's INPUTS IN2 and GND. Whenever the relay contact is active the audio amplifier module will broadcast message 2, unless input 1 or 3 are active.

To activate input 3 of the audio amplifier to rebroadcast a remote audio signal, program a normally open relay (closed on active rebroadcasting event) to activate on any event requiring the amplifier to rebroadcast a remote signal. Wire the normally open relay to the audio amplifier's INPUTS IN3 and GND. Whenever the relay contact is active the audio amplifier module will rebroadcast the remote audio signal. Input 3 has the highest priority, if input 1 and/or 2 is active the audio amplifier will continue to rebroadcast the remote audio signal. This is how a remote microphone can perform paging in a remote location.



*The hardwired INPUTS of the audio amplifier module are unsupervised, wiring between the inputs and the relay contacts controlling the activations must be within 20 feet, in same room and in rigid conduit.*

*When utilizing the rebroadcasting "Boost Mode" feature of the audio amplifier, the input audio signal can be boosted (rebroadcasted) three (3) times (i.e.: amplifier generating audio signal → 1<sup>st</sup> amplifier to boost signal → 2<sup>nd</sup> amplifier to boost signal → 3<sup>rd</sup> amplifier boosts signal to area speakers).*

#### 4.6.3.5.2 NX10-AMP-80 and NX10-EM-PSU6 Supervision

As a hardwired wired controlled audio amplifier, the audio amplifier module and its associated NX10-EM-PSU6 power supply charger module will require supervision.

To supervise the audio amplifier and associated power supply charger, wire the NX10-ACS base card's ANC PSU Fault B terminal to the fail-safe trouble relay NO (normally open without power) terminal of the audio amplifier module. Wire the fail-safe trouble relay COM terminal of the audio amplifier module to the power supply charger module's fail-safe trouble relay NO (normally open without power) terminal. Wire the power supply charger module's COM terminal back to the NX10-ACS base card's ANC PSU Fault A terminal (see Figure 31).



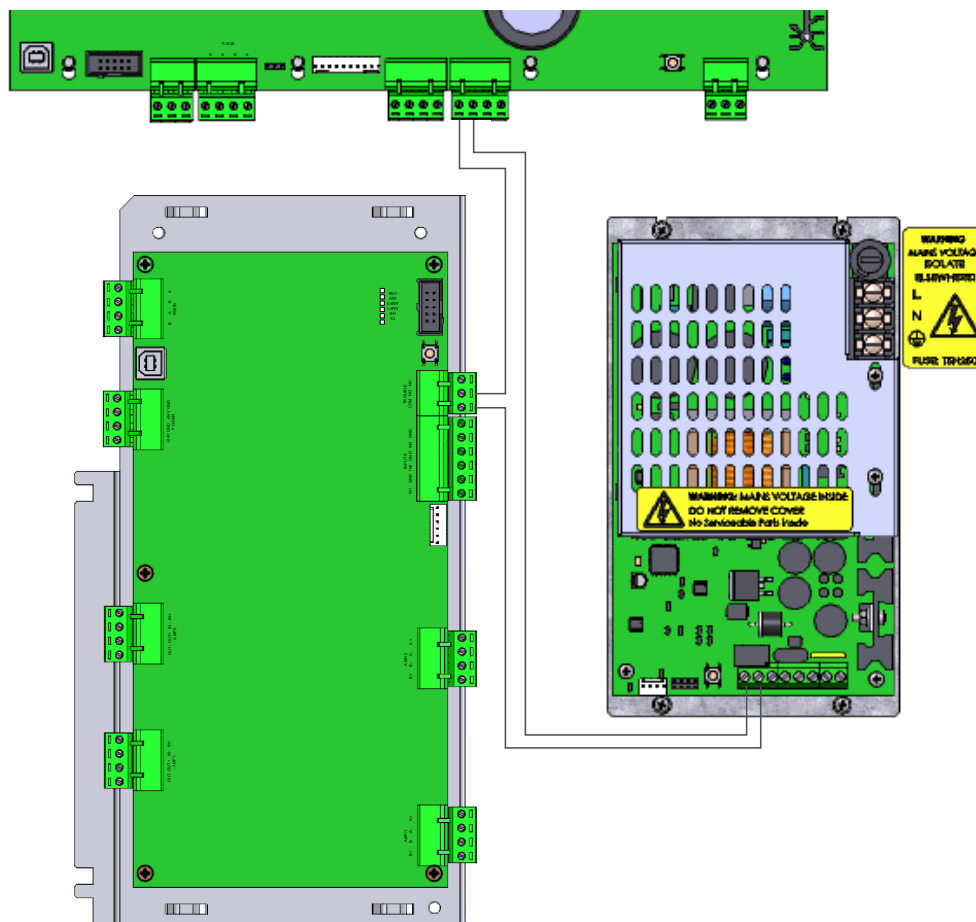


Figure 31 - Hardwired NX10-AMP-80 and NX10-EM-PSU6 Supervision Wiring

#### 4.6.4 Peripheral Bus NX10-AMP-80 Programming

Prior to utilizing the audio amplifier, the audio amplifier must be programmed/configured in the Shield, Dynamix Tools, Neo NX Config Tool and Neo NX10-AMP software. The Neo NX Config Tool is where the audio amplifier gets added to the system and configured as either a Mic Bus Amp (microphone bus amplifier), Remote Mic Bus Amp (remote microphone bus amplifier) or a Floor Amp (area amplifier). In addition, if configured as a Floor Amp it is where the automatic and manual control of the audio amplifier messages is configured. The Neo NX10-AMP software is where the audio amplifier gets configured for peripheral bus operation or hardwired controlled, and where the user can configure various messages and/or tones. Each peripheral bus amplifier can be configured with sixteen separate messages (messages and/or tones), while the hardwired controlled amplifier can be configured for two.

##### 4.6.4.1 Neo NX Config Tool

##### 4.6.4.1.1 Adding the NX10-AMP-80

To Add the NX10-AMP-80 audio amplifier to the system, in the Neo NX Config Tool navigate to the Installation List Neo NX10-ACS panel. Within the expanded Neo NX10-ACS panel view, click on the Peripheral Bus. The Peripheral Bus Device Selector will show a list of available panel Peripheral Bus Interfaces that can be added to the panel. Click on the NX10-AMP-80 Card and it will highlight blue, it will also highlight Peripheral Bus Address 149 Gray (Figure 32).


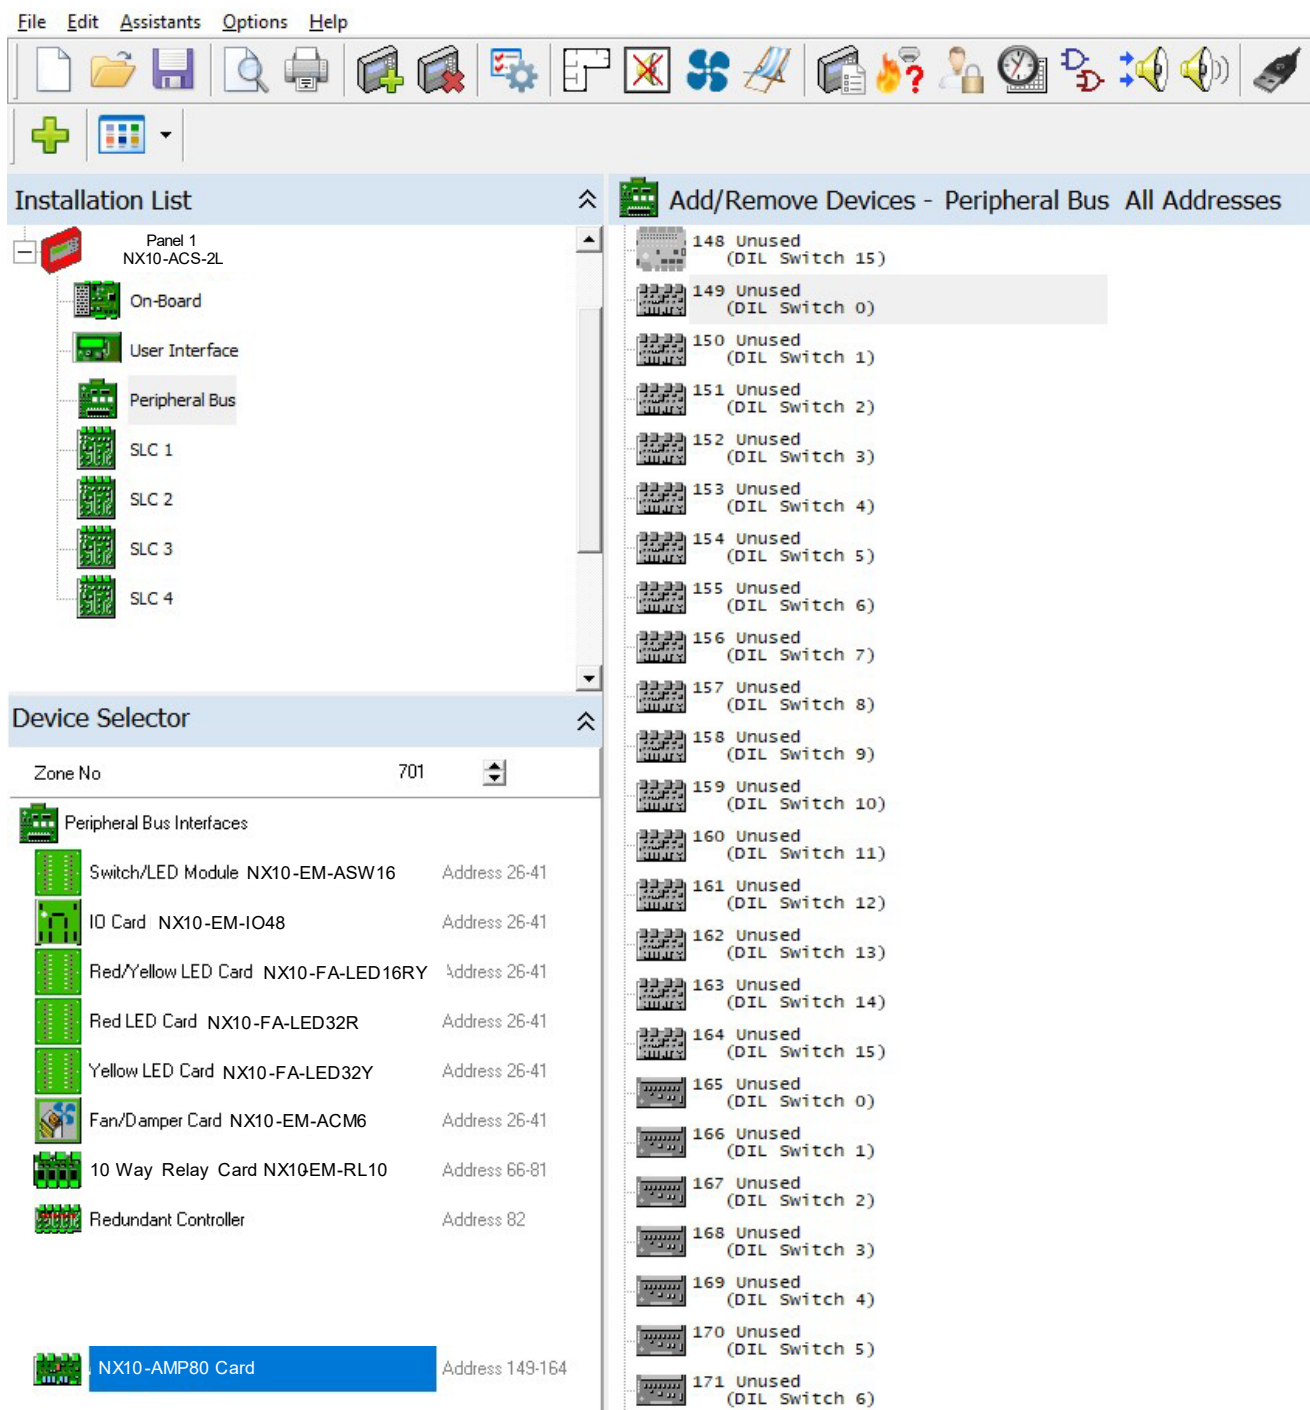


Figure 32 - Shield Neo NX Config Tool, NX10-AMP-80 Peripheral Bus Device Selector

Address 149 (DIL Switch 0 [NX10-AMP-80 address]) is a virtual peripheral bus address in the Neo NX fire alarm control panel, addresses 149 (DIL Switch 0) to 164 (DIL Switch 15) are virtual peripheral bus addresses allocated for the sixteen NX10-AMP-80 audio amplifier modules. To add the NX10-AMP-80 to the system either click on the plus





icon or right-click on the highlighted address



+ Add Device

and click Add Device.

After the audio amplifier has been added to the peripheral bus, with the Address and NX10-AMP-80 Card highlighted blue  **NX10-AMP80 Card**, click on the Show Details  icon to configure the audio amplifier. The following screen will appear (Figure 33).

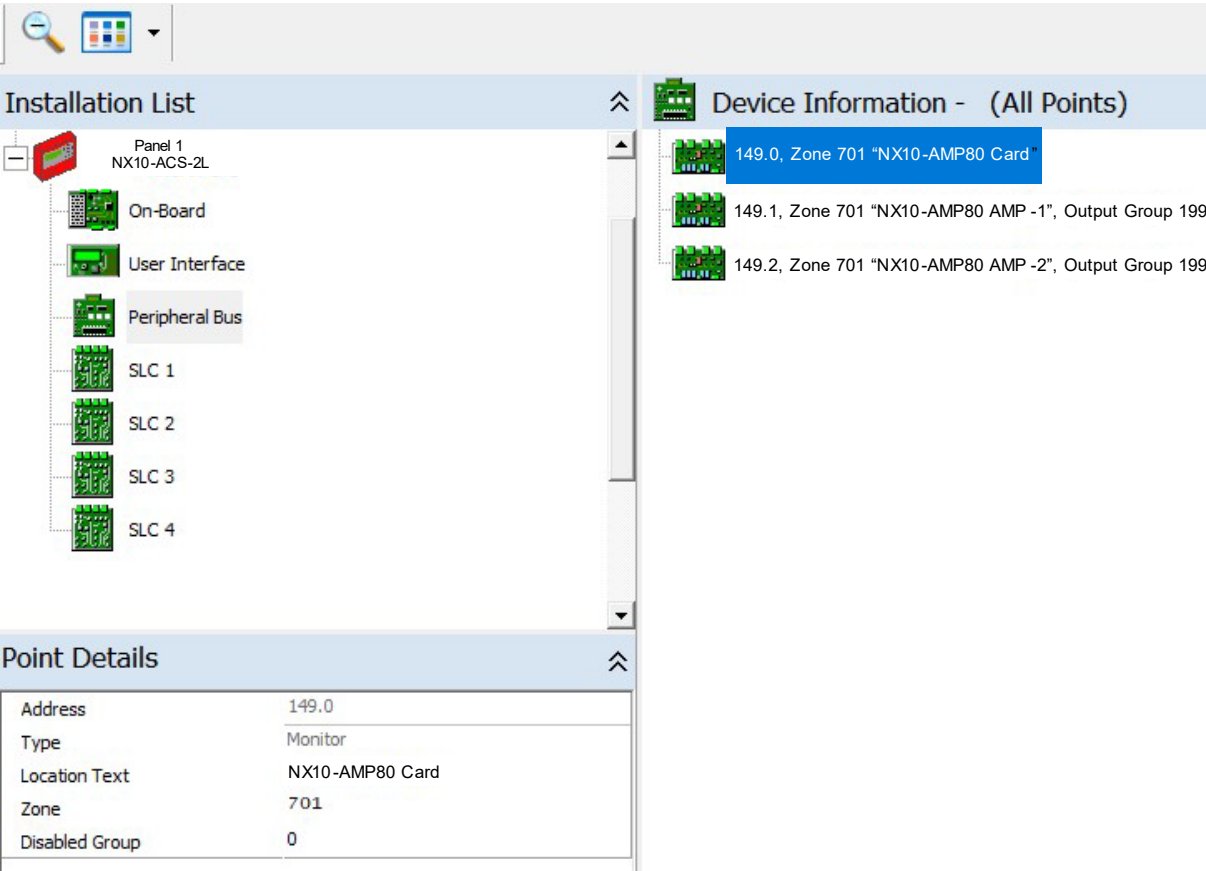


Figure 33 - Shield Neo NX Config Tool, NX10-AMP-80 Point Details

Programming of the audio amplifier in this area will include the programming of the audio amplifier module and the programming of the two (2) audio amplifier (speaker) circuits.

4.6.4.1.1.1 NX10-AMP-80 Card Programming (Address 149.0)

NX10-AMP-80 Card programming includes assigning Location Text, Zone number and a Disabled Group. The Zone number and Location Text is the information that will be displayed if the NX10-AMP-80 module is missing. As a default the Zone number is the Zone of the Neo NX fire alarm control panel, and the Location Text is NX10-AMP-80 Card. If Zone 701 were labelled “Fire Alarm Control Panel” and the module was missing, the display would read Fire Alarm Control Panel NX10-AMP-80 Card Missing Device.

Point Details	
Address	149.0
Type	Monitor
Location Text	NX10-AMP80 Card
Zone	701
Disabled Group	0

The Disabled Group is where the user can assign the NX10-AMP-80 to a disable group, when the group is disabled the entire NX10-AMP-80 module (amplifier circuits, power supply monitoring, microphone supervision, etc.) will be disabled.

#### 4.6.4.1.1.2 NX10-AMP-80 AMP-1 Programming (Address 149.1)

By clicking on the 149.1, Zone 701 “NX10-AMP-80 AMP-1”,



149.1, Zone 701 “NX10-AMP80 AMP-1”, Output Group 199

Output Group 199 , audio amplifier AMP1 can be programmed. Like the NX10-AMP-80 Card, each audio amplifier circuit can be assigned a Zone number, Location Text, and Disabled Group. In addition, a Used For must be programmed, the Used For defines what the amplifier circuit’s function is. Used For selections include, Floor Amp (default), Mic Bus Amp or Remote Mic Bus Amp. If the Used For selection is a Floor Amp, in addition to the Disabled Group programming, an Audio Area and Output Group will need to be assigned to the amplifier circuit.

Point Details	
Address	149.1
Type	Audio
Location Text	NX10-AMP80 AMP -1
Zone	701
Used For	Floor Amp
Audio Area	0
Output Group	199
Disabled Group	0

Address	The address field is a virtual peripheral bus address in the Neo NX fire alarm control panel. This Address allocation cannot be changed.
Type	This is the type of circuit being programmed, as we are programming an audio amplifier circuit AMP1 it is Audio and cannot be changed.
Location Text	This is where the user enters a Location Text for the audio amplifier circuit, defining the location of the audio amplifier circuit.
Zone	This is where the user enters the Zone allocated to the audio amplifier circuit, 701 is the default zone for the Neo NX fire alarm control panel.
Used For	This is where the user defines what the audio amplifier circuits are Used For. The Used For programming only needs to be set on one amplifier circuit, it will automatically be populated for the second audio amplifier circuit.

Used For	Floor Amp
Audio Area	Floor Amp
Output Group	Mic Bus Amp
	Remote Mic Bus Amp


Floor Amp	A floor/area amplifier is an amplifier that provides broadcasting of messages and live voice to a specific floor/area.
Mic Bus Amp	A microphone bus amplifier provides for main panel live voice communications to all floor/area amplifiers.
Remote Mic Bus Amp	A remote microphone bus amplifier provides a live voice bus from a remote location to the main panel Mic Bus Amp for broadcasting live voice communications to all floor/area amplifiers from the remote microphone.



*When an NX10-AMP-80 Card is Used for a Mic Bus Amp or Remote Mic Bus Amp, the only additional programming is whether a Disabled Group will be assigned to one or both audio amplifier circuits.*

Audio Area	This is where the user assigns an audio area for the NX10-AMP-80 Card when used as a Floor AMP. The Audio Area programming only needs to be set on one amplifier circuit it will automatically be populated for the second audio amplifier circuit. Audio Area programming is where the user defines separate message/tone and live voice communication locations for fire floor, floor above and floor below signalling and paging.
------------	--

**Output Group** The Output Group, which will need to be an Audio Output Group, is the programmed logic that will automatically activate the NX10-AMP-80 audio amplifier circuits during an event. The Output Group in a peripheral bus installation does not need to include any manual button selections for live voice or audio control activations, this is accomplished when programming Application specific Audio buttons, refer to Switch LED module programming in this manual. Below is an example of a common alarm Audio Output Group, for programming Audio Output Groups refer to Shield NX686-100 PC-NeT Manual.



**Disabled Group** If a user requires a separate Disabled Group for the audio amplifier circuit, the programmer can assign the Disabled Group in this location. Unlike the NX10-AMP-80 Card Disabled Group, this disablement will only disable the audio amplifier circuit, the other audio amplifier circuit and the NX10-AMP-80 Card will not be disabled.

4.6.4.1.1.3 NX10-AMP-80 AMP-2 Programming (Address 149.2)



149.2, Zone 701 "NX10-AMP80 AMP -2", Output Group 199

By clicking on the 149.2, Zone 701 "NX10-AMP-80 AMP-2", Output Group 199, audio amplifier AMP2 can be programmed. As mentioned earlier, Used For, Audio Area, and Output Group

are all automatically populated from audio amplifier AMP1. Only the Location Text, Zone number and Disabled Group can be modified.

Point Details	
Address	149.2
Type	Audio
Location Text	NX10-AMP80 AMP -2
Zone	701
Used For	Floor Amp
Audio Area	0
Output Group	199
Disabled Group	0



Refer to the Shield NX686-100 PC-NeT Manual regarding the programming of an Neo NX fire alarm control panel audio amplifier module via the Shield, Dynamix Tools, Neo NX Config Tool.

4.6.4.2 Neo NX10-AMP

4.6.4.2.1 Adding the NX10-AMP-80



To Add the NX10-AMP-80 audio amplifier to the Neo NX10-AMP software, click on the Add Panel drop-down icon. Add Command Centre, Add panel with integrated audio or add panel without integrated audio selections will appear, as the system is using a peripheral bus amplifier, select either the Add Command Centre or Add panel with integrated audio (Figure 34).

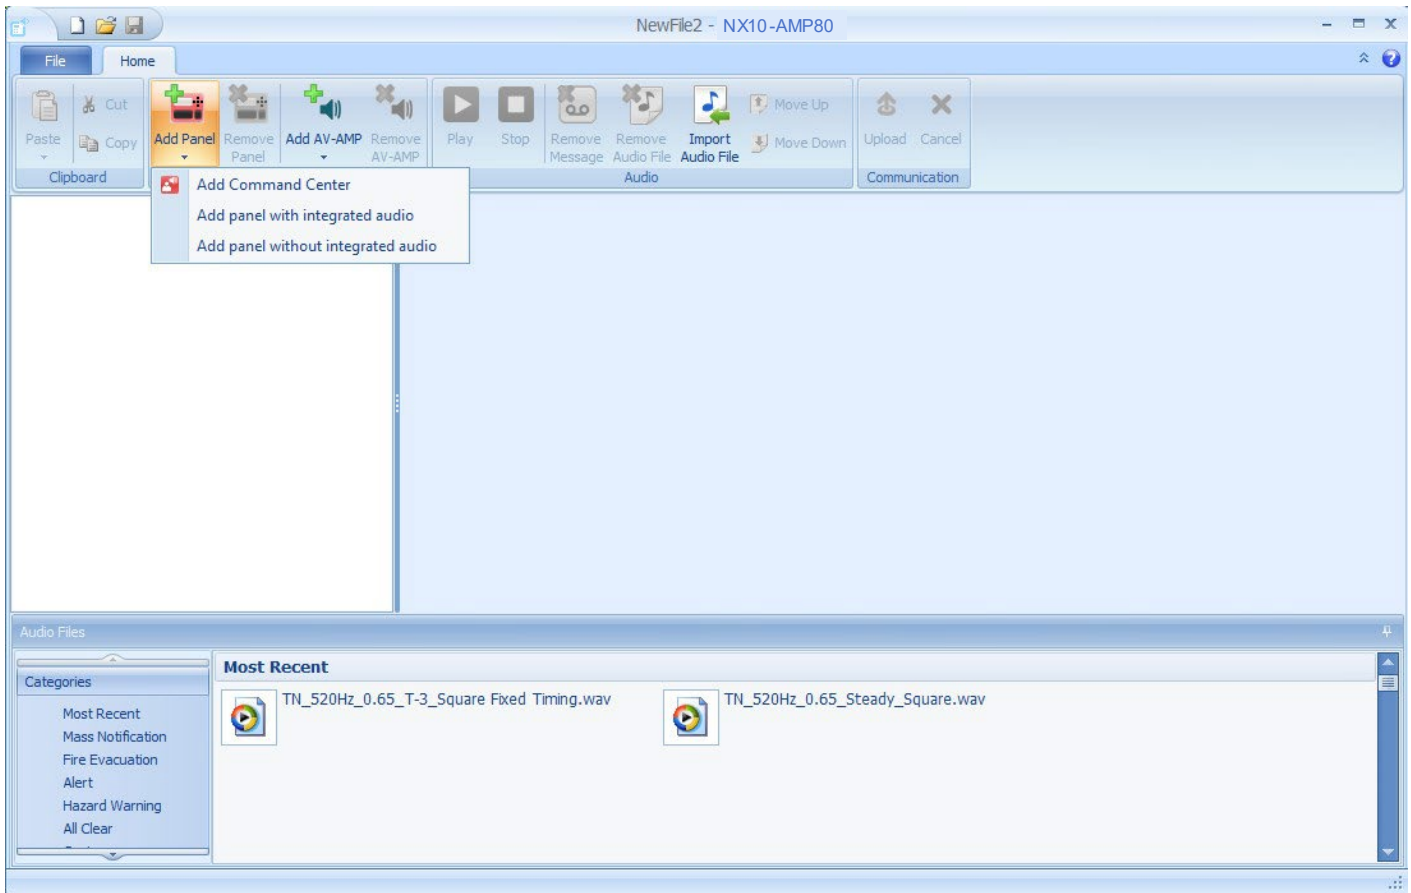


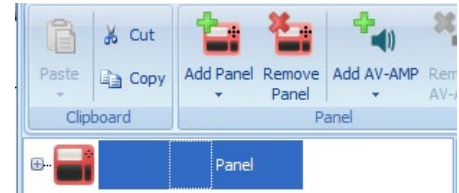



Figure 34 - Shield Neo NX10-AMP Software, Adding a Panel with Audio



*All references to Mass Notification and Hazard Warning messages are for future use only and must not be programmed.*

The opposite screen shows an Add panel with integrated audio selection. By clicking on the Plus expand  icon next to the panel  icon, the NX10-AMP can be programmed.



There are two areas to be programmed for the added NX10-AMP, one is the amplifier Properties , the other is the amplifier Messages NX10-AMP-80.



4.6.4.2.1.1 Properties

As the Add panel with integrated audio was selected, within the Properties area, the amplifier will already be setup as a peripheral bus amplifier (Standalone NX10-AMP not checked). The only other programming required in this is whether the NX10-AMP-80 will be utilizing AMP2 as a backup amplifier to AMP1 and whether the amplifier is being powered by an NX10-EM-PSU6 that is powering other NX10-AMP-80 audio amplifiers.

Properties

Standalone AV-AMP:

☐

Backup Mode Enabled:

☐

Common PSU (DGP/ Mx-VB2/4/8):

☒



*An NX10-EM-PSU6 can supply power to multiple NX10-AMP-80 audio amplifier modules. The power supply can provide a maximum of 80 Watts distributed to all connected NX10-AMP-80 modules.*

If AMP2 is to be a backup for AMP1, place a check mark within the Backup Mode Enable check box. If the NX10-AMP-80 audio amplifier is the only amplifier module connected to the NX10-EM-PSU6 power supply charger module, uncheck the check mark in the Common PSU (DGP/ Mx-VB2/4/8) box.

4.6.4.2.1.2 Messages

For information regarding message programming refer to Shield NX686-055 Amplifier Programming Manual. Below is an example of an NX10-AMP-80 audio amplifier message meeting NFPA 72 requirements. Two cycles of Temporal 3, followed by three cycles of a Fire Evacuation message, followed by continuous Temporal 3.

Message		Audio Section 1		Audio Section 2		Audio Section 3	
Sync	Repeats	File Name	Repeats	File Name	Repeats	File Name	Repeats
<input checked="" type="checkbox"/>	∞	TN_520Hz_0.65_T-3_Square.wav	2	Female Evac 1.wav	3	TN_520Hz_0.65_T-3_Square.wav	∞

Figure 35 - Example of NFPA 72 Evacuation Message



*Refer to the Shield NX686-055 NX10-AMP Programming Manual regarding the programming of an NX10-AMP-80 audio amplifier module via the Shield, Dynamix Tools, Neo NX10-AMP software.*

## 4.7 NX10-ACS-DSP Alphanumeric Graphical Display

The NX10-ACS-DSP alphanumeric graphical display, also referred to as keyboard display, is the colorized human interface with slide-in labels for status and control of the Neo NX fire alarm control panel (Figure 36). The NX10-ACS-DSP mounts in the top double aperture opening of the command centre's inner door and is connected to the system's NX10-ACS base card via a flat ribbon cable. The NX10-ACS-DSP is pre-mounted in this location in the pre-configured command centres.

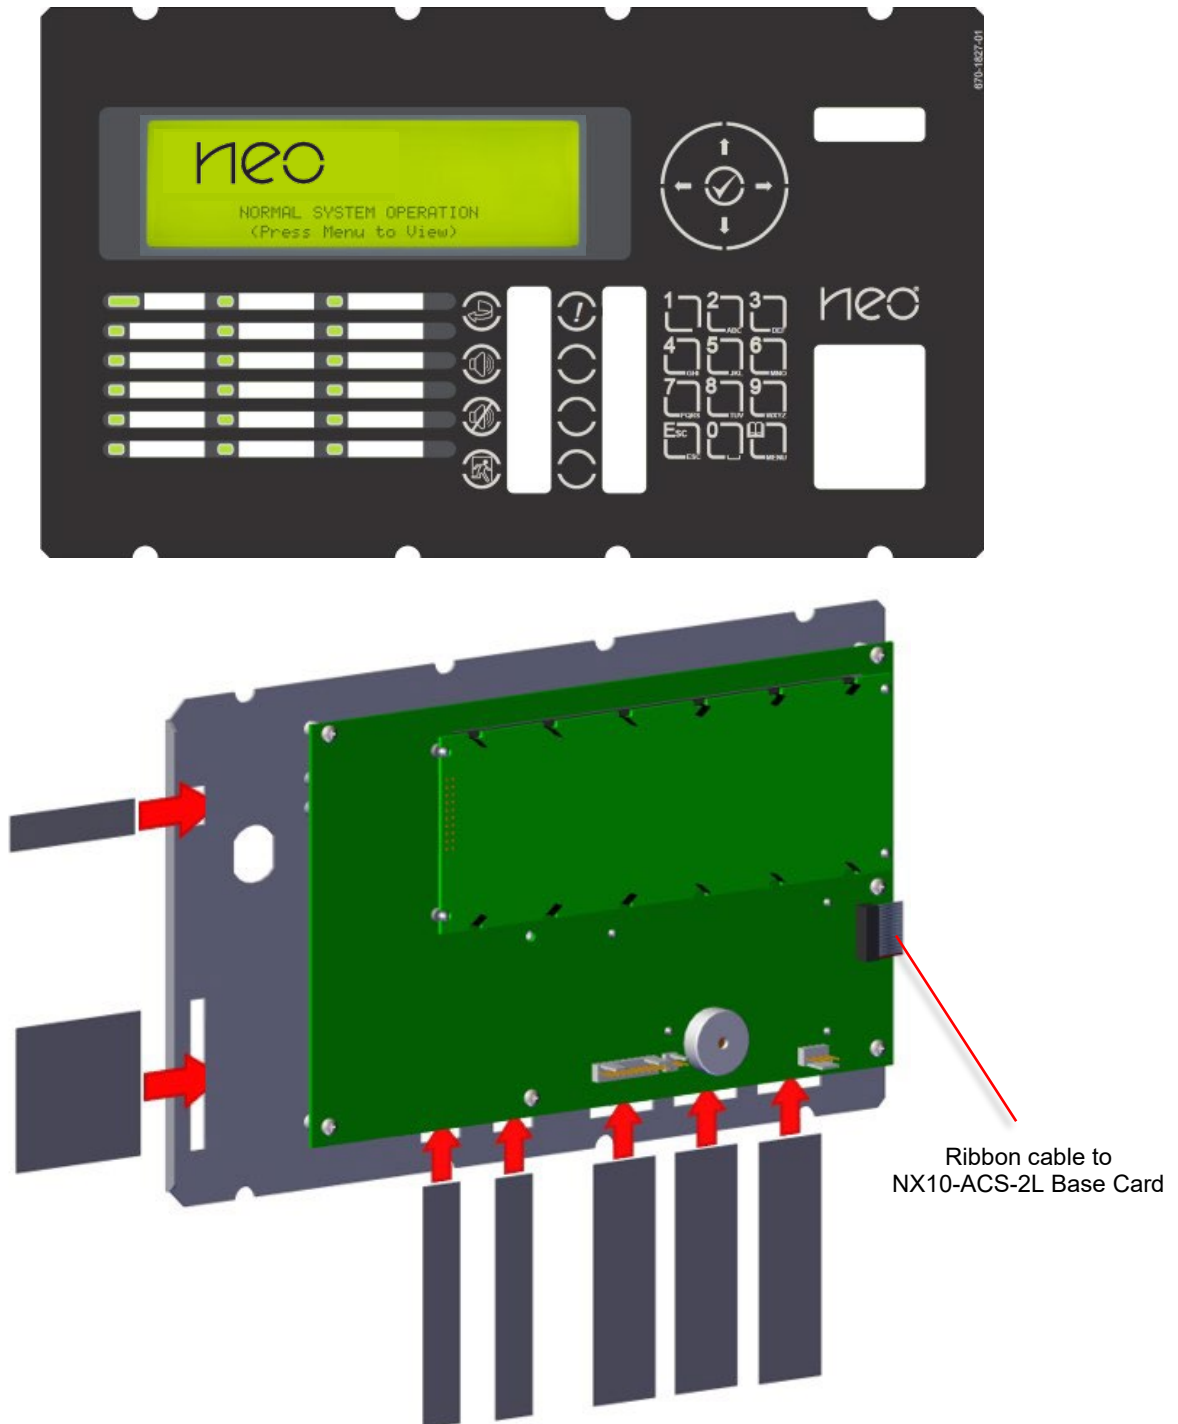


Figure 36 - NX10-ACS-DSP and Slide-In Labels



### 4.7.1 Installation

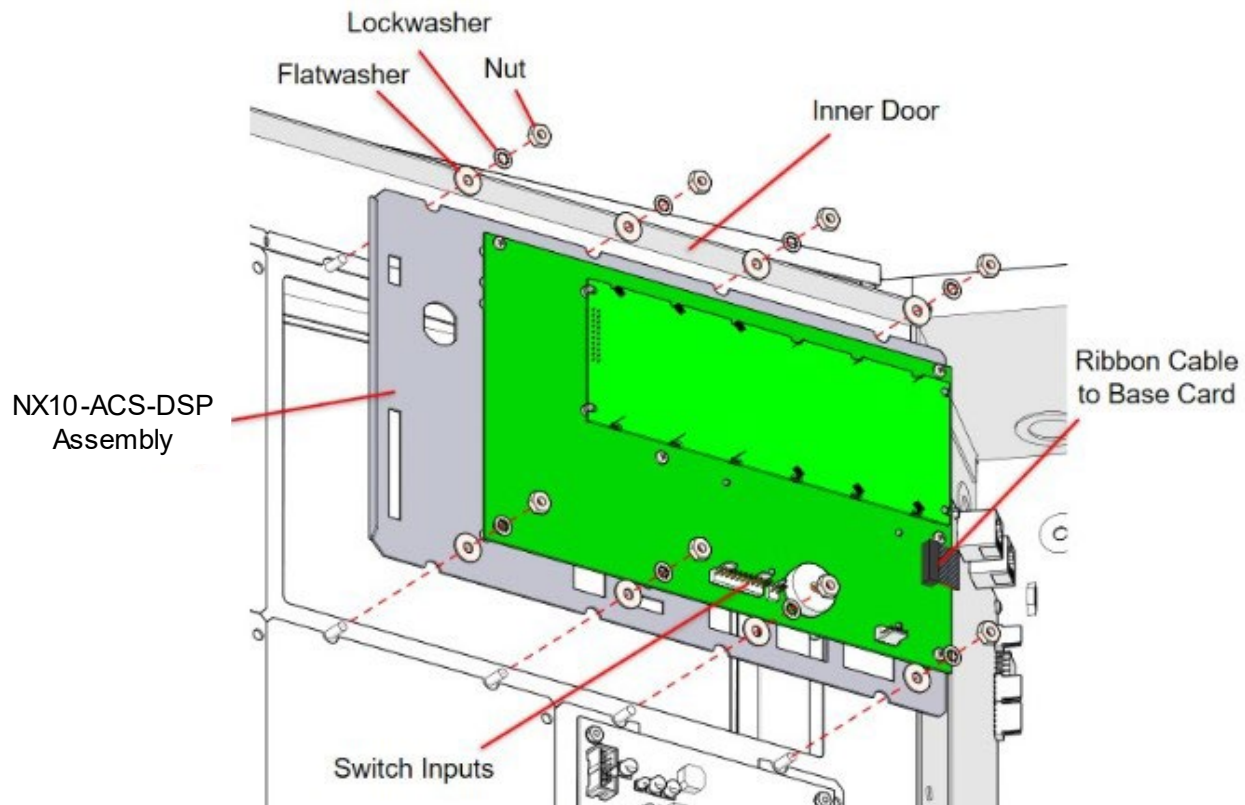


Figure 37 - NX10-ACS-DSP Module Installation

#### 4.7.1.1 Package Contents

- One (1) Alphanumeric Graphical Display Unit
- One (1) Plastic bag containing:
  - Eight (8) hex steel nuts
  - Eight (8) star lock washers
  - Eight (8) flat washers

#### 4.7.1.2 Remove

1. Disconnect AC and DC power.
2. Disconnect the 10-pin flat ribbon cable from NX10-ACS base card DISPLAY port.
3. Disconnect any switch inputs from the graphical display.
4. Remove the eight (8) hex nuts, lock washers and flat washers.
5. Remove the graphical display from the inner door assembly.
6. Transfer any custom label inserts to the new graphical display.

#### 4.7.1.3 Install

1. Place the keyboard display into the top double aperture location on the inner door assembly.
2. Install the supplied eight (8) flat washers, lock washers and hex nuts.
3. Connect any switch inputs to the graphical display.
4. Connect the 10-pin flat ribbon cable to the NX10-ACS base card DISPLAY port.
5. Install any customized display labels.

## 4.7.2 Wiring



***This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.***

### 4.7.2.1 NX10-ACS-DSP Switch Inputs

On the back of the NX10-ACS-DSP keyboard display are two (2) male plug-in connectors; one 10-pin and one 2-pin. The 10-pin male connector includes two (2) Common pins and eight (8) separate switch input pins. The second 2-pin male connector is a duplicate of the 10-pin's Common and input eight (Figure 38).

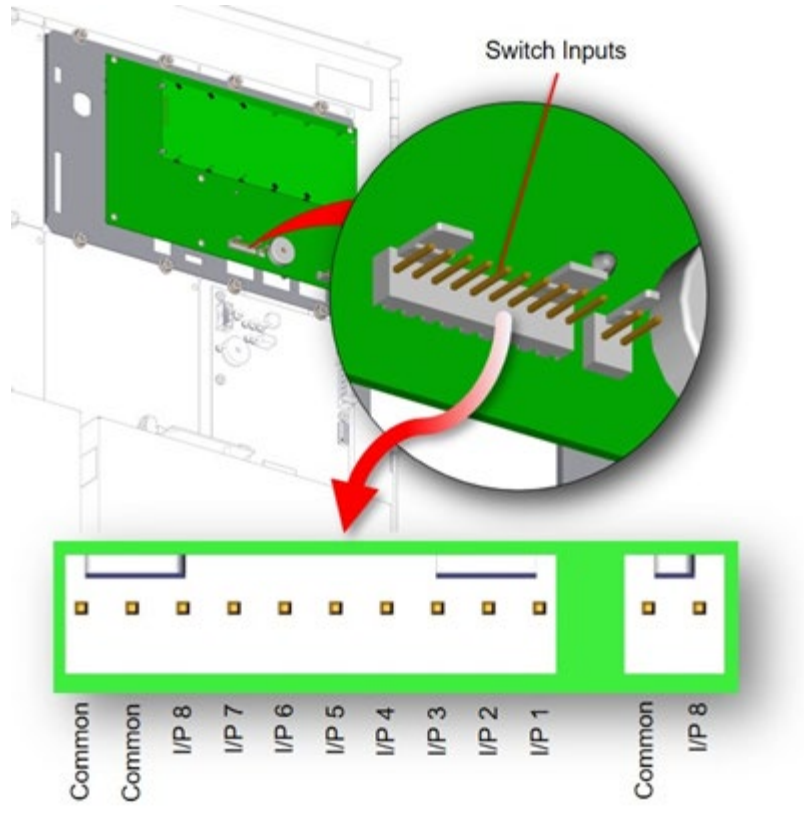


Figure 38 - NX10-ACS-DSP Switch Input Wiring



***Switch input contacts of the NX10-ACS-DSP keyboard display must be located within 20 feet of the NX10-ACS-DSP in the same room and in rigid conduit.***

4.7.2.2 NX10-ACS-DSP Switch Input Programming

Programming of switch inputs of the NX10-ACS-DSP keyboard display is done via the Shield, Dynamix Tools, Neo NX Config Tool. To program the switch inputs, access the NX10-ACS base card, On-Board Devices/Points programming area and configure a specific input action for each used input (Figure 39).

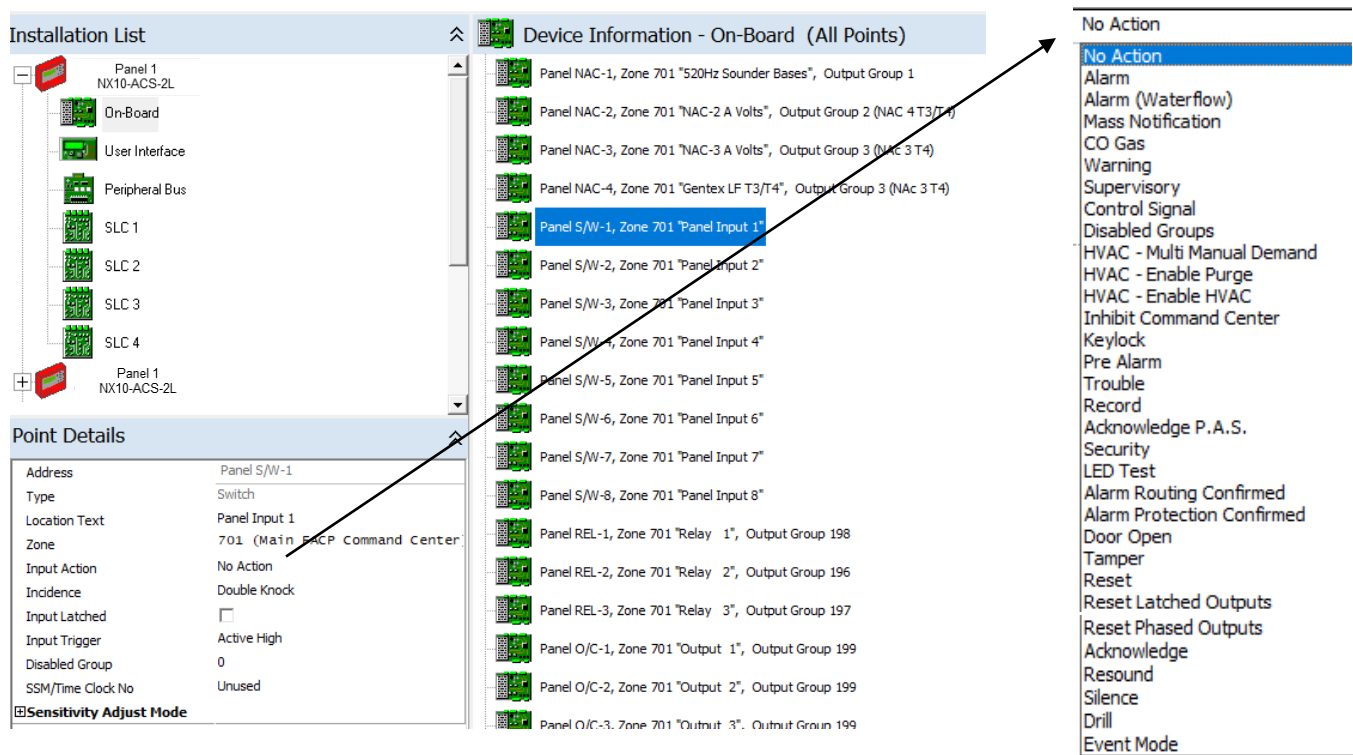


Figure 39 - Neo NX Config Tool, NX10-ACS-DSP Switch Input Programming



*The Neo NX fire alarm control panel is not approved for Mass Notification or Security applications, the use of these Input Actions is not permitted unless approved by the Authority Having Jurisdiction.*

*HVAC Input Actions are for smoke control purposes only.*

*Non-Latching inputs are not Listed and must not be utilized unless requested by the authority having legal control. If utilized, caution should be used as this device would not require human intervention to return the alarm condition to normal (non-alarm).*

In addition to assigning an Input Action to the input point, the input point can monitor for a relay contact closure (Active High) or a relay contact opening (Active Low). Default setting is to monitor for a relay contact closure (Active High) [see opposite].

Input Trigger	Active High
Disabled Group	Active Low

### 4.7.2.3 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
PL1	Base Card	10-Pin Flat Ribbon Cable with Connector for Base Card
PL3		4-Pin Male Connector, Unused
PL4	Common Common I/P 8 I/P 7 I/P 6 I/P 5 I/P 4 I/P 3 I/P 2 I/P 1	10-Pin Male Connector Common Voltage Common Voltage Input 8 Input 7 Input 6 Input 5 Input 4 Input 3 Input 2 Input 1
PL8	Common I/P	2-Pin Male Connector Common Voltage Input 8

### 4.7.2.4 Electrical Specifications

Supervision	Supervised POWER-LIMITED
Operating Voltage	24 VDC
PL4 and PL8 Common	5 VDC
Operating Current	Included within NX10-ACS Base Card Currents

### 4.7.3 LEDs

The NX10-ACS-DSP keyboard display includes twelve (12) predefined LED status indicators and six (6) field programmable LED indicators.









DESIGNATION	COLOR	VISUAL STATUS
ALARM	Red	Flashes whenever an alarm condition has occurred. Turns steady when ACK is pressed. (Only turns off when RESET is pressed).
PRE-ALARM	Yellow	Flashes to indicate that a detector has sensed the early signs consistent with an alarm condition. The levels of smoke or heat are not yet confirmed as an alarm. Turns steady when ACK is pressed. The indication automatically turns off when the condition is no longer present or when the levels change from pre-alarm to alarm.
DISABLE	Yellow	Turns on steady whenever a part of the system (zone, output, and/or individual point) has been disabled. Turns off when all disabled conditions have been re-enabled.
TEST	Yellow	Turns on steady whenever a zone(s) or device(s) is in a walk test state. Turns off when the test condition has been cancelled.
P.A.S.	Yellow	Turns on when the POSITIVE ALARM SEQUENCE feature is used.
POWER	Green	On steady when AC Power is available. Flashes when AC Power lost. Off when not powered.
SUPERVISORY	Yellow	Flashes whenever a supervisory condition has occurred. Turns steady when ACK is pressed. The indication automatically turns off (unless a latching Supervisory event) when the condition is no longer present.
NAC SILENCED	Yellow	Turns on steady when the SILENCE key is pressed, and silence able notification appliance circuit outputs are turned off. Turns off when RESOUND or another zone or device enters an alarm condition causing the reactivation of the silenced outputs.
NAC TROUBLE	Yellow	Flashes whenever there is a trouble condition with one or more NAC circuits, including SLC NAC modules (System Trouble LED will also be activated). Turns steady when ACK is pressed. The indication automatically turns off when the trouble condition is no longer present.
NAC DISABLED	Yellow	Turns on steady whenever one or more notification appliance circuits have been disabled, including SLC NAC modules. Turns off when all disabled notification appliance circuits have been re-enabled.
SYSTEM TROUBLE	Yellow	Flashes whenever there is a trouble condition. Turns steady when ACK is pressed. The indication automatically turns off when the condition is no longer present.
PROGRAMMING	Yellow	Turns on steady whenever the panel is in programming mode. Turns off when the panel is returned to normal operation.
FUNCTION 1	Red	Configurable LED. Default is not used.
FUNCTION 2-6	Yellow	Configurable LEDs. Default is not used.

#### 4.7.4 Programmable LEDs and Buttons

NX10-ACS-DSP keyboard display field programmable LEDs and control buttons are configured using the Shield, Dynamix Tools, Neo NX Config Tool. After the LEDs and control buttons are programmed, the NX10-ACS-DSP keyboard display slide-in labels can be changed to accommodate the defining of the added LEDs and control buttons (Figure 36).

#### 4.7.5 Control Buttons

The NX10-ACS-DSP keyboard display includes five (5) predefined control buttons and three (3) field programmable buttons.

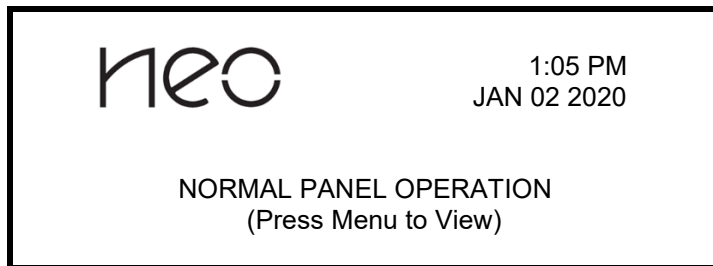
SYMBOL	FUNCTION	OPERATION
	RESET	Press to reset the panel from a latched alarm (or other programmed latched input i.e., latching trouble or supervisory condition) or press to deactivate a Drill condition.
	ACK	Press to acknowledge an alarm, CO, supervisory and/or trouble condition. LED indications on the panel change from flashing to steady and zone/device display removes the word "New." All current conditions are simultaneously acknowledged "Global Acknowledgement."
	RESOUND	Press to reactivate any silenced notification appliances connected to system NAC circuits or any output programmed as "Silence able."
	SILENCE	Press to silence active notification appliances connected to system NAC circuits or any output programmed as "Silence able."
	DRILL (Hold 2 seconds)	Press and hold for 2 seconds to activate a Drill condition. All notification appliance circuits programmed to activate on Drill will be activated. Press and hold for 2 seconds to deactivate a drill condition.
	F1, F2, F3	Programmable function (control) buttons.
	Navigation Keys	UP, DOWN, LEFT and RIGHT arrow keys are used to scroll through multiple status events, device details, and to navigate through the various displays and menus. Check Mark (✓) "Enter" key confirms entry of numeric or letter information. In addition, confirms selection of menu options and changes some of the configuration options. It is also used to view detailed information regarding events.
	Keypad	NUMBER keys are used during menu operations to enter numbers. During specific programming options these are also used for alphabet entry. ESC key is used to exit a menu. MENU key is used anytime to display or return to the menu options.

#### 4.7.6 Piezo Sounder

The NX10-ACS-DSP keyboard display includes a Piezo sounder for audible event status indications.

CONDITION	AUDIBLE STATUS
Alarm	Continuous tone from the piezo sounder with associated red alarm LED
CO Alarm	Continuous tone from the piezo sounder. If programmed, associated red or yellow LED
Pre-Alarm	Continuous tone from the piezo sounder with associated pre-alarm red LED
Supervisory	Pulsed piezo sounder with associated supervisory LED
Trouble	Pulsed piezo sounder with associated system trouble LED

#### 4.7.7 Graphical LCD Event Status Indications



The graphical LCD display provides detailed information on the operational status of the FACP. Above is an example of the normal standby state of the display.

Event status display/information of the graphical LCD display is prioritized with alarms and CO events having the highest priority.

- Alarms<sup>1</sup>
- CO Alarm <sup>1</sup>
- Pre-Alarms<sup>1</sup>
- Supervisory Events<sup>2</sup>
- Trouble Events<sup>3</sup>
- Other Events including Disable, Test and Warning Conditions<sup>4</sup>

##### 4.7.7.1 Alarm and CO Conditions

To minimize confusion and only provide pertinent information during emergency situations, the FACP when in an alarm state will only display fire alarm and if applicable CO and supervisory events. The display will also provide a tally of these three (3) events. All other non-emergency events such as troubles, disabled zones/points, etc. are suppressed. These events, however, can be viewed at any time by accessing the panel menu and selecting the view button.

Different messages are displayed during an alarm event, the message types depend on whether the alarm has been acknowledged and whether a CO and/or supervisory event is present.

##### 4.7.7.1.1 Unacknowledged and Acknowledged Alarms with/without CO or Supervisory Events

When the system registers an alarm event, the alarm LED will flash, the internal buzzer will sound (continuously), and the display will indicate "NEW ALARM IN ZONE xxxx" (unacknowledged event). In addition, the zone in alarm message (32 characters), the device in alarm message (26 characters) and the type of device for the specific zone/device in alarm will be displayed. The bottom line of the display will be highlighted and will indicate a tally of the number of alarms, CO events and supervisory events. Also, the notification appliances, relays, and other outputs, depending upon programming options selected by the installer will activate.



During an alarm event, the display will only indicate the first alarm and a tally of any additional alarms, CO events and supervisory events. If multiple alarm, CO, and supervisory events are present, the additional events may be viewed by scrolling (Scroll ↓) through the display. The (Scroll ↓) feature is only active when multiple viewable events are present.

Example of an unacknowledged alarm event:

NEW ALARM IN ZONE 0001			< New unacknowledged alarm message
First Floor			< Zone alarm text (32 Characters)
Front Lobby Exit	[PULL STATION]		< Device text (26 Characters) / type of device
(Press → for device details)			< Further device details
ALARMS: 1	CO: 0	SUPERVISORY: 0	< # Alarms, # CO and # Supervisory events

Example of unacknowledged multiple alarms, CO, and supervisory events:

NEW ALARM IN ZONE 0001		(Scroll ↓)	< 1st New alarm message, w/Scroll active
First Floor			< Zone alarm text (32 Characters)
Front Lobby Exit	[PULL STATION]		< Device text (26 Characters) / Pre-assigned type of device (English or French)
(Press → for device details)			< Further device details
ALARMS: 2	CO: 0	SUPERVISORY: 1	< # Alarms, # CO and # Supervisory events

Pressing the “ACK” button will acknowledge the alarm condition(s). This changes the red Alarm LED to steady, the internal buzzer silences, and the display will show “ALARM IN ZONE xxxx” (acknowledged event) with zone/device messages for the specific device in alarm.



*The Neo NX fire alarm control panel acknowledges on a “Global” basis; all active events are acknowledged with the single activation of the acknowledge button.*

After acknowledgement, the display will indicate the first alarm and a tally of any additional alarms, CO, and supervisory events. To view additional alarm, CO, and supervisory events the user must scroll (Scroll ↓) through the display. Displayed events are based on system priority and the order in which the panel received the individual event (i.e.: alarms are listed first then CO and then supervisory each are labelled; 1st Alarm, 2nd Alarm, 3rd Alarm, 4th Alarm, 1st CO, 2nd CO, 1st Supervisory, 2nd Supervisory, etc.).



*The (Scroll ↓) feature is only active when multiple viewable events are present. When using the scroll buttons, if the buttons are not activated for approximately 15 seconds, the display will return to the 1st Alarm message.*

Example of acknowledged single alarm event:

ALARM IN ZONE 0001			< Acknowledged alarm message
First Floor			< Zone alarm text (32 Characters)
Front Lobby Exit	[PULL STATION]		< Device text (26 Characters) / Pre-assigned type of device
(Press → for device details)			< Further device details
ALARMS: 1	CO: 0	SUPERVISORY: 0	< # Alarms # CO and # Supervisory events



Example of acknowledged multiple alarm and supervisory events:

1st ALARM IN ZONE 0001 (Scroll ↓)	< 1st alarm message, w/scroll active
First Floor	< Zone alarm text (32 Characters)
Front Lobby Exit [PULL STATION]	< Device text (26 Characters) / Pre-assigned type of device
(Press → for device details)	< Further device details
ALARMS: 2 CO: 0 SUPERVISORY: 1	< # Alarms # CO and # Supervisory events

If a new alarm, CO, or supervisory event occurs after a previously acknowledged alarm, CO and/or supervisory event, the event type LED (alarm, CO or supervisory) will begin to flash, the internal buzzer will resound (continuously for alarm or CO and pulsed for supervisory), and the alarm, CO and/or supervisory tally will increase. The display, however, will not advance to the new event instead the display will continue showing the 1st Alarm as this is the highest priority and is required by NFPA 72. The new event may be acknowledged by simply pressing the “ACK” button and may be viewed by using the scroll (Scroll ↓) button.



*If a supervisory event occurs without an alarm or CO event refer to the below Non-Alarm, Non-CO Conditions section.*

#### 4.7.7.2 Non-Alarm, Non-CO Conditions

##### 4.7.7.2.1 Unacknowledged and Acknowledged Non-Alarm, Non-CO Events

When the system registers a non-alarm or non-CO event (pre-alarm, warning, supervisory and/or trouble condition), the event LED will flash, the internal buzzer will sound (pulsing) and the display will indicate “NEW xxxxxx (event type), ZONE xxxx” (unacknowledged assigned zone number), the zone event message (32 characters), the device event message (26 characters) and the type of device for the specific event. The bottom line of the display will be highlighted and will indicate a tally of the number of events active (Warnings [WRNs], Supervisory [SUPRVs], Disables [DISBLs] and Troubles [TRBLs]) prior to the event being acknowledged.

Example of an unacknowledged pre-alarm event:

NEW PRE-ALARM ZONE 0005	< New pre-alarm message (unacknowledged)
First Floor	< Zone pre-alarm text (32 Characters)
Electrical Closet Rm 101 [MULTI.SENSOR]	< Device text (26 Characters) / Pre-assigned type of device
(Press → for device details)	< Further device details
WRNs: 0 SUPRVs: 0 DISBLs: 0 TRBLs: 0	< # Warnings # Supervisory # Disables and # Troubles

Example of an unacknowledged warning event (system drill):

NEW WARNING ZONE 0701	< New warning message (unacknowledged)
Fire Alarm Control Panel	< Zone warning text (32 Characters)
Drill Switch [SWITCH ]	< Device text (26 Characters) / Pre-assigned type of device
(Press → for device details)	< Further device details
WRNs: 1 SUPRVs: 0 DISBLs: 0 TRBLs: 0	< # Warnings # Supervisory # Disables and # Troubles

Example of an unacknowledged supervisory event when no alarms or CO events are present (refer to Alarm and CO Conditions section of this manual for displaying supervisory events with alarms and/or CO events present):

```

NEW SUPERVISORY  ZONE 0020
Electrical Room
Sprinkler System Riser      [SWITCH(MON.)]

(Press → for device details)
WRNs: 0  SUPRVs: 1  DISBLs: 0  TRBLs: 0

```

- < New supervisory message (unacknowledged)
- < Zone supervisory text (32 Characters)
- < Device text (26 Characters) / Pre-assigned type of device
- < Further device details
- < # Warnings # Supervisory # Disables and # Troubles

Example of an unacknowledged trouble event:

```

NEW TROUBLE  ZONE 0010
First Floor West Wing
Conference Room      [PHOTO SMOKE ]

DEVICE MISSING
(Press → for device details)
WRNs: 0  SUPRVs: 0  DISBLs: 0  TRBLs: 1

```

- < New trouble message (unacknowledged)
- < Zone trouble text (32 Characters)
- < Device text (26 Characters) / Pre-assigned type of device
- < Type of Trouble
- < Further device details
- < # Warnings # Supervisory # Disables and # Troubles

Example of multiple unacknowledged events:

```

NEW SUPERVISORY  ZONE 0020 (Scroll ↓)
Electrical Room
Sprinkler System Riser      [SWITCH(MON.)]

(Press → for device details)
WRNs: 0  SUPRVs: 1  DISBLs: 0  TRBLs: 2

```

- < New supervisory message, w/scroll active
- < Zone supervisory text (32 Characters)
- < Device text (26 Characters) / Pre-assigned type of device
- < Further device details
- < # Warnings # Supervisory # Disables and # Troubles

During unacknowledged, non-alarm and non-CO events, the display only indicates the highest priority event and a tally of any additional events. The additional events may be viewed by scrolling (Scroll ↓) through the display. The scroll (Scroll ↓) feature is only active when multiple unacknowledged viewable events are present.

Pressing the “ACK” button will acknowledge the event condition(s). This changes the event LED (pre-alarm, supervisory, disable, system trouble) to steady, the internal buzzer will silence, and the display will show “Off-Normal State: Total.” Off-normal state totals are listed in order of system priority, Pre-Alarms, Warnings, Supervisory, Troubles and Disabled. Off-normal state totals are only displayed if an active event within that priority is present on the FACP.



*The Neo NX fire alarm control panel acknowledges on a “Global” basis; all events are acknowledged with the single activation of the acknowledge button.*

Example of acknowledged non-alarm events (no pre-alarm events present on the system):

```

[Off-Normal State : Total]      (Scroll ↓)

WARNINGS      : 1
SUPERVISORY   : 1
TROUBLES      : 2
DISABLED      : 4

(Press ✓ to select)

```

- < Off-Normal line, w/scroll  
(Scroll shown only with multiple events)
- < More info pertaining to highlighted event

#### 4.7.7.3 Disabled Condition

If any zone, input device or output device has been disabled, the DISABLE LED and if programmed via the Shield, Dynamix Tools, Neo NX Config Tool, the TROUBLE LED will illuminate. In addition, the NAC DISABLE LED will illuminate if one or more notification appliance circuits or NAC SLC devices have been disabled. The display will indicate “NEW DISABLED ZONE xxxx” and the zone and device messages will be displayed. In addition, the lower half of the display will indicate the quantity of disabled devices (i.e., DISBLs: x”). To view all disabled devices simply scroll through the list using the navigation down arrow button.

Unacknowledged Zone Disablement with Multiple Devices:

```
NEW DISABLED ZONE 0001 (Scroll ↓)
FIRST FLOOR
MAIN LOBBY EXIT [PULL STATION]

(Press → for device details)
WRNs: 0 SUPRVs: 0 DISBLs: 3 TRBLs: 0
```

- < New unacknowledged Disabled message
- < Disabled zone text (32 Characters)
- < Disabled device text (26 Characters) / Pre-assigned type of device
- < Further device details
- < # Warnings # Supervisory # Disables and # Troubles

Unacknowledged Device Disablement:

```
NEW DISABLED ZONE 0001
FIRST FLOOR
MAIN LOBBY EXIT [PULL STATION]

(Press → for device details)
WRNs: 0 SUPRVs: 0 DISBLs: 1 TRBLs: 0
```

- < New unacknowledged Disabled message
- < Disabled zone text (32 Characters)
- < Disabled device text (26 Characters) / Pre-assigned type of device
- < Further device details
- < # Warnings # Supervisory # Disables and # Troubles

Pressing the “ACK” button will acknowledge the disable condition(s) and change the LEDs to steady. In addition, the display will change to showing “Off-Normal State: Total.”

Acknowledged Disablements:

```
[Off-Normal State : Total]

DISABLED : 3

(Press ✓ to select)
```

- < Off-Normal line
- < Off-Normal type and event total  
Only active off-normal events are displayed.
- < More info pertaining to highlighted event

When the disabled conditions are removed the appropriate indications are cleared. When all disabled conditions are removed, the DISABLE Indicator is also turned off and the display will revert to Normal System, if no other off-normal condition is present on the FACP.

To obtain detailed information about the disabled device, press the ➔ button on the keypad navigation.

```
NEW DISABLED ZONE 0001 (Scroll ↓)
FIRST FLOOR
MAIN LOBBY EXIT [PULL STATION]
NODE 1
JAN 30 2020 11:00 AM SLC 1 Adr 001.0
WRNs: 0 SUPRVs: 0 DISBLs: 3 TRBLs: 0
```

- < New unacknowledged Disabled message
- < Disabled zone text (32 Characters)
- < Disabled device text (26 Characters) / Pre-assigned type of device
- < Node # of device location
- < Disabled device details
- < # Warnings # Supervisory # Disables and # Troubles

#### 4.7.7.4 Obtaining Detailed Device Information During Events

When any event message display indicates (Press → for device details), pressing ➔ button on the keypad navigation keys will allow the user to view further detailed information about the event/device.

Example of an event message display prior to device details lookup:

ALARM IN ZONE 0001		< Alarm message
First Floor		< Zone alarm text (32 Characters)
Front Lobby Exit	[PULL STATION]	< Device text (26 Characters) / Pre-assigned type of device
(Press → for device details)		< Further device details
ALARMS: 2	CO: 0	SUPERVISORY: 0
		< # Alarms # CO and # Supervisory events

Example of a device details display:

ALARM IN ZONE 0001		< Alarm message
First Floor		< Zone alarm text (32 Characters)
Front Lobby Exit	[PULL STATION]	< Device text (26 Characters) / Pre-assigned type of device
NODE 1		< Node # of device location
JAN 30 2020	9:42 AM	SLC 1
		Adr 001.0
ALARMS: 2	CO: 0	SUPERVISORY: 1
		< Alarm device details
		< # Alarms # CO and # Supervisory events

The above details display indicates that Node 1, SLC loop 1, device address 001.0 alarmed on Jan. 30, 2020, at 9:42 AM. After approximately 15 seconds this display will revert to its original alarm display.

When the “Off-Normal State: Total” display indicates (Press ✓ to select), pressing the ✓ button on the keypad navigation keys will allow the user to view further detailed information about the specific off-normal event highlighted. Pressing the down arrow (↓) button on the keypad navigation keys will allow the user to scroll (Scroll ↓) to other off-normal event types and obtain further detailed information pertaining to its events by pressing the ✓ button on the keypad navigation keys.

Example of “Off-Normal State: Total” display prior to selecting event detail information:

[Off-Normal State : Total]	(Scroll ↓)	< Off-Normal line, w/scroll
SUPERVISORY : 1		< Off-Normal event type and total events
TROUBLES : 2		(Only active off-normal events are displayed)
(Press ✓ to select)		< Detailed info pertaining to the highlighted event

Example of detailed information pertaining to a specific off-normal event:

SUPERVISORY ZONE 0001		< Supervisory message
Electrical Room		< Zone supervisory text (32 Characters)
Sprinkler System Riser	[SWITCH(MON.)]	< Device text (26 Characters) / Pre-assigned type of device
(Press → for device details)		< Further device details

If the display indicates (Press → for device details), pressing the → button on the keypad navigation keys will allow the user to view further device details about the event/device.

Example of a device detailed display pertaining to a specific off-normal event:

SUPERVISORY ZONE 0001		< Supervisory message
Electrical Room		< Zone supervisory text (32 Characters)
Sprinkler System Riser	[SWITCH(MON.)]	< Device text (26 Characters) / Pre-assigned type of device
NODE 1		< Node # of device location
JAN 30 2020	10:20 AM	SLC 1
		Adr 005.0
		< Supervisory device details

## 4.8 NX10-MIC Microphone Assembly

The NX10-MIC microphone assembly allows live voice communications to be broadcasted from a command centre. In the pre-configured command centres, the NX10-MIC microphone assembly is preinstalled in the third row, right single aperture location of the command centre inner door.

In a peripheral bus (PBUS) audio amplifier installation, the NX10-MIC microphone assembly is connected to the Mic Bus Amp (microphone bus amplifier) or Remote Mic Bus Amp (remote microphone bus amplifier).



*In hardwired audio amplifier installation and single peripheral bus (PBUS) amplifier installation (amplifier configured as a Floor Amp (floor [area] amplifier), the NX10-MIC microphone assembly wires to the single NX10-AMP-80 audio amplifier. In this method of wiring, keying the microphone will allow paging to the two (2) on-board audio amplifier circuits (speaker circuits).*

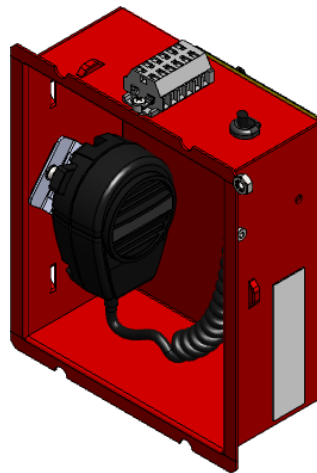


Figure 40 - NX10-MIC Microphone Assembly

### 4.8.1 Installation

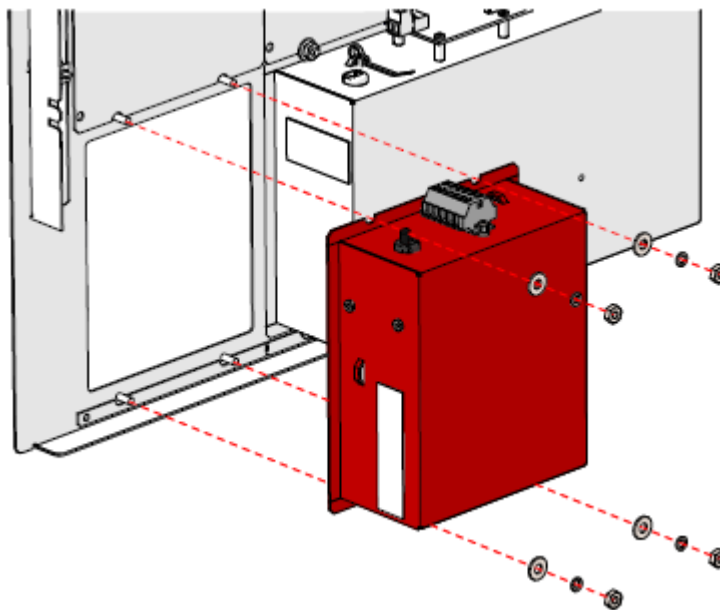


Figure 41 - NX10-MIC Microphone Assembly Installation



#### 4.8.2.1 Terminal Summary

Not Visible Terminal Designation	Terminal Block	Terminals
TB1 – TB6	6-Pin 2-Way Clamp T/B 1 T/B 2 T/B 3 T/B 4 T/B 5 T/B 6	Prewired to 6-Pin Microphone Flat Ribbon Cable Audio – Audio + Key Mic –, Link to T/B6 Key Mic + Shield 0V, Link to T/B 3

## 5 NX10-TEL2 Firefighter Telephone Assemblies and Riser

To incorporate firefighter telephones into a modular command centre, the command centre will require a firefighter telephone assembly and a NX10-TEL2-RISE firefighter telephone riser module. The preconfigured command centres already include the NX10-TEL2-MCCS firefighter telephone assembly and will only need the NX10-TEL2-RISE firefighter telephone riser module. Up to two (2) firefighter telephone risers can be utilized, and they can either be mounted in the modular command centre enclosure or within dedicated enclosures. In addition to the firefighter telephone assembly and firefighter telephone riser(s), field addressable firefighter telephone modules will be required.

### 5.1 NX10-TEL2-MCCS(/P) Firefighter Telephone Assemblies

Shield offers two (2) types of command centre firefighter telephone assembly's; an NX10-TEL2-MCCS and an NX10-TEL2-MCCS/P. The only difference between these two (2) assemblies is the NX10-TEL2-MCCS/P includes a push-to-talk button on the firefighter telephone handset. Each of the assemblies contains a firefighter telephone, a telephone enclosure and a NX10-TEL2-MCCS telephone interface module. In the pre-configured firefighter telephone command centres an NX10-TEL2-MCCS is preinstalled in the third-row double aperture location of the command centre inner door.



*Command centre firefighter telephones are always active (in use), and immediately count towards the maximum of six (6) active firefighter telephones. To maintain optimum firefighter telephone system performance, Shield recommends the use of the NX10-TEL2-MCCS/P push-to-talk option when multiple command centre firefighter telephones are required as this would reduce the number of active telephones (telephone is only active when the push-to-talk button is pressed).*

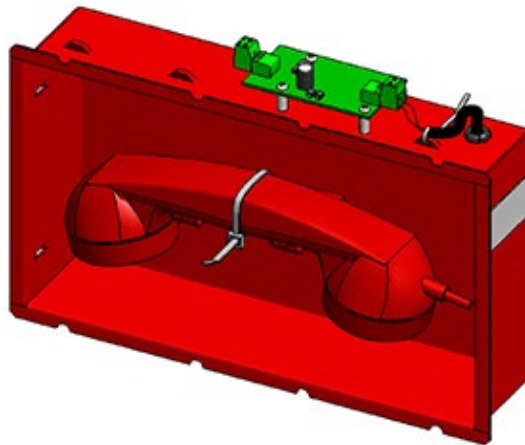


Figure 42 - NX10-TEL2-MCCS (/P) Firefighter Telephone Assembly



### 5.1.1 Installation

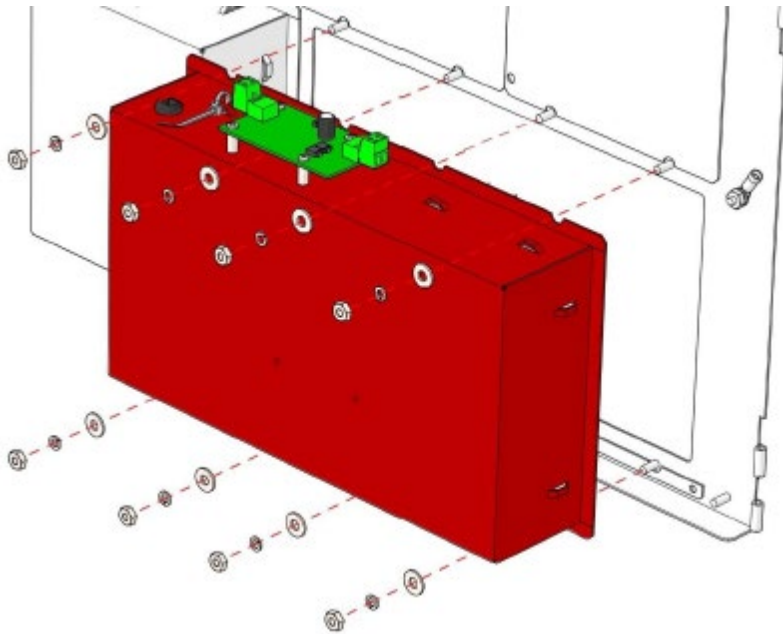


Figure 43 - NX10-TEL2-MCCS (/P) Firefighter Telephone Assembly Installation

#### 5.1.1.1 Package Contents

To install an NX10-TEL2-MCCS (/P) Firefighter Telephone Assembly, carefully unpack the assembly from its box.

#### 5.1.1.2 Remove

1. Disconnect AC and DC power.
2. Unplug the 2-pin terminal block from the telephone interface module that leads to the NX10-TEL2-RISE module.
3. Remove the eight (8) hex steel nuts, star lock washers and washers securing the NX10-TEL2-MCCS (/P) assembly to the enclosure's inner door and remove the NX10-TEL2-MCCS (/P) assembly from the double aperture location.

#### 5.1.1.3 Install

1. Remove the eight (8) hex steel nuts, star lock washers and washers from the male studs of the left, third row double aperture location of the command centre inner door.
2. Place the NX10-TEL2-MCCS (/P) assembly between the male studs and secure with the removed eight (8) washers, star washers and hex steel nuts (Figure 43).

### 5.1.2 Wiring

Utilizing twisted shielded cable wire the NX10-TEL2-MCCS (/P) Telephone OUT – and + to the NX10-TEL2-RISE firefighter telephone riser module TB4, CC1 or CC2 + and – command centre firefighter telephone inputs. Connect the shield of the cable to one of the ground studs located within the command centre backbox.



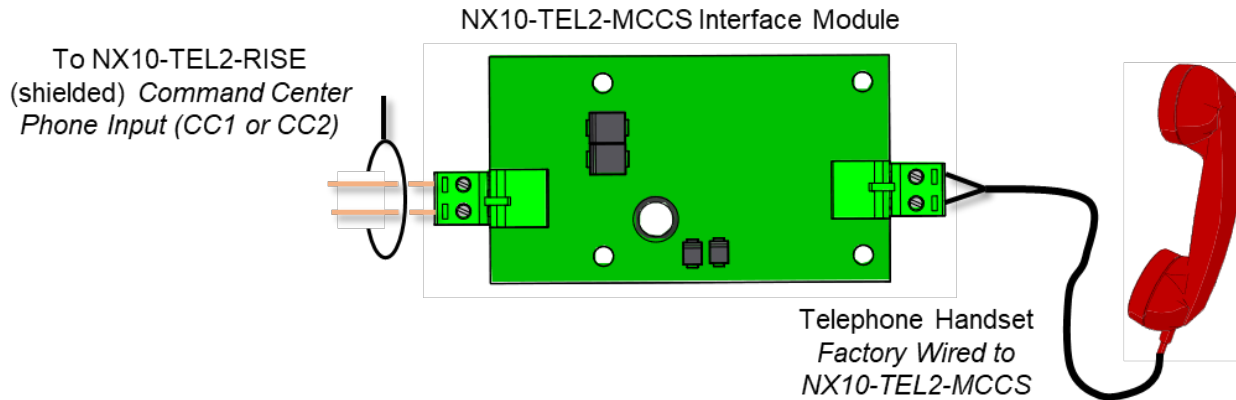


Figure 44 - NX10-TEL2-MCCS Telephone Interface Module Wiring

### 5.1.2.1 Terminal Summary

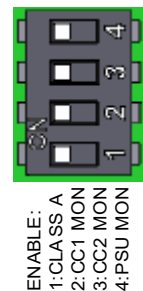
Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB1	LOCAL TEL – LOCAL TEL +	Command Centre Firefighter Telephone Negative Command Centre Firefighter Telephone Positive
TB3	PHONE OUT- PHONE OUT+	Command Centre Firefighter Telephone OUT Negative Command Centre Firefighter Telephone OUT Positive

### 5.1.2.2 Electrical Specifications

Supervision	Supervised for Short Circuit, Open Circuit and Ground Fault POWER-LIMITED
Wiring Classification	Class B
Impedance values for testing at which ground faults are annunciated	0 Ohms

### 5.1.3 NX10-TEL2-RISE Module Command Centre Phone Configuration

After wiring the command centre firefighter telephone assembly(s) to the NX10-TEL2-RISE module, the NX10-TEL2-RISE module will require configuration. Located on the NX10-TEL2-RISE module is a 4-position DIP switch, DIP switches 2 and 3 are for activating the monitoring of command centre firefighter phones, CC1 MON is for command centre 1 firefighter telephone monitoring and CC2 MON is for command centre 2 firefighter telephone monitoring. To activate command centre 1 firefighter telephone monitoring, slide DIP switch 2 from the OFF position to the ON position. Likewise, to activate the command centre 2 firefighter telephone monitoring, slide DIP switch 3 from the OFF position to the ON position (see opposite).



## 5.2 NX10-TEL2-RISE Firefighter Telephone Riser Module

The NX10-TEL2-RISE firefighter telephone riser module provides a party line riser for the connection of addressable firefighter telephone modules. The NX10-TEL2-RISE firefighter telephone riser can support a maximum of 250 master addressable firefighter telephones and/or addressable conventional firefighter telephone interface modules. Up to two (2) NX10-TEL2-RISE modules (maximum 500 addressable firefighter telephone modules) can be utilized when an installation requires more than 250 addressable firefighter telephone modules or if the installation requires more than one firefighter telephone riser. Each NX10-TEL2-RISE firefighter telephone riser module can support two (2) NX10-TEL2-MCCS (/P) command centre firefighter telephones.

The NX10-TEL2-RISE module can be interfaced to a Shield audio evacuation system allowing firefighter telephones to be patched to installation speakers via the command centre operator.

### 5.2.1 Installation

The NX10-TEL2-RISE firefighter telephone riser module can be mounted in either the NX10-CC01 (3x3) or NX10-CC02 (3x5) command center enclosure. In addition, the module can be mounted in a dedicated AXM-009 shallow peripheral card enclosure or be purchased preinstalled in a dedicated enclosure (NX10-TEL2-CAB or NX10-TEL2-REM) with/without an integral power supply charger (NX10-EM-PSU6).



**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.**

**Failure to tighten the panhead screws will defeat the protection circuitry designed to protect the module from damage due to lightning and static electricity.**

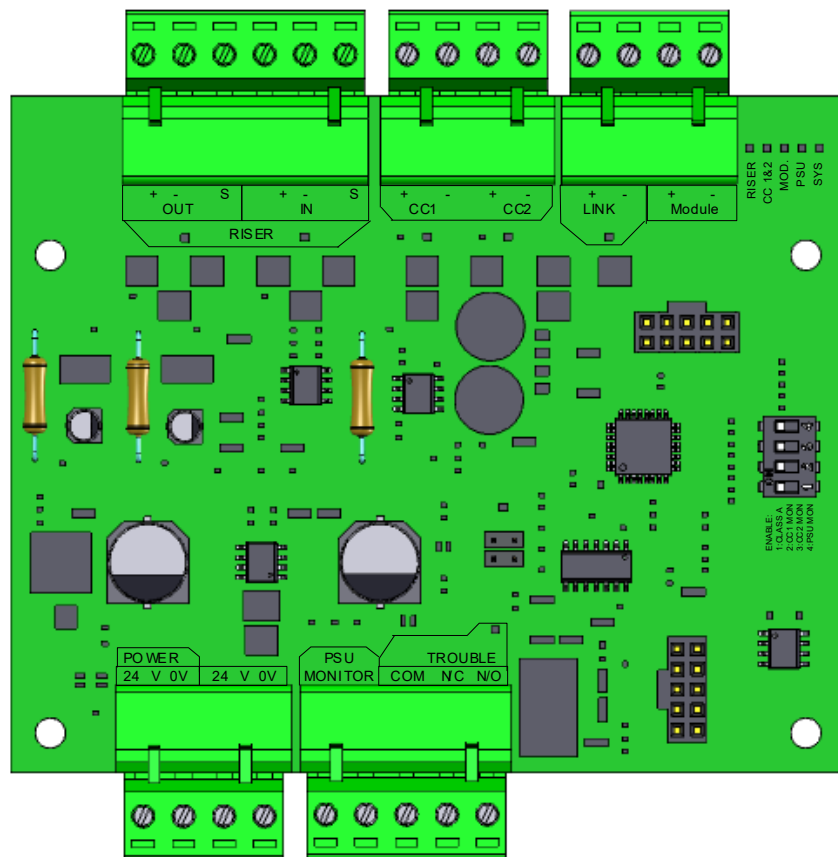


Figure 45 - NX10-TEL2-RISE Module

### 5.2.1.1 Package Contents

To install an NX10-TEL2-RISE module, carefully unpack the module from its box, within the box you will find a plastic bag containing the following items:

- Four (4) panhead screws
- One (1) UL 10K end-of-line resistor

### 5.2.1.2 Remove

1. Disconnect the wiring terminal blocks.
2. Remove the four (4) panhead screws securing the NX10-TEL2-RISE module to its enclosure.
3. Carefully remove the NX10-TEL2-RISE module from the enclosure.

### 5.2.1.3 Command Centre Installation

To install the NX10-TEL2-RISE firefighter telephone riser module in a NX10-CC01-BB or NX10-CC02-BB backbox:

1. Hold the NX10-TEL2-RISE module in place over the four (4) threaded standoffs on the left-side of the backbox below the NX10-ACS firefighter telephone base card. The NX10-FACC2 can accommodate two NX10-TEL2-RISE modules (see below figures).
2. Install the four (4) supplied panhead screws.
3. Wire terminal blocks to meet installation requirements.

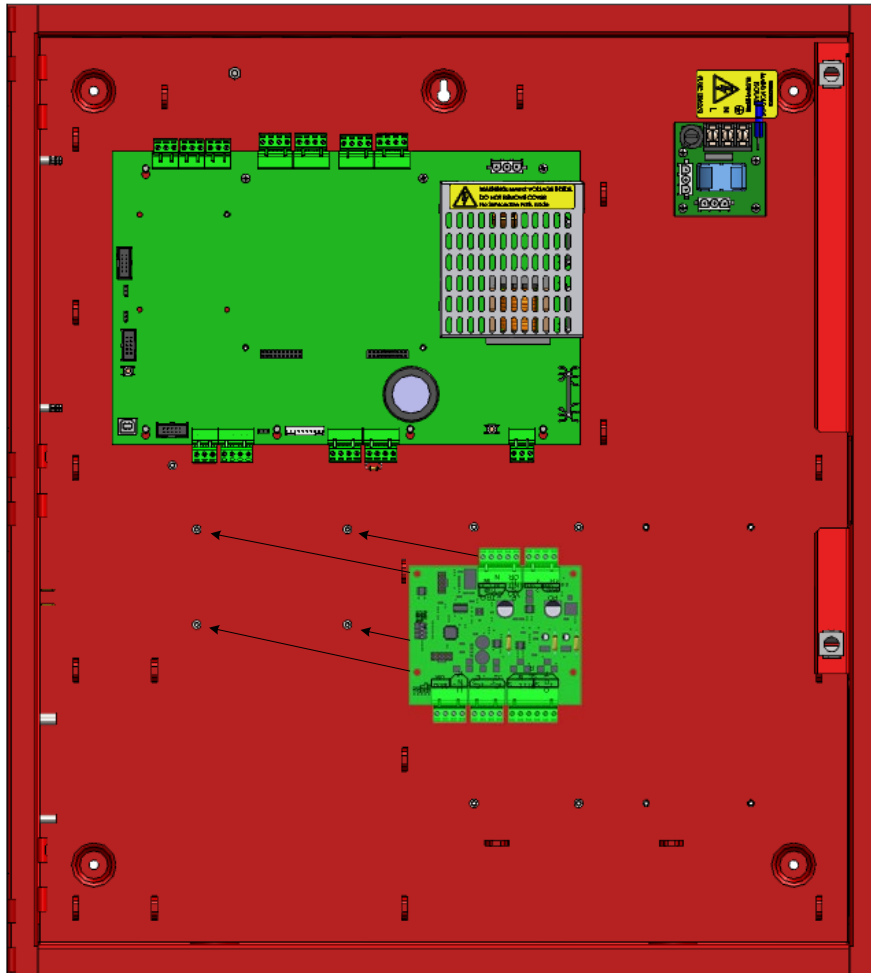


Figure 46 - NX10-CC01-BB NX10-TEL2-RISE Installation

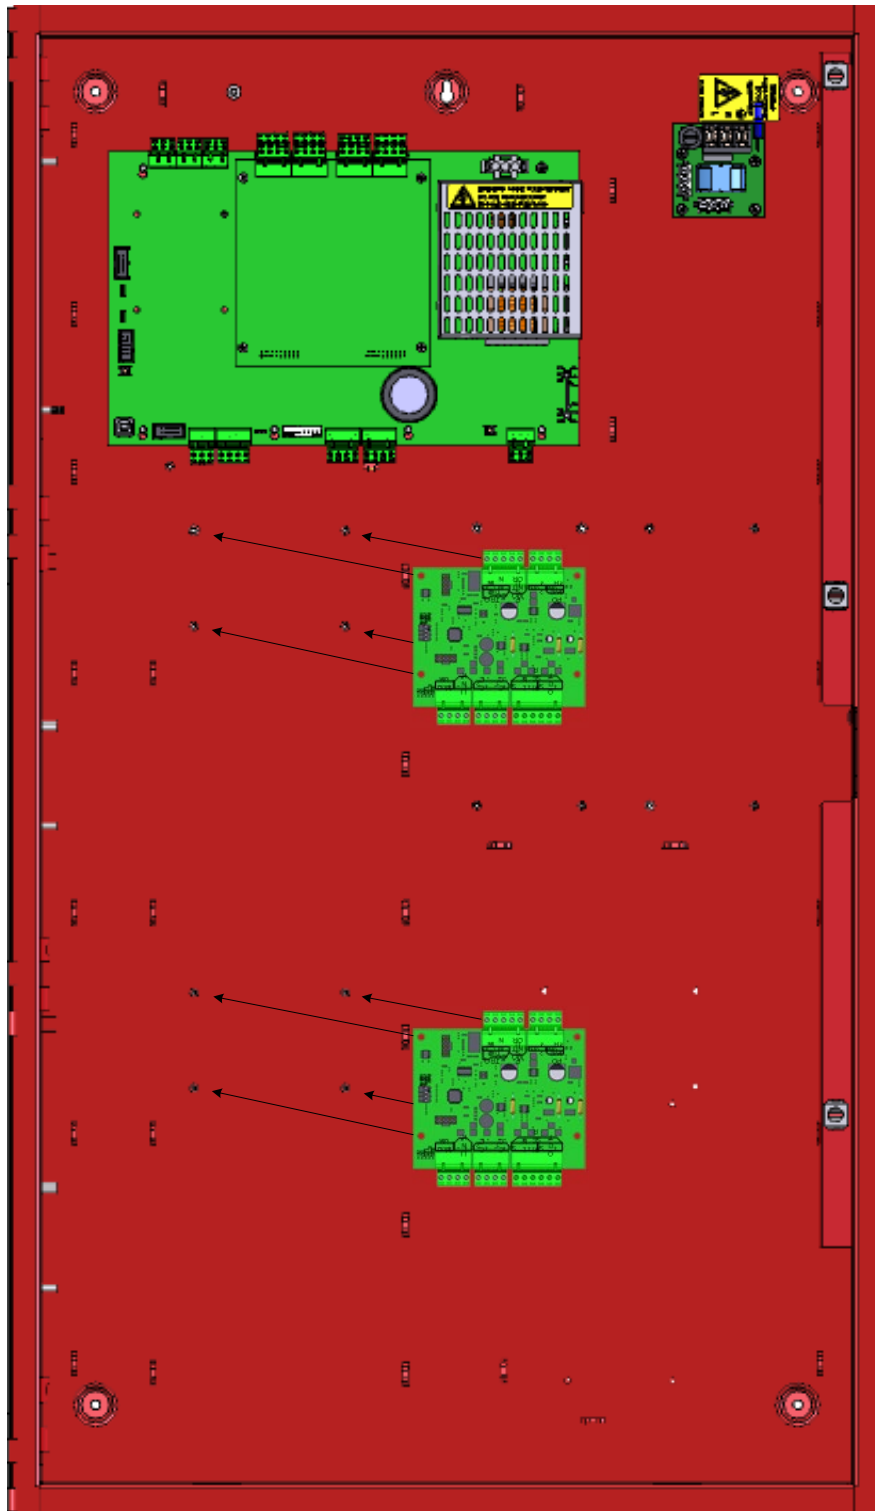



Figure 47 - NX10-CC02-BB NX10-TEL2-RISE Installation

#### 5.2.1.3.1 Optional NX10CC-MP-BP2 Mounting

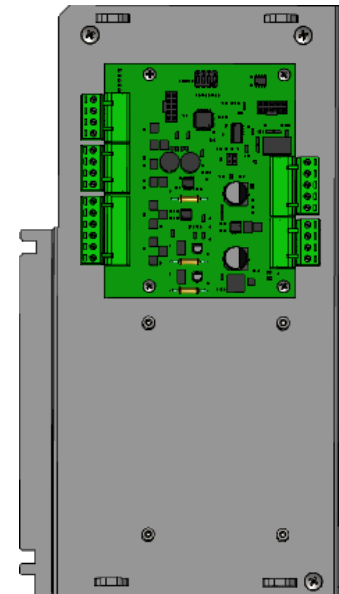In addition to mounting the NX10-TEL2-RISE module to standoffs already installed in the command centre enclosures, to increase mounting locations an optional NX10CC-MP-BP2 mounting plate is available. The two-module mounting plate can support an NX10-EM-RL10 10-point relay module (only one (1) NX10-EM-RL10 module can be used on an NX10-ACS base card).



*When using the two-module mounting plate, based on mounting location, the size of batteries the enclosure can support may be reduced as the two-module mounting plate with installed modules can accommodate the bottom left-side of the backbox. If space is an issue, batteries can be installed within a UL864 certified battery box.*



#### 5.2.1.4 Preinstalled NX10-TEL2-RISE Module Enclosures

As previously mentioned, the NX10-TEL2-RISE firefighter telephone riser module can be purchased in a dedicated NX10-TEL2-CAB and NX10-TEL2-REM with integral power supply charger (NX10-EM-PSU6) enclosure.



*For information regarding the installation of the preinstalled NX10-TEL2-RISE enclosures, refer to the NX10-TEL2-CAB and NX10-TEL2-REM installation instructions. When utilizing the NX10-TEL2-CAB the 24 VDC power supply required for the NX10-TEL2-RISE module must be mounted within 20 feet of the enclosure.*

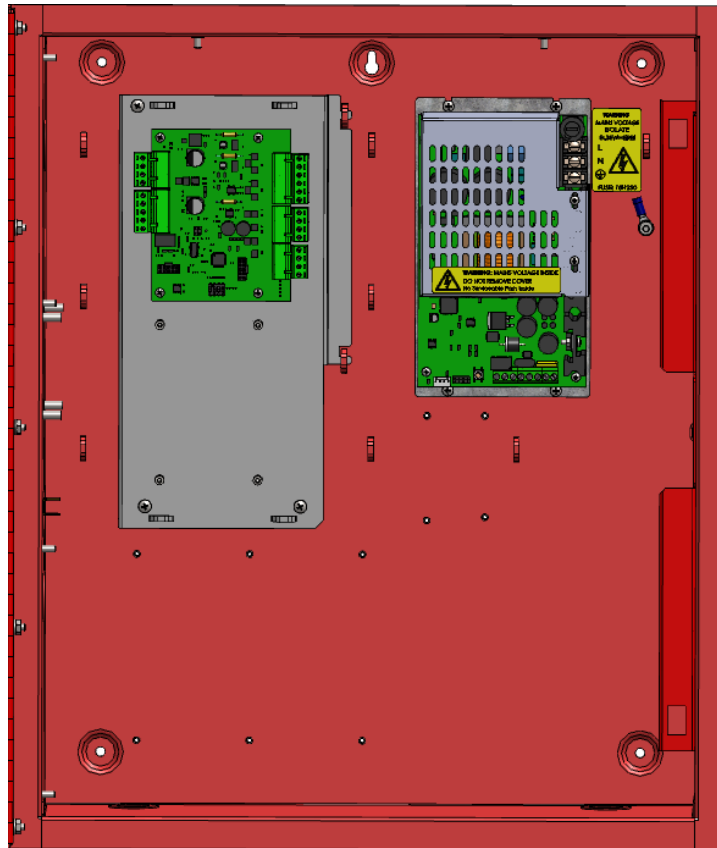


Figure 48 - NX10-TEL2-REM Enclosure with NX10-TEL2-RISE and NX10-EM-PSU6 Modules



The NX10-TEL2-CAB is identical to the NX10-TEL2-REM shown in the above figure without the NX10-EM-PSU6 power supply charger installed.

## 5.2.2 Wiring

Wiring of the NX10-TEL2-RISE module will include 24 VDC power, if required, monitoring of that 24 VDC power supply, command centre firefighter telephone(s), trouble contact and firefighter telephone riser wiring. In addition to the previously mentioned wiring if the firefighter telephones will be providing a Phone Patch (telephone paging to installation speaker circuits) wiring to the audio systems microphone or remote microphone bus amplifier will be required (refer to NX10-TEL2-PPB plug-in paging board section).

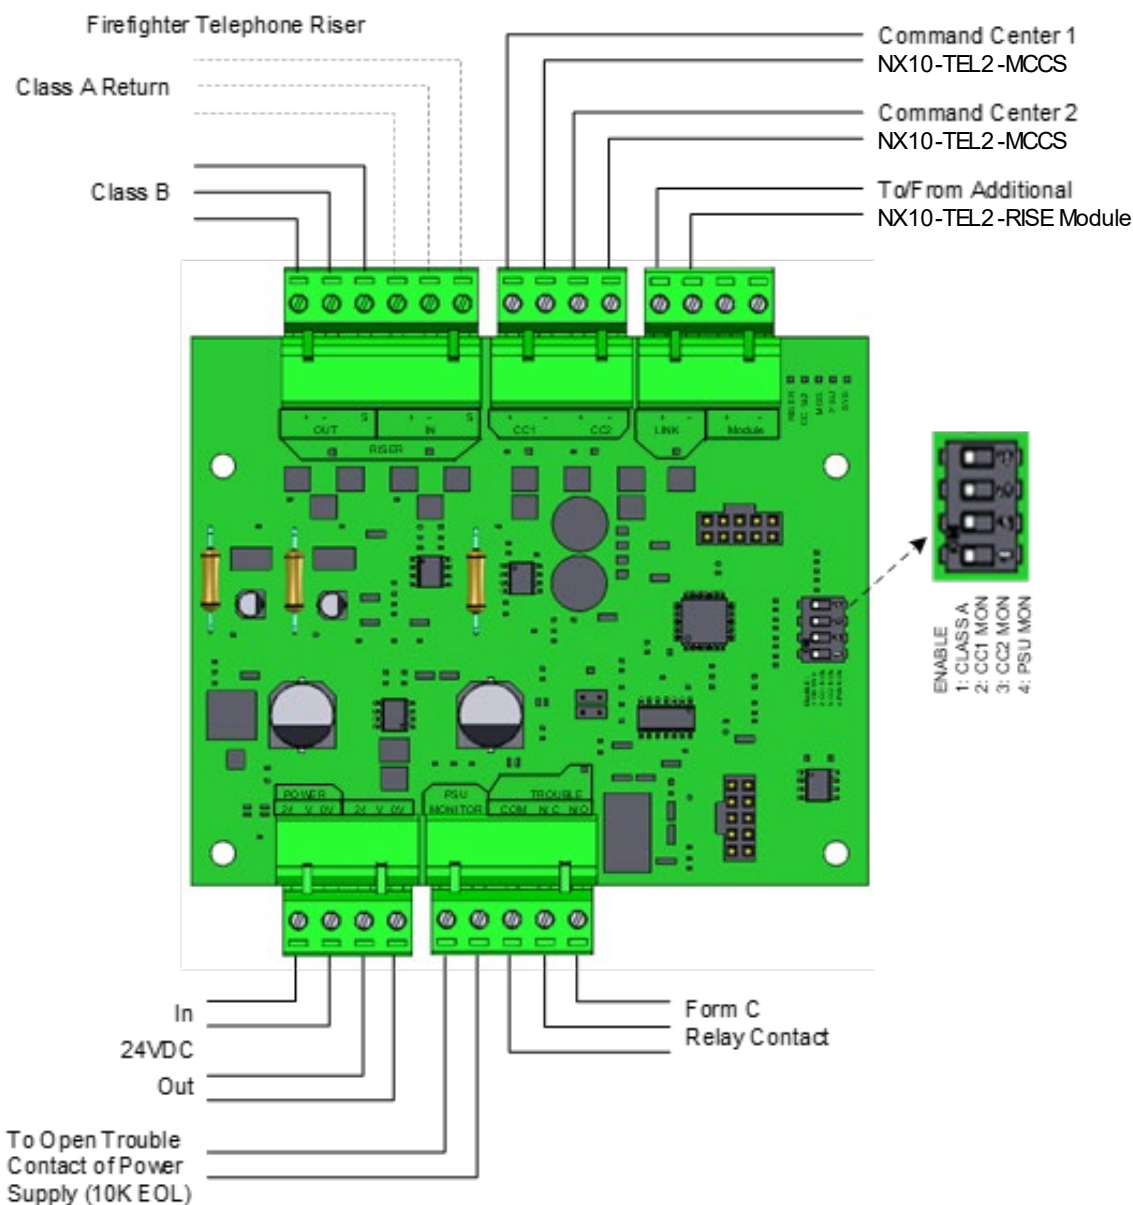


Figure 49 - NX10-TEL2-RISE Module Wiring and DIP Switch

### 5.2.2.1 24 VDC

The NX10-TEL2-RISE module requires 24 VDC power from either a Shield NX10-ACS base card, NX10-EM-PSU6 power supply charger, or a fire alarm listed power-limited, filtered, regulated power supply charger. Wire the 24 VDC to the 24V (positive) and 0V (negative) terminals of the NX10-TEL2-RISE module. If supervision of the 24 VDC power supply is required, wire the NX10-TEL2-RISE module's PSU MONITOR terminals to the open trouble relay contact (fail-safe, close on power failure) of the power supply and terminate with the supplied 10K end-of-line resistor (Figure 49).



*If supervision of the 24 VDC power supply is not required, place the supplied 10K end-of-line resistor across the PSU MONITOR terminals. When utilizing a remote 24 VDC power supply, the power supply charger must be mounted within 20 feet of the NX10-TEL2-RISE module.*

### 5.2.2.2 Command Centre Firefighter Telephone

The NX10-TEL2-RISE module can support two (2) command centre firefighter telephones. Wire the NX10-TEL2-RISE module CC1 + and – (command centre 1) or CC2 + and – (command centre 2) to the command centre NX10-TEL2-MCCS (/P) printed circuit board terminals OUT + and – (Figure 49). In addition, on the NX10-TEL2-RISE module, set the 4 position DIP switch 2 and 3 to their correct monitoring position (ON = monitored) [Figure 49].

### 5.2.2.3 Trouble Contact

The NX10-TEL2-RISE module trouble contact must be monitored by the fire alarm control panel. Based on monitoring method (normally open or normally closed) wire the NX10-TEL2-RISE terminals COM (common) and NO (normally open) or COM (common) and NC (normally closed) terminals to the monitoring input (NX10-ACS base card ANC FAULT, keyboard display switch input or addressable monitoring module zone input) [Figure 49].

### 5.2.2.4 Firefighter Telephone Riser

To wire the NX10-TEL2-RISE module firefighter telephone riser, wire the NX10-TEL2-RISE module terminals RISER OUT + (positive), - (negative) and S (shield) to the RISER IN + (positive), - (negative) and S (shield) terminals of the master addressable firefighter telephone or addressable conventional firefighter telephone interface module (Figure 50).

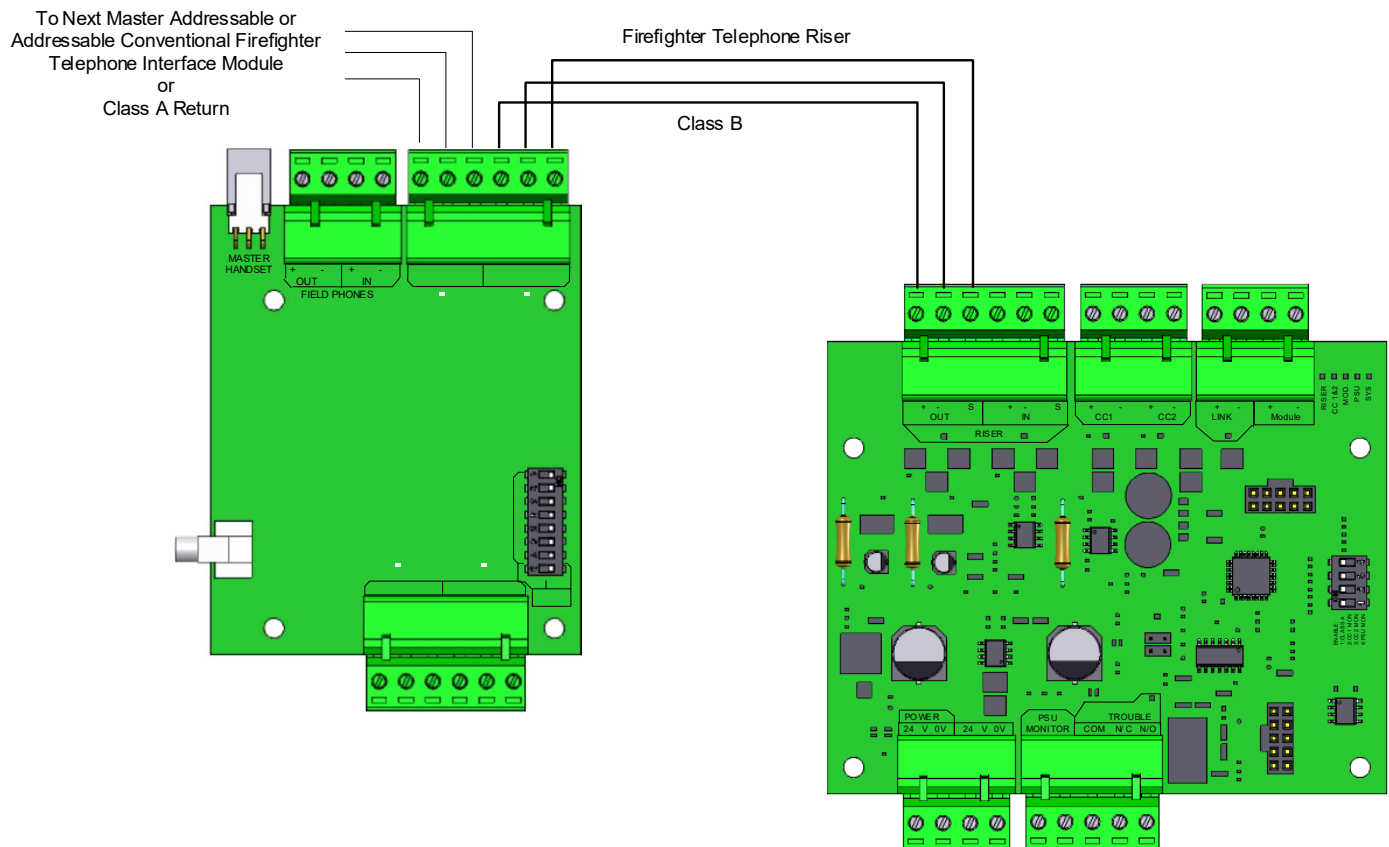


Figure 50 - Firefighter Telephone Riser Wiring



### 5.2.2.5 Optimal Firefighter Telephone Performance

For optimal firefighter telephone performance, the following minimum installation requirements are recommended for firefighter telephone communications wiring: twisted pair cable installed in dedicated conduit; segregated from all other fire alarm system wiring. If a dedicated conduit is not possible, twisted shield pair must be used to help minimize noise generated to and from the firefighter telephone riser circuit. Twisted shielded pair provides a degree of protection and immunity to electrical noise interference (RFI/EMI) compared to twisted pair.

If twisted shielded cable is utilized, the shield connections must be as follows according to wiring classification:

- Class B: Connect the shield at the NX10-TEL2-RISE module to the dedicated-out shield terminal (S), continue to wire the shield to the in and out terminals (S) at each addressable firefighter telephone module, at the last addressable firefighter telephone module, wire the shield to the in terminal (S) via a non-polarized 2.2uF 50V capacitor.
- Class X(A): Connect the shield at the NX10-TEL2-RISE module to the dedicated-out shield terminal (S), continue to wire the shield to the in and out terminals (S) at each addressable firefighter telephone module, returning the shield to the dedicated in shield terminal (S) at the NX10-TEL2-RISE module.

The shield connection must be a continuous circuit and must not connect to any other earth/ground point except the dedicated shield terminals located on the NX10-TEL2-RISE module and the addressable firefighter telephone module.



*Twisted shielded pair cable is required when the firefighter telephone communications wiring is not installed in dedicated conduit.*

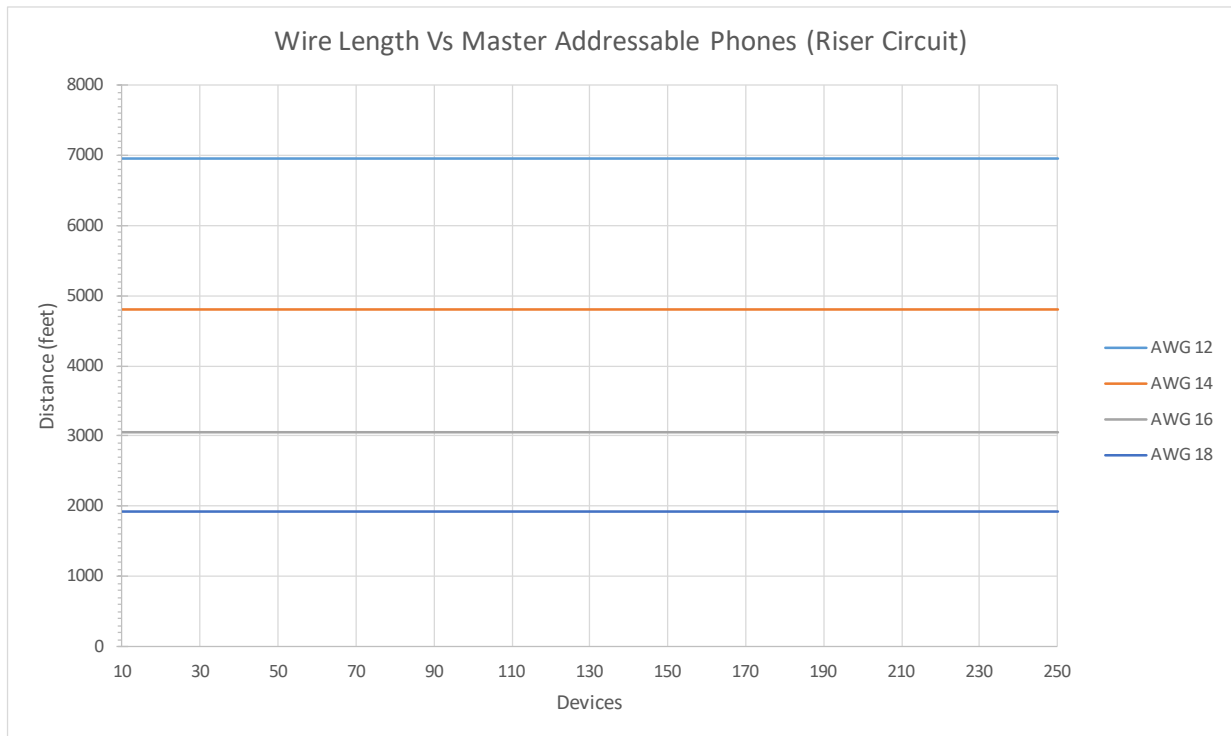
#### 5.2.2.5.1 Firefighter Phone System Performance

As previously discussed, the firefighter phone system can accommodate up to two NX10-TEL2-RISE modules for a total of 500 addressable firefighter telephone modules (250 per NX10-TEL2-RISE module). When wiring firefighter telephones and telephone risers, system performance will vary depending on the riser length, number of addressable firefighter telephone modules on the riser, active (in use) phones (riser and command centre) and the frequency response of the telephone party line.

##### 5.2.2.5.1.1 Single Riser Module

Active Phones: 6 (1 command centre and 5 field phones)  
Riser Count: 1 NX10-TEL2-RISE module  
Maximum Addressable Firefighter Telephone Modules: 250  
Frequency Response: 300 Hz  
Riser Length: See Graph 1 (i.e., 16AWG = 3000ft)

The graph 1 indicates the wire length and gauge (AWG) for monitoring 250 addressable firefighter telephone modules. This graph can be utilized for each telephone riser circuit (two NX10-TEL2-RISE modules) connected to the firefighter phone system. If the circuit is wired Class A, this distance would be out and back (return) distance.



Graph 1 – Firefighter Telephone Riser Wire Length

#### 5.2.2.5.1.2 Multiple Riser Modules

Due to the passive nature of the system, certain trade-offs must be considered when interlinking two NX10-TEL2-RISE modules. A multi riser system can be designed to maximize the number of active phones, the maximum number of addressable firefighter telephone modules or the overall frequency response of the system.

##### 5.2.2.5.1.2.1 Multiple Riser Modules w/Maximum Field Coverage

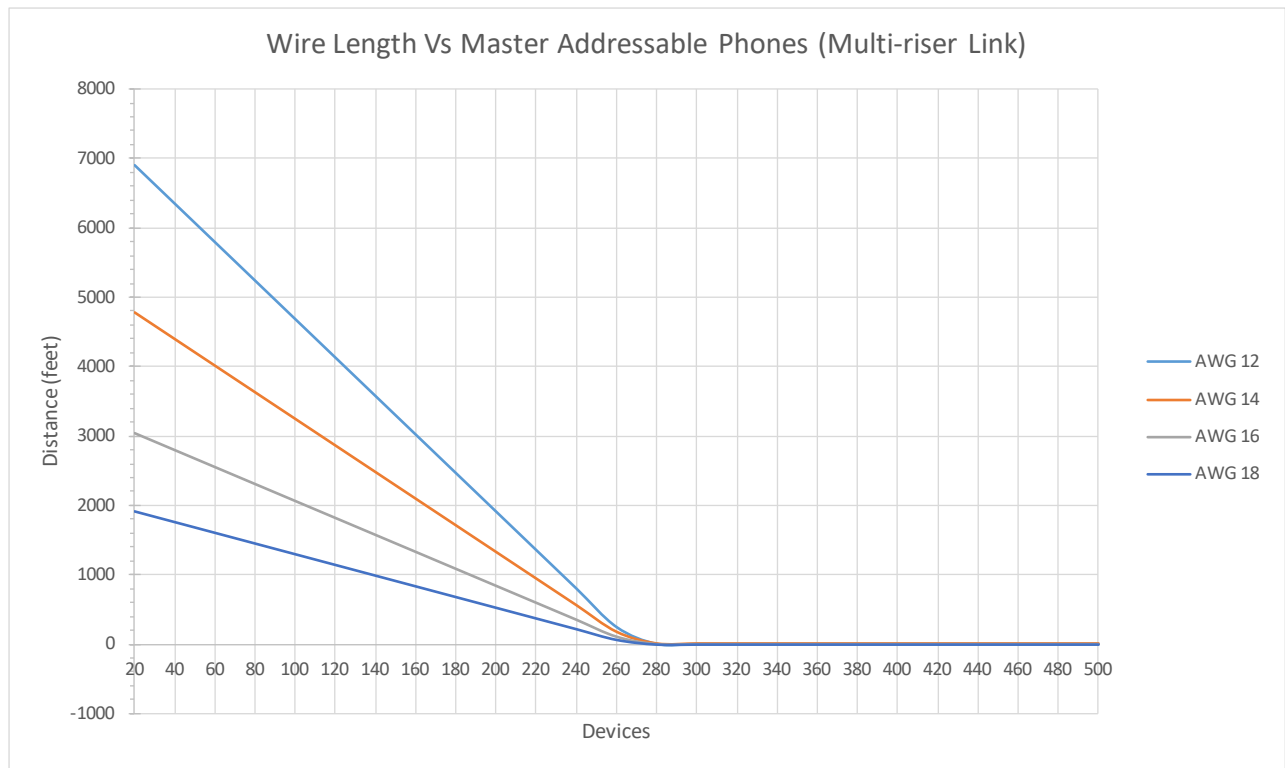
For maximum field coverage, two NX10-TEL2-RISE can be linked together to effectively double the distance between the two furthest addressable firefighter telephone modules, while still maintain the maximum number of addressable firefighter telephone modules (250).

Active Phones: 6 (1 command centre and 5 field phones)

Riser Count: 2 NX10-TEL2-RISE modules

Maximum Addressable Firefighter Telephone Modules: 250

Frequency Response: 300 Hz



Graph 2 – Maximum Field Wire Coverage (250 phones)

In graphs 1 and 2, if all wiring were run with 16 AWG, both firefighter telephone risers could be run 3000 feet with a maximum of 250 addressable firefighter telephone modules. In addition, the distance between the two NX10-TEL2-RISE modules could be up to ~20 feet.

Riser 1 Length: See Graph 1 (i.e., 16 AWG = 3000ft)

Riser 2 Length: See Graph 1 (i.e., 16 AWG = 3000ft)

Distance between risers: See Graph 2 (i.e., 16 AWG = ~20ft)

Total wire distance between furthest phones = 3000ft + 3000ft + ~20ft = 6020ft (i.e., 16 AWG)

It is, of course, possible to increase both the effective distance and the number of addressable firefighter telephone modules, but to accomplish this a certain level of compromise is required on the overall system performance. This will be covered in the subsequent examples.

#### 5.2.2.5.1.2.2 Multiple Riser Modules w/Active (in use) Phone Reduction

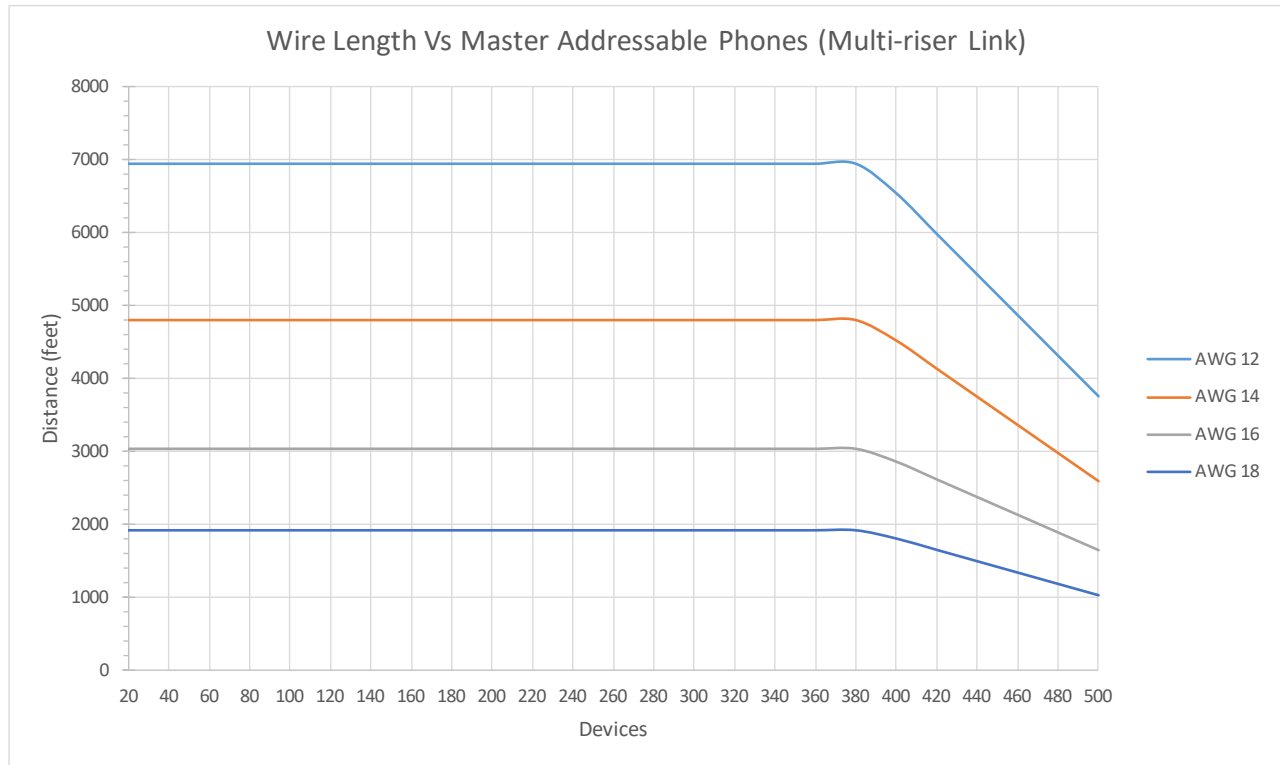
For a combined boost in effective distance and maximized number of addressable firefighter telephone modules, while retaining the full audio frequency range, the maximum number of active (in use) phones could be reduced (restricted).

Active Phones: 5 (1 command centre and 4 field phones)

Riser Count: 2 NX10-TEL2-RISE modules

Maximum Addressable Firefighter Telephone Modules: 500

Frequency Response: 300 Hz



Graph 3 – Active Phone Reduction (maximum 500 phones)

In graphs 1 and 3, with a reduction of one active (in use) phone, when all wiring is run with 16 AWG, both telephone risers could be run 3000 feet with a maximum of 500 addressable firefighter telephone modules. In addition, the distance between the two NX10-TEL2-RISE modules could be up to ~1640 feet.

Riser 1 Length: See Graph 1 (i.e., 16 AWG = 3000ft)

Riser 2 Length: See Graph 1 (i.e., 16 AWG = 3000ft)

Distance between risers: See Graph 3 (i.e., 16 AWG = ~1640ft)

Total wire distance between furthest phones = 3000ft + 3000ft + ~1640ft = 7640ft (i.e., 16 AWG)

#### 5.2.2.5.1.2.3 Multiple Riser Modules w/Frequency Response Decreased

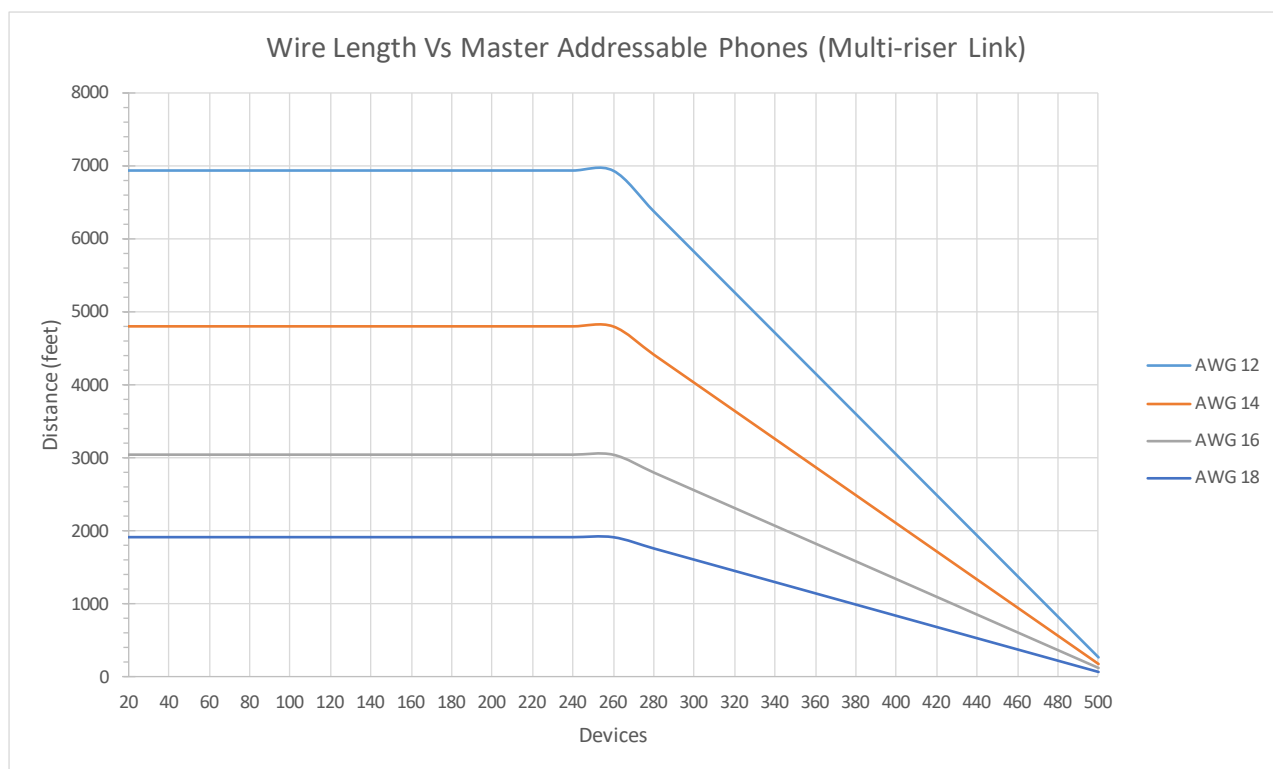
For a combined boost in effective distance and maximized number of addressable firefighter telephone modules, while retaining the maximum number of active (in use) phones, some of the lower audio frequency will be lost.

Active Phones: 6 (1 command centre and 5 field phones)

Riser Count: 2 NX10-TEL2-RISE modules

Maximum Addressable Firefighter Telephone Modules: 500

Frequency Response: 400 Hz



Graph 4 – Frequency Response Decrease (maximum 500 phones)

In graphs 1 and 4, with a decrease in frequency response to 400 Hz, when all wiring is run with 16 AWG, both telephone risers could be run 3000 feet with a maximum of 500 addressable firefighter telephone modules. In addition, the distance between the two NX10-TEL2-RISE modules could be up to ~200 feet.

Riser 1 Length: See Graph 1 (i.e., 16 AWG = 3000ft)

Riser 2 Length: See Graph 1 (i.e., 16 AWG = 3000ft)

Distance between risers: See Graph 4 (i.e., 16 AWG = ~200ft)

Total wire distance between furthest phones = 3000ft + 3000ft + ~200ft = 6200ft (i.e., 16 AWG)

#### 5.2.2.5.1.2.4 Multiple Riser Modules w/Typical two Active Phones

Below is an example of a typical two active (in use) addressable firefighter telephone modules and 500 total addressable firefighter telephone modules. The two active firefighter telephones are the command centre phone and an addressable firefighter telephone module.



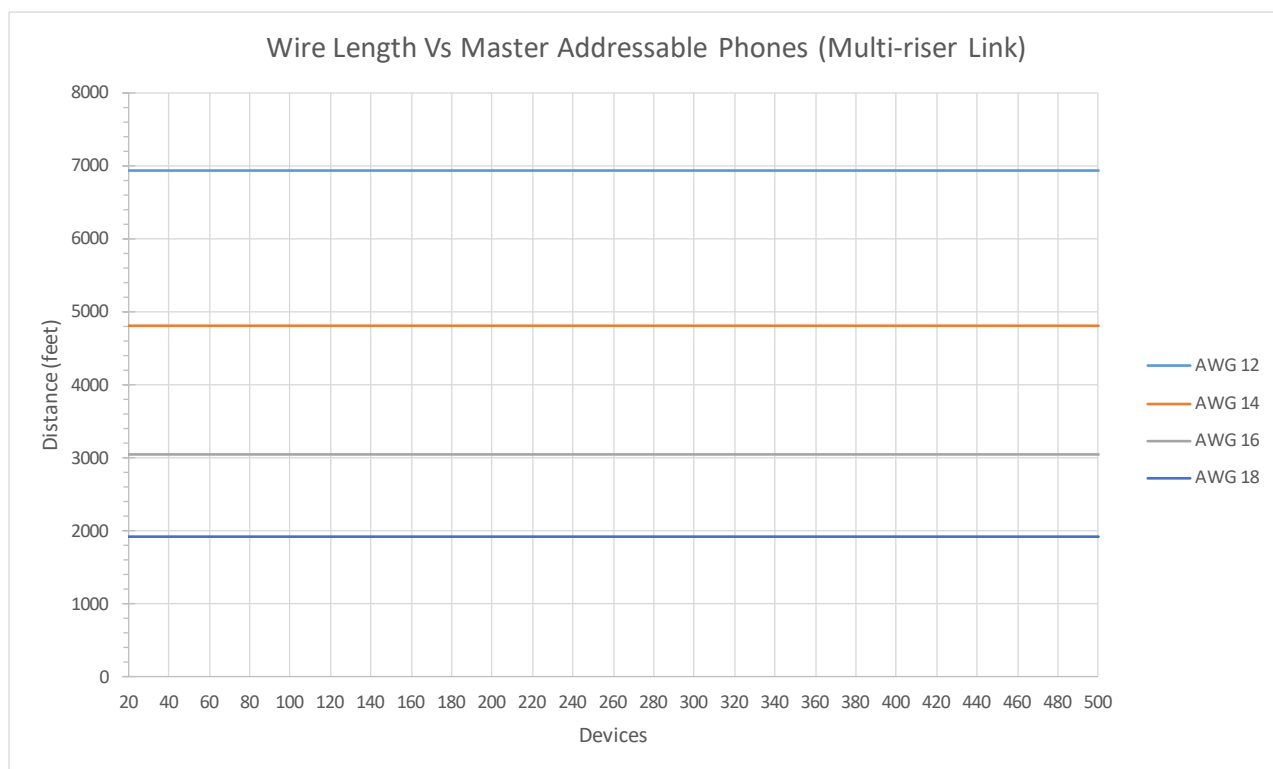
*The above example will also reflect the field coverage if push-to-talk (PTT) firefighter telephones were utilized throughout the installation.*

Active Phones: 2 (1 command centre and 1 field phone)

Riser Count: 2 NX10-TEL2-RISE modules

Maximum Addressable Firefighter Telephone Modules: 500

Frequency Response: 300 Hz



Graph 5 – Two Active Phones (maximum 500 phones)

In graphs 1 and 5, with two active (in use) telephones, when all wiring is run with 16 AWG, both telephone risers could be run 3000 feet with a maximum of 500 addressable firefighter telephone modules. In addition, the distance between the two NX10-TEL2-RISE modules could be up to 3000 feet.

Riser 1 Length: See Graph 1 (i.e., 16 AWG = 3000ft)

Riser 2 Length: See Graph 1 (i.e., 16 AWG = 3000ft)

Distance between risers: See Graph 3 (i.e., 16 AWG = 3000ft)

Total wire distance between furthest phones = 3000ft + 3000ft + 3000ft = 9000ft (i.e., 16 AWG)

#### 5.2.2.5.1.3 General Tips to Improve Audio Performance

To optimize firefighter telephone performance with large single or multiple firefighter telephone risers (NX10-TEL2-RISE modules) Shield recommends the following general tips:

1. Limit the number of active firefighter telephones.
  - a. If limiting the number of active firefighter phones is difficult, Shield would recommend utilizing the optional push-to-talk phones as these only count as active when the push-to-talk button is pressed while speaking.
2. Utilize Class A wiring.
  - a. Class A wiring can help mitigate audio loss as well as add extra redundancy to the system.
3. Use larger gauge twisted shielded wire where possible, especially when interlinking NX10-TEL2-RISE modules.
4. Select low capacitance wire (twisted pair cable) and install in dedicated conduit.
5. Follow the above graphs.

### 5.2.2.6 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB1	POWER 24V POWER 0V POWER 24V POWER 0V	24 VDC Power In/Out 24 VDC Negative In/Out 24 VDC Power In/Out 24 VDC Negative In/Out
TB2	PSU MONITOR PSU MONITOR TROUBLE COM TROUBLE N/C TROUBLE N/O	Power Supply Monitoring Input Power Supply Monitoring Input Trouble Relay Contact Common Trouble Relay Contact Normally Closed Trouble Relay Contact Normally Open
TB3	RISER OUT + RISER OUT – RISER OUT S RISER IN + RISER IN – RISER IN S	Firefighter Telephone Riser Positive (Class B) Firefighter Telephone Riser Negative (Class B) Firefighter Telephone Riser Shield (Class B) Firefighter Telephone Riser Positive (Class A) Firefighter Telephone Riser Negative (Class A) Firefighter Telephone Riser Shield (Class A)
TB4	CC1 + CC1 – CC2 + CC2 –	Command Centre 1 Firefighter Telephone Positive Command Centre 1 Firefighter Telephone Negative Command Centre 2 Firefighter Telephone Positive Command Centre 2 Firefighter Telephone Negative
TB5	LINK + LINK – MODULE + MODULE –	Multiple NX10-TEL2-RISE Module Connection Positive Multiple NX10-TEL2-RISE Module Connection Negative Optional NX10-TEL2-PPB Audio Output Positive Optional NX10-TEL2-PPB Audio Output Negative

### 5.2.2.7 Electrical Specifications

Circuit Supervision	Supervised for Short Circuit, Open Circuit and Ground Fault POWER-LIMITED CIRCUIT
Operating Voltage	24 VDC
Operating Current	(The following values assume no line resistance – worst case scenario)
Module (Quiescent/Active)	20mA
Quiescent Phones	100uA per Master Addressable Firefighter Emergency Phone
Command Centre Phone	22mA per Command Centre Firefighter Phone
Active Connected Phones	22mA per Active Master Addressable Firefighter Emergency Phone
Riser Circuit Impedance	25Ω
Maximum Number of Firefighter Telephones	250
Maximum Active Phones	6 (1 Command Centre Phone and 5 Field Firefighter Phones)
Trouble Relay Contact	30 VDC, 1 Amp
End-of-Line (EOL)	10K – Power supply monitor

### 5.2.2.7.1 LEDs

LED	Function	Description
1	TROUBLE	Trouble
2	SYS	ON Status
3	PSU	PSU Monitor Trouble
4	MOD.	Audio Module Trouble
5	CC 1&2	Command Centre Telephone 1 or 2 Trouble
6	RISER	Telephone Riser Trouble

## 5.3 Optional NX10-TEL2-PPB Plug-in Page Board

The NX10-TEL2-PPB plug-in page board allows the NX10-TEL2-RISE module to interface the firefighter telephone riser's party line to a Shield Neo NX audio amplifier product, providing field firefighter phone paging via command centre control (Phone Patch).

### 5.3.1 Installation

The NX10-TEL2-PPB plug-in page board mounts on to the NX10-TEL2-RISE module.



**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.**

**Failure to tighten the panhead screws will defeat the protection circuitry designed to protect the module from damage due to lightning and static electricity.**

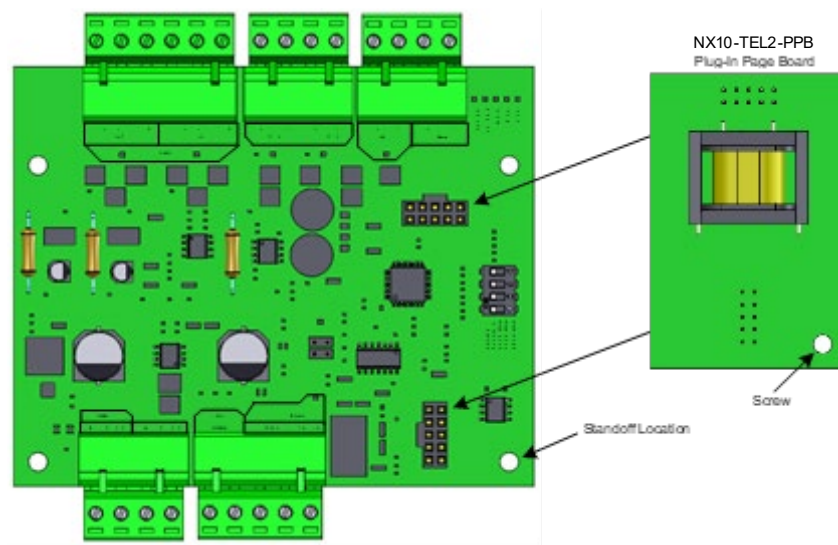


Figure 51 - NX10-TEL2-PPB Installation

#### 5.3.1.1 Package Contents

To install an NX10-TEL2-PPB board, carefully unpack the board from its box, within the box you will find a plastic bag containing the following items:

- One (1) panhead screw
- One (1) nylon standoff
- One (1) 100K end-of-line resistor



### 5.3.1.2 Remove

1. Disconnect power.
2. Remove the single panhead screw securing the NX10-TEL2-PPB to the NX10-TEL2-RISE module.
3. Carefully unplug the NX10-TEL2-PPB board from the NX10-TEL2-RISE module and remove from the enclosure.

### 5.3.1.3 Install

1. With power removed, remove the bottom right panhead screw securing the NX10-TEL2-RISE module to its enclosure.
2. With the mounting screw removed, screw in the supplied nylon spacer.
3. With the nylon spacer installed, carefully plug the NX10-TEL2-PPB board's two (2) 10-pin male serial connectors (PL1 and PL2), located on the back of the board, into the two (2) 10-pin female serial connectors on the NX10-TEL2-RISE module (Figure 51).
4. Secure the NX10-TEL2-PPB to the previously installed nylon spacer with the removed panhead screw.

## 5.3.2 Wiring

With the optional NX10-TEL2-PPB board installed, wire the NX10-TEL2-RISE terminals MODULE + (plus) and – (minus) to the Shield audio installations microphone or remote microphone bus audio amplifier (NX10-AMP-80) audio input terminals and terminate with the supplied 100K end-of-line resistor (Figure 52). When utilized with an Neo NX audio systems programmed “Phone Patch” button, the firefighter command centre operator is now capable of patching in field firefighter telephones to selected installation speaker circuits.

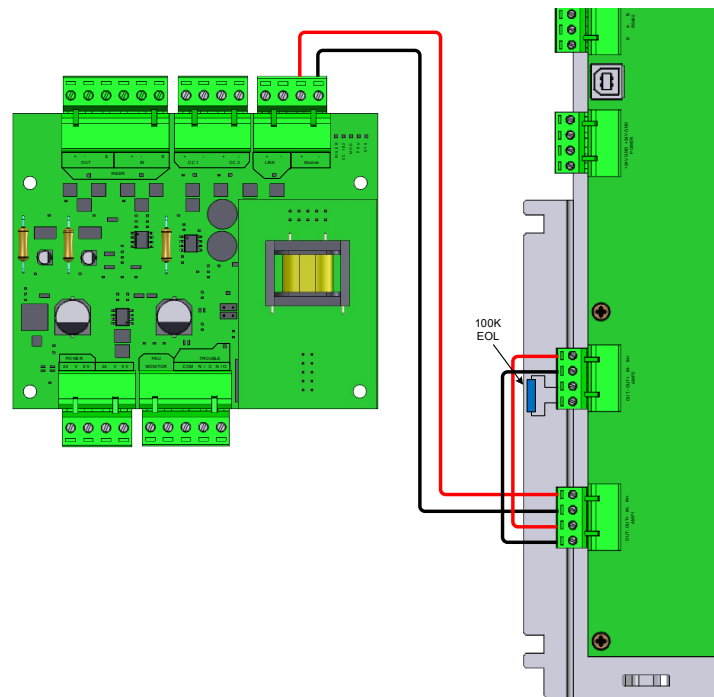


Figure 52 - NX10-TEL2-PPB Board Wiring to a Microphone or Remote Microphone Bus Amplifier

### 5.3.2.1 Electrical Specifications

Circuit Supervision	Supervised for Short Circuit, Open Circuit and Ground Fault POWER-LIMITED CIRCUIT
Circuit End-Of-Line (EOL)	100K
Output Voltage	20mV peak-to-peak to 1V peak-to-peak, the amplifier input will sample the maximum incoming peak-to-peak signal and adjust the gain accordingly.

This page is intentionally blank

## 6 Optional System Modules

Below is a list of optional modules available for the Neo NX preconfigured and modular command centres.

### 6.1 NX10-FANET4 and NX10-FANET7 Network Modules

The NX10-FANET4 and NX10-FANET7 modules are network modules (CCITT RS-485) used for connecting the Neo NX fire alarm control panel to the Shield Ad-NeT-PluS network. The Shield Ad-NeT-PluS network can support FACP's, Audio FACP's, local operating consoles, remote annunciators with/without control, and other network nodes. The NX10-FANET4 module is used with a Class B Ad-NeT-PluS network, while the NX10-FANET7 is used with a Class X (Class A) Ad-NeT-PluS network.



*Optional NX10-FOC-MM Fiber Optic Converter Modules are available for converting NX10-FANET4 and NX10-FANET7 copper wiring to fibre optic.*

#### 6.1.1 Installation



**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.**

**Failure to tighten the panhead screws will defeat the protection circuitry designed to protect the module from damage due to lightning and static electricity.**

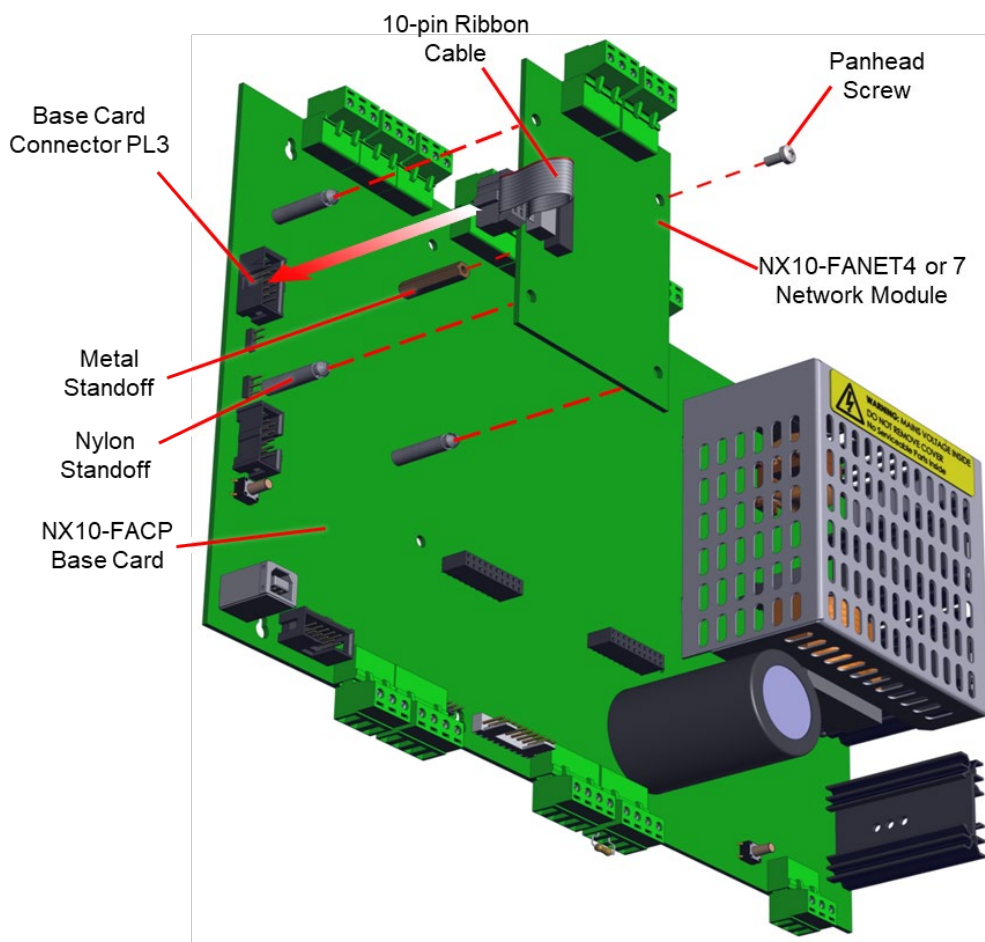


Figure 53 - NX10-FANET4 and NX10-FANET7 Installation

### 6.1.1.1 Package Contents

#### NX10-FANET4

- One (1) NX10-FANET4 Network Module
- One (1) plastic bag containing:
  - One (1) metal hexagon spacer
  - One (1) panhead screw
  - Three (3) nylon spacers
  - One (1) UL 150Ω filtering resistor.
  - 2-pin wire NX10-FANET4 to NX10-ACS-DSP harness

#### NX10-FANET7

- One (1) NX10-FANET7 Network Module
- One (1) plastic bag containing:
  - One (1) metal hexagon spacer
  - One (1) panhead screw
  - Three (3) nylon spacers

### 6.1.1.2 Remove

1. Disconnect AC and DC power.
2. Remove the plugin terminal blocks. In addition, if replacing an NX10-FANET4 module that is providing network ground fault status, remove the 2-pin cable connecting the module to the keyboard display module.
3. Remove the panhead screw securing the network module and lift the module off the snap on standoffs.
4. Unplug the 10-pin female flat-ribbon cable connector from the NX10-ACS base card.

### 6.1.1.3 Install

1. Insert the supplied metal hexagon spacer and three (3) nylon spacers.
2. Plug the 10-pin female flat-ribbon cable connector into the PL3 NETWORK male connector located on the NX10-ACS base card.
3. Snap the network module onto the installed nylon spaces and secure with the supplied panhead screw via the metal hexagon spacer.
4. On the NX10-FANET4 module, install the supplied 150Ω filtering resistor between the IN A and B terminals of the module.

### 6.1.2 Wiring

Both the NX10-FANET4 and NX10-FANET7 modules have independent connectors for the outgoing and incoming Ad-NeT-PluS network wiring. Using twisted shielded cable, connect from the “OUT” terminal on the previous network node to the “IN” terminal on the next network node; A to A, B to B and SCN to SCN (Figure 54).

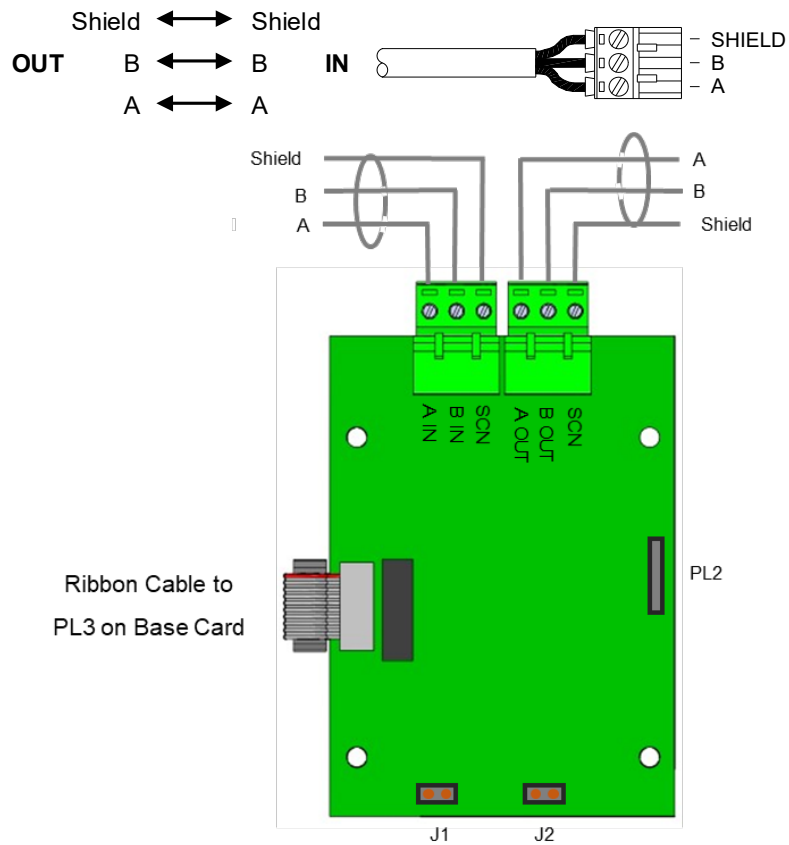


Figure 54 - NX10-FANET4 and NX10-FANET7 Wiring

### 6.1.2.1 Terminal Summary

Module	Not Visible Terminal Designation	Visible Terminal Designation	Terminals
NX10-FANET4	TB1	A IN B IN SCN	Ad-Net-PluS Network A IN Ad-Net-PluS Network B IN Ad-Net-PluS Network Shield
	TB2	A OUT B OUT SCN	Ad-Net-PluS Network A OUT Ad-Net-PluS Network B OUT Ad-Net-PluS Network Shield
NX10-FANET7	TB1	IN	Ad-Net-PluS Network A IN Ad-Net-PluS Network B IN Ad-Net-PluS Network Shield
	TB2	OUT	Ad-Net-PluS Network A OUT Ad-Net-PluS Network B OUT Ad-Net-PluS Network Shield

6.1.2.2 Electrical Specifications

Circuit Supervision POWER-LIMITED CIRCUIT	Supervised for Short Circuit, Open Circuit and Ground Fault
Communications	CCITT RS485
Cabling Type	Twisted Shielded
NX10-FANET4	Class B Network Wiring 32 Nodes Maximum including <i>Shield</i> Network Audio 5000ft (1500m) Maximum Cable Length Requires 150Ω filtering resistor at beginning and end of network 2-Pin Programmable Network Ground Fault Output
NX10-FANET7	Class X (A) Network Wiring 200 Nodes Maximum, 150 Nodes Maximum when Integrated with <i>Shield</i> Network Audio. 5000ft (1500m) Maximum Cable Length Between Nodes 66000ft (20000m) Maximum Overall Cable Length



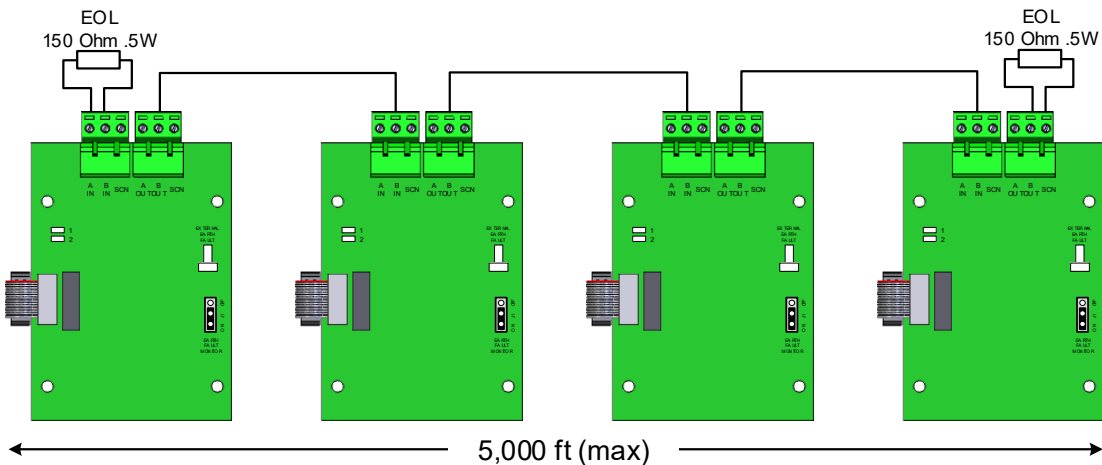
When Ad-NeT-PluS networks incorporate audio, 150 nodes maximum will guarantee 10 second synchronization of audio across the network.

6.1.2.2.1 LEDs

LED	Function	Description
NX10-FANET4 1 2	TX RX	Network Transmit Network Receive
NX10-FANET7 1 2 3	Heartbeat RX TX	Network Receive Network Transmit

6.1.2.3 NX10-FANET4 Class B w/End-of-Line Filtering Resistors

The Ad-NeT-PluS Class B network wiring requires the IN terminals on the first network node and the OUT terminals on the last network node to be terminated with the supplied 150Ω end-of-line filtering resistors.





*If the 150Ω filtering end-of-line resistor is not installed on the last network node a network ground fault will be reported.*

#### 6.1.2.3.1 NX10-FANET4 Class B Network Ground Fault Detection

The NX10-FANET4 module can be configured to monitor an entire Class B Ad-NeT-PluS network for ground fault conditions. This network monitoring must be implemented if the Class B Ad-NeT-PluS network does not incorporate at least one Shield NX10-FAN-C or NX10-FAN-D remote annunciator.

To configure the NX10-FANET4 module (only one configured NX10-FANET4 per Class B Ad-NeT-PluS network is required) for network ground fault monitoring, simply move jumper J1 (Earth Fault Monitor) from its OFF position to its ON position (Figure 55). In addition, if a specific network ground fault indication is required, wire the supplied 2-pin NX10-FANET4 to NX10-ACS-DSP harness from the PL2 header of the NX10-FANET4 module to the Common/IP8 input on the back of the NX10-ACS-DSP keyboard display and program the input to the specific indication requirements (i.e., LED, etc.).


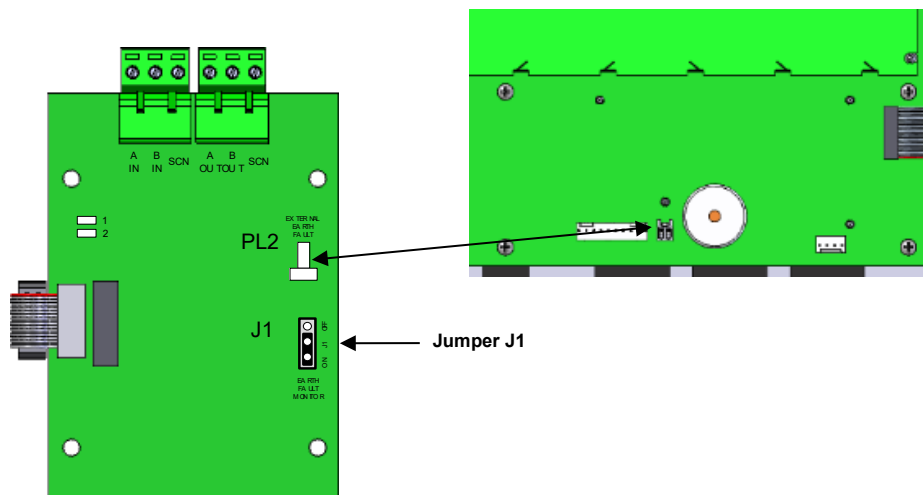


Figure 55 - NX10-FANET4 Network Ground Fault Detection Configuration

#### 6.1.2.4 NX10-FANET7 Class X(A)

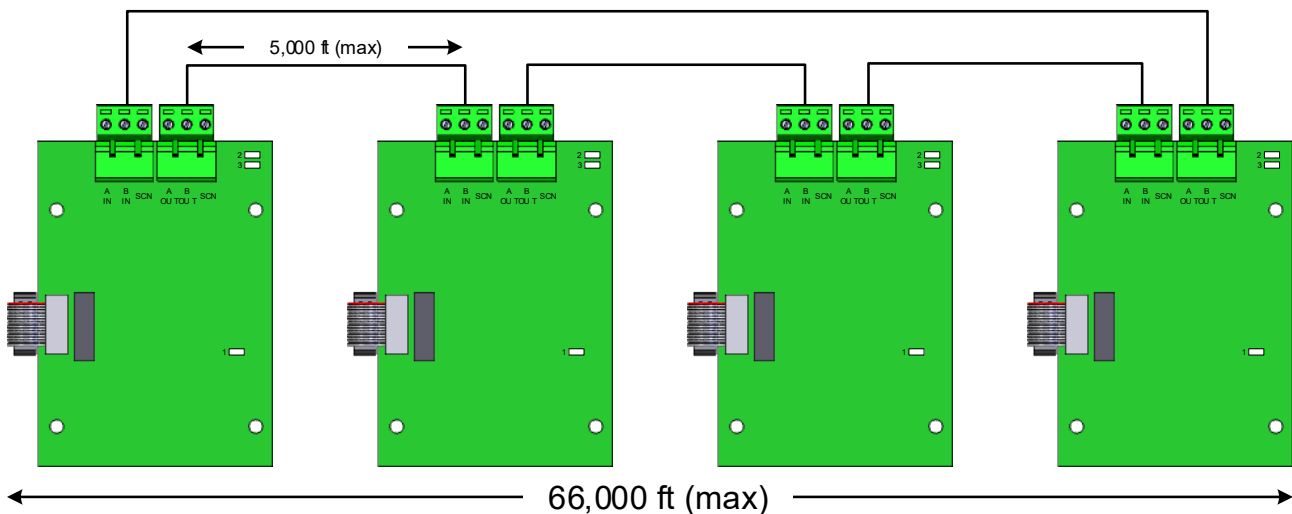The Ad-NeT-PluS Class X(A) network wiring requires the OUT terminals on the last network node to be wired back to the IN terminals on the first network node, this forms a loop “ring.”



## 6.2 NX10-ZS Amplifier Zone Splitter Module

The NX10-ZS amplifier zone splitter module allows for the splitting of the two (2) audio amplifier circuits (speaker circuits) to four (4) audio speaker circuits [one to two speaker circuits]. In addition, if only one audio amplifier circuit (speaker circuit) requires splitting, it can be split to four (4) audio speaker circuits (one to four speaker circuits). The maximum Wattage per NX10-ZS speaker circuit is 10 Watts, with a 30 Watt maximum per module. The NX10-ZS module mounts on top of the NX10-AMP-80 audio amplifier module.

### 6.2.1 Installation



**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.**

**Failure to tighten the panhead screws will defeat the protection circuitry designed to protect the module from damage due to lightning and static electricity.**

#### 6.2.1.1 Package Contents

Carefully unpack the NX10-ZS module from its box, within the box you will find the following items:

- Four (4) panhead screws
- Three (3) metal hexagon spacers
- One (1) nylon standoff
- Four (4) 47K Class B, UL end-of-line (EOL) resistors

#### 6.2.1.2 Remove

1. Disconnect AC and DC power.
2. Unplug any used terminal block of the NX10-ZS module.
3. Remove the three (3) panhead screws securing the module to the NX10-AMP-80 audio amplifier module.
4. Remove the NX10-ZS module from the enclosure.

#### 6.2.1.3 Install

1. Remove the three (3) bottom panhead screws securing the NX10-AMP-80 audio amplifier module to its mounting plate and replace with the three (3) supplied metal hexagon spacers (Figure 56).
2. Install the supplied nylon standoff onto the upper-right screw hole (non-corner hole) of the zone splitter module with one of the supplied panhead screws (Figure 56).
3. Place the zone splitter module over the installed metal hexagon spacers and secure with three (3) panhead screws (Figure 56).



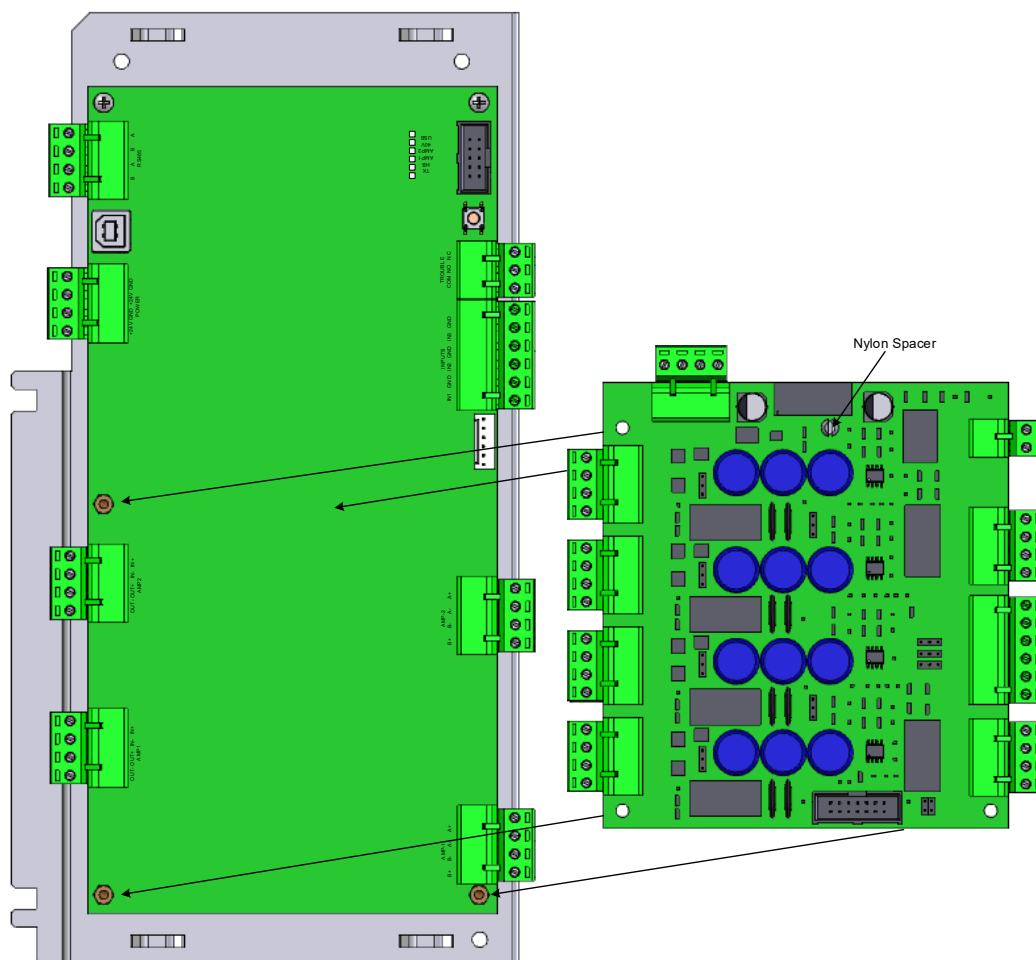


Figure 56 - NX10-ZS Module Installation

## 6.2.2 Wiring

The NX10-ZS audio zone splitter module requires wiring to the NX10-AMP-80 audio amplifier's 24 VDC power terminals, connection to one or both audio amplifier circuits (speaker circuits) and wiring to one (all circuits active) or multi (individual circuit activations) relay contacts. In addition, if a specific zone splitter trouble is required, wiring the on-board fail-safe Form A (normally closed) relay contact to an input point on the fire alarm control panel. If a specific zone splitter trouble indication is not required, all NX10-ZS trouble status is reported to the interfaced NX10-AMP-80 audio amplifier circuit (speaker circuit).



*The NX10-ZS zone splitter module reports module and speaker circuit status (i.e., opens, shorts and ground fault conditions) via the connected audio amplifier's circuits (speaker circuits). If individual zone splitter status is required, the zone splitter module's normally closed fail-safe trouble relay contact can be monitored.*

### 6.2.2.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation		Terminal Description
TB1	+24V DC IN	24V	24 VDC Power (Positive) In/Out
		0V	24 VDC Power (Negative) In/Out
		24V	24 VDC Power (Positive) In/Out
		0V	24 VDC Power (Negative) In/Out
TB2	TROUBLE	COM	Trouble Relay Common
		N/O	Trouble Relay Normally Open (Closed when Powered)
TB3	ZONE 1	A+	Class A (Positive) Speaker Circuit Return
		A-	Class A (Negative) Speaker Circuit Return
		B-	Class B (Negative) Speaker Circuit Out
		B+	Class B (Positive) Speaker Circuit Out
TB4	AUDIO INPUT 2	B+	Class B (Positive) Audio Input
		B-	Class B (Negative) Audio Input
		A-	Class A (Negative) Audio Return
		A+	Class A (Positive) Audio Return
TB5	AUDIO INPUT 1	B+	Class B (Positive) Audio Input
		B-	Class B (Negative) Audio Input
		A-	Class A (Negative) Audio Return
		A+	Class A (Positive) Audio Return
TB6	INPUT ZONE SELECTION	COM	Common Switching Voltage
		Z1	Zone 1 Activation Input
		Z2	Zone 2 Activation Input
		Z3	Zone 3 Activation Input
		Z4	Zone 4 Activation Input
		ALL	Zone 1, 2, 3 and 4 Activation Input
TB7	ZONE 2	A+	Class A (Positive) Speaker Circuit Return
		A-	Class A (Negative) Speaker Circuit Return
		B-	Class B (Negative) Speaker Circuit Out
		B+	Class B (Positive) Speaker Circuit Out
TB8	ZONE 3	A+	Class A (Positive) Speaker Circuit Return
		A-	Class A (Negative) Speaker Circuit Return
		B-	Class B (Negative) Speaker Circuit Out
		B+	Class B (Positive) Speaker Circuit Out
TB9	ZONE 4	A+	Class A (Positive) Speaker Circuit Return
		A-	Class A (Negative) Speaker Circuit Return
		B-	Class B (Negative) Speaker Circuit Out
		B+	Class B (Positive) Speaker Circuit Out

### 6.2.2.2 Electrical Specifications

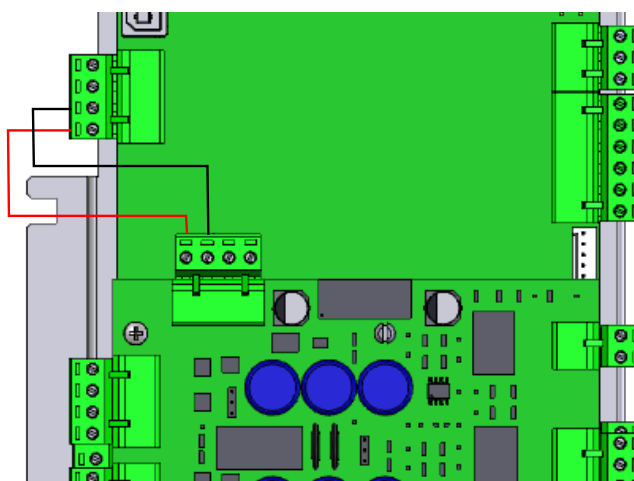
<b>Operating Voltage</b>	24 VDC
<b>Operating Current</b> Quiescent One Circuit Active All Circuits Active	46mA 53mA 76mA
<b>Speaker Circuits</b> ZONE 1 ZONE 2 ZONE 3 ZONE 4	30 Watts maximum per NX10-ZS module Class A or B, 25 Vrms @ 10 Watts max., 47K end-of-line Class A or B, 25 Vrms @ 10 Watts max., 47K end-of-line Class A or B, 25 Vrms @ 10 Watts max., 47K end-of-line Class A or B, 25 Vrms @ 10 Watts max., 47K end-of-line
<b>Audio Input 1 &amp; 2</b>	25 Vrms @ 30 Watts maximum (one or both circuits)

#### 6.2.2.2.1 LEDs

LED	Function	Description
1	O/C Z1	Zone 1 Open Circuit
2	S/C Z1	Zone 1 Short Circuit
3	O/C Z2	Zone 2 Open Circuit
4	S/C Z2	Zone 2 Short Circuit
5	O/C Z3	Zone 3 Open Circuit
6	S/C Z3	Zone 3 Short Circuit
7	O/C Z4	Zone 4 Open Circuit
8	S/C Z4	Zone 4 Short Circuit

#### 6.2.2.3 24 VDC Power



Wire 24 VDC power from the audio amplifier's POWER +24V (positive) and GND (negative) terminals to the +24V (positive) and 0V (negative) terminals of the NX10-ZS zone splitter module (opposite).



#### 6.2.2.4 NX10-AMP-80 Audio Amplifier Circuit

Wire one or both audio amplifier circuits (speaker circuits) [AMP1 SPKR and AMP2 SPKR] to the AUDIO INPUT 1 and AUDIO INPUT 2 terminals (if both audio amplifier circuits are to be used) of the NX10-ZS zone splitter module. Audio amplifier circuit AMP 1 SPKR B+ and B- to AUDIO INPUT 1 B+ and B- (B+ to B+, B- to B-) of the zone splitter module. Audio amplifier circuit AMP 2 SPKR B+ and B- to AUDIO INPUT 2 B+ and B- (B+ to B+, B- to B-) of the zone splitter module.

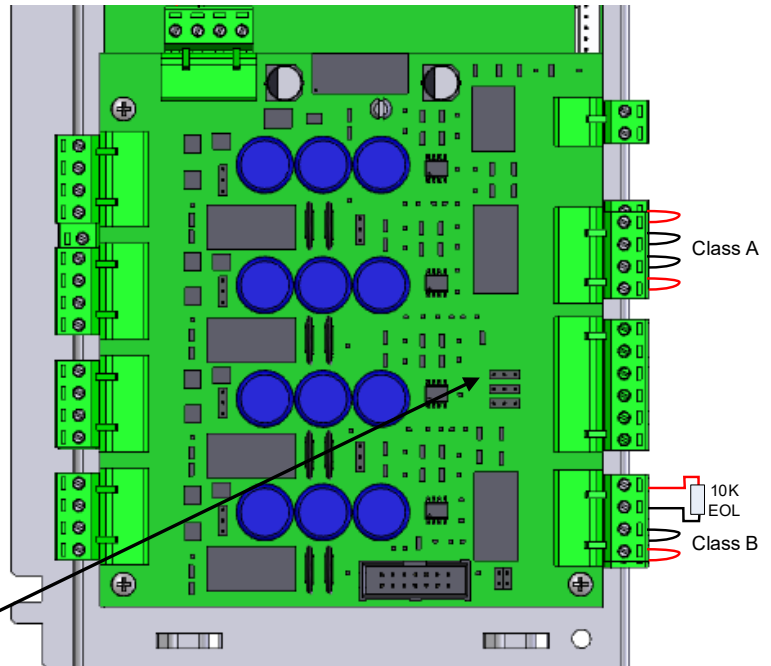If wired Class B, place the audio amplifier circuits supplied 10K end-of-line (EOL) resistor on the A- and A+ AUDIO INPUT 1 and AUDIO INPUT 2 (if used) terminals of the zone splitter module. If wired Class A, wire the AUDIO INPUT 1 and AUDIO INPUT 2 (if used) A- and A+ terminals back to the audio amplifier circuit's AMP 1 SPKR and AMP2 SPKR, A- and A+ terminals (opposite).




*Based on whether the NX10-ZS zone splitter module is splitting one (1) or two (2) audio amplifier circuits (speaker circuits), set jumpers J7, J6 and J1 to the 1 AUTO INPUT or 2 AUDIO INPUTS.*

#### 6.2.2.5 Zone (Speaker) Circuit Activation

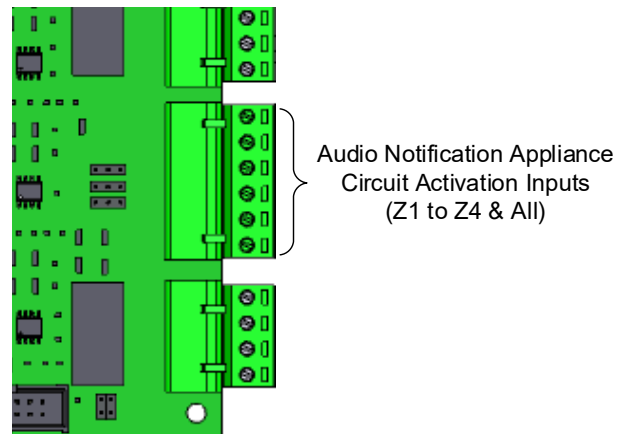The Zone (Speaker) Circuits of the NX10-ZS are activated by using normally open relay contacts and transferring the INPUT ZONE SELECTION common switching voltage (COM) to the individual zone activation inputs (Z1, Z2, Z3 and/or Z4) of each zone (speaker) circuit or by activating the INPUT ZONE SELECTION ALL, which will activate all the zone (speaker) circuits.



*Zone splitter speaker circuit activations are unsupervised, wiring must be within 20 feet of the activation relay contact in same room and in rigid conduit.*




#### 6.2.2.5.1 Peripheral Bus Controlled

To allow an associated peripheral bus controlled, audio amplifier to activate the zone splitter speaker circuits, wire a jumper between the INPUT ZONE SELECTION COM and ALL terminals (opposite). This jumper when installed forces the four (4) speaker circuits associated with the zone splitter module to always be active. By the speaker circuits always being active, the peripheral bus controlled, activation of the audio amplifier's speaker circuits will immediately be broadcasted through the zone splitter module.



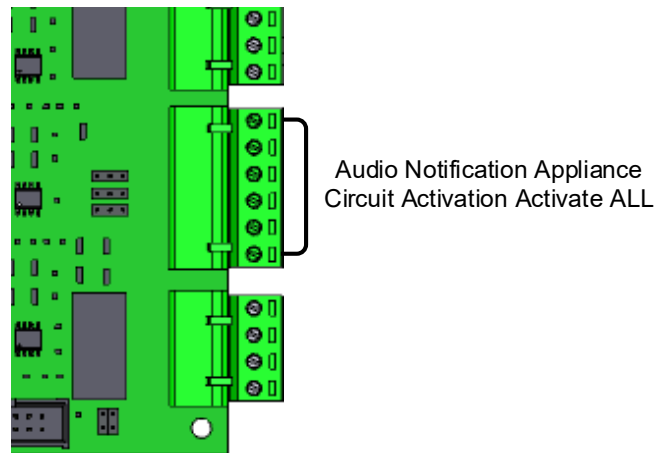*When the zone splitter module is used with a peripheral bus, controlled audio amplifier module, a jumper wire must be installed between the INPUT ZONE SELECTION terminals COM and ALL.*



#### 6.2.2.6 Zone (Speaker) Circuit Wiring

The NX10-ZS zone splitter module zone (speaker) circuits are capable of being wired either Class A or B based on module jumper selections. If wired Class A, set the associated zone speaker circuit jumper to the A position. If wired Class B, set the associated zone speaker circuit jumper to the B position.

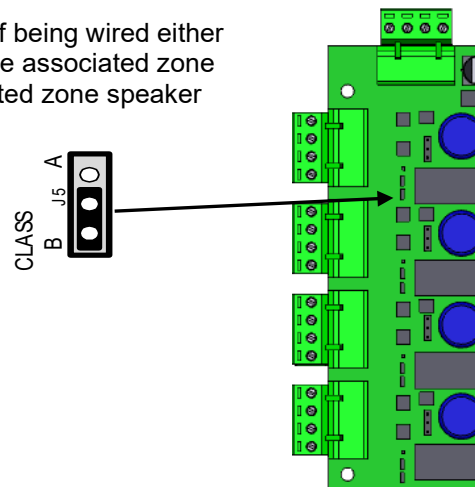
Zone (Speaker) Circuit Jumpers:

ZONE 1 (speaker circuit 1) = J5

ZONE 2 (speaker circuit 2) = J9

ZONE 3 (speaker circuit 3) = J10

ZONE 4 (speaker circuit 4) = J11



To wire speaker circuits of the zone splitter module, wire the B+ and B- terminals of the speaker circuit to the field installed speakers. If wired Class B, place the supplied 47K end-of-line (EOL) resistor at the last field speaker. If wired Class A, return the wiring of the last field speaker back to the A+ and A- terminals of the speaker circuit (Figure 57).

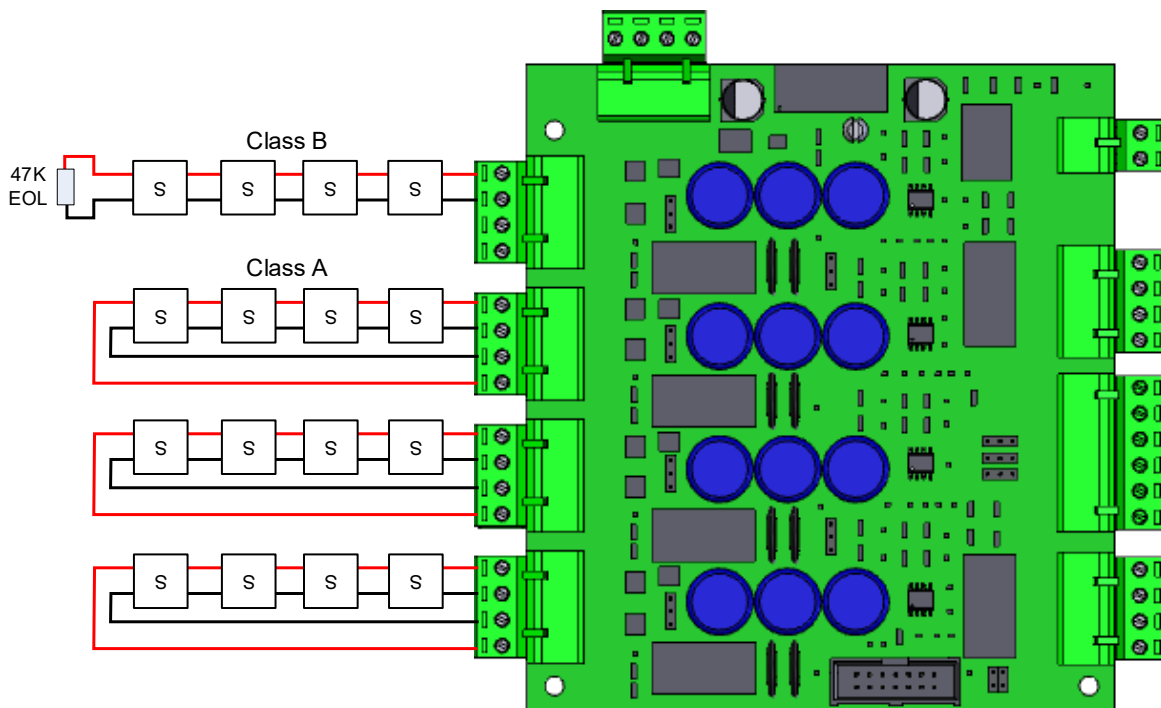


Figure 57 - NX10-ZS Speaker Circuit Wiring

## 6.3 NX10-EM-PRN Printer Module

The NX10-EM-PRN printer module is a configurable printer which can be installed on the inner door of the Neo NX command centre fire alarm control panel.

### 6.3.1 Installation



**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.**

Due to cabling requirements, it is suggested that the NX10-EM-PRN printer module be mounted in the left (looking at the back of the inner door) single aperture location of the Neo NX command centre's inner door alongside the NX10-ACS-DSP.

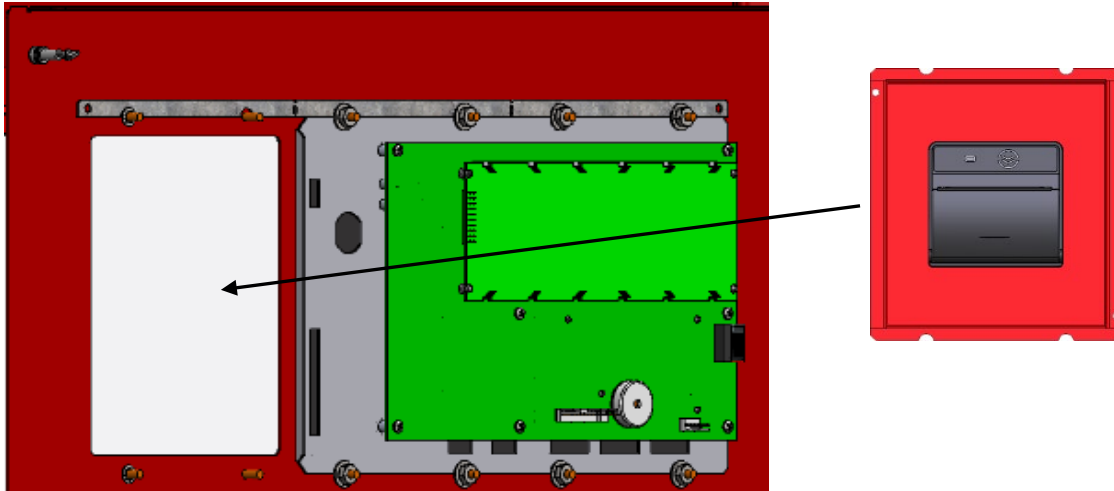


Figure 58 - NX10-EM-PRN Printer Module Installation

#### 6.3.1.1 Package Contents

To install an NX10-EM-PRN printer module, carefully unpack the module from its box, within the box you will find the following items:

- One (1) NX10-EM-PRN Module
- One (1) plastic bag containing:
  - Four (4) hex steel nuts
  - Four (4) washers
  - Four (4) star lock washers
  - Four (4) adhesive backed cable clips.
  - One (1) adapter card with 14-pin and 10-pin male ports
  - One (1) 14-pin flat ribbon cable with connectors
  - Two (2) male/female nylon standoffs
  - One (1) female/female nylon standoff
  - One (1) panhead screw

#### 6.3.1.2 Remove

##### NX10-EM-PRN Printer Module

1. Remove the 14-pin flat ribbon cable female connector from the 14-pin male port on the NX10-EM-PRN printed circuit board (PCB) (Figure 60).
2. Remove the four (4) hex steel nuts, four (4) lock washers and four (4) regular washers (Figure 58).
3. Remove the NX10-EM-PRN printer module from the inner door.

##### NX10-EM-PRN Adaptor Card

1. Remove the 14-pin flat ribbon cable connector from the port on the adaptor card.
2. Remove the 10-pin flat ribbon cable connector from the port on the adaptor card.
3. Remove the two (2) panhead screws which mount the card onto the NX10-ACS-DSP PCB.
4. Carefully remove the adaptor card from the NX10-ACS-DSP PCB.
5. Remove the panhead screw which holds the female/female nylon standoff to the adaptor and retain them for the new adaptor card.

### 6.3.1.3 Install

#### NX10-EM-PRN Adaptor Card

1. Before you install the NX10-EM-PRN adapter card, fit the supplied female/female nylon standoff to the single mounting hole on the left side of the adapter card and secure with the supplied panhead screw (Figure 59).
2. On the NX10-ACS-DSP keyboard display (PCB), remove the two (2) right side bottom screws securing the PCB to its associated mounting plate.
3. With the NX10-ACS-DSP PCB screws removed, install the two male/female nylon standoffs supplied (Figure 59).
4. Mount the NX10-EM-PRN adapter card to the standoffs and secure it with the removed two (2) panhead screws (Figure 59).

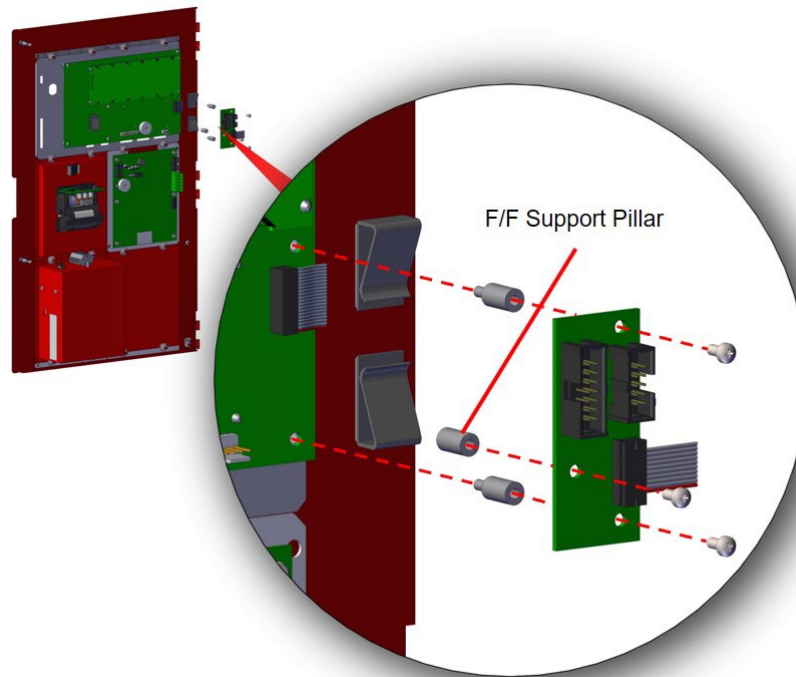


Figure 59 - NX10-EM-PRN Adapter Card Installation



### NX10-EM-PRN Printer Module

1. Remove the preinstalled blank single aperture plate on the preconfigured command centre's inner door or remove the four (4) hex steel nuts, lock washers and regular washers on the modular command centres single aperture location.
2. Place the NX10-EM-PRN printer module between the single aperture location male studs.
3. Install the regular washers, lock washers and hex steel nuts (Figure 58).
4. Install the supplied adhesive backed cable clips (Figure 61).
5. Disconnect the NX10-ACS-DSP keyboard display 10-pin cable terminated at the NX10-ACS base card PL2 port.
6. Install the cable disconnected above, through the top cable clip mounted on the enclosure inner door and plug it into the 10-pin male port on the adapter card.
7. Install the adapter card 10-pin ribbon cable and feed it through the bottom cable clip mounted on the enclosure inner door, then plug it into the NX10-ACS base card's PL2 port (Figure 60).
8. Take the 14-pin flat ribbon cable with female connectors (supplied) and attach one end to the 14-pin male port on the adapter card. Feed the cable through the two cable clips (one installed on NX10-ACS-DSP PCB and the other installed on the NX10-EM-PRN mounting plate) and plug it into the 14-pin male port located on the NX10-EM-PRN printed circuit board (Figure 60).

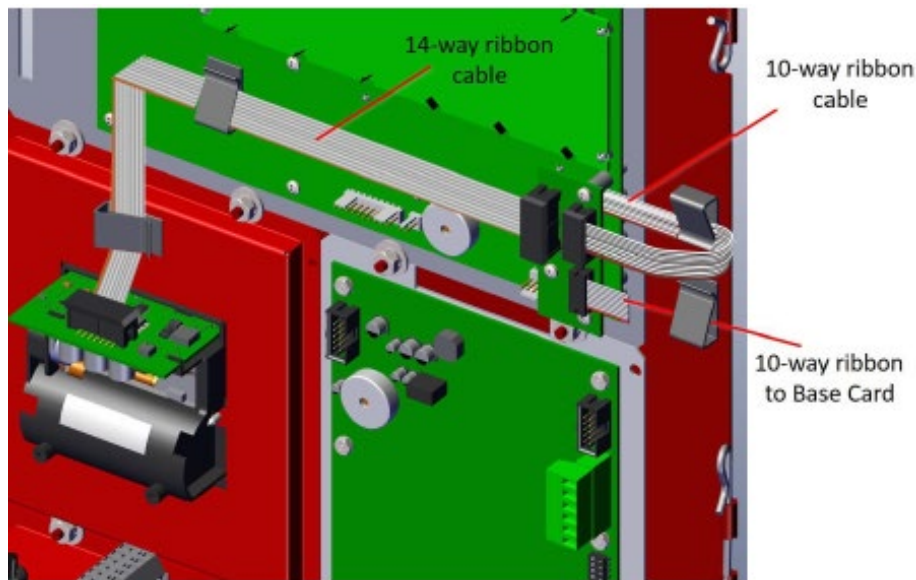


Figure 60 - NX10-EM-PRN Module

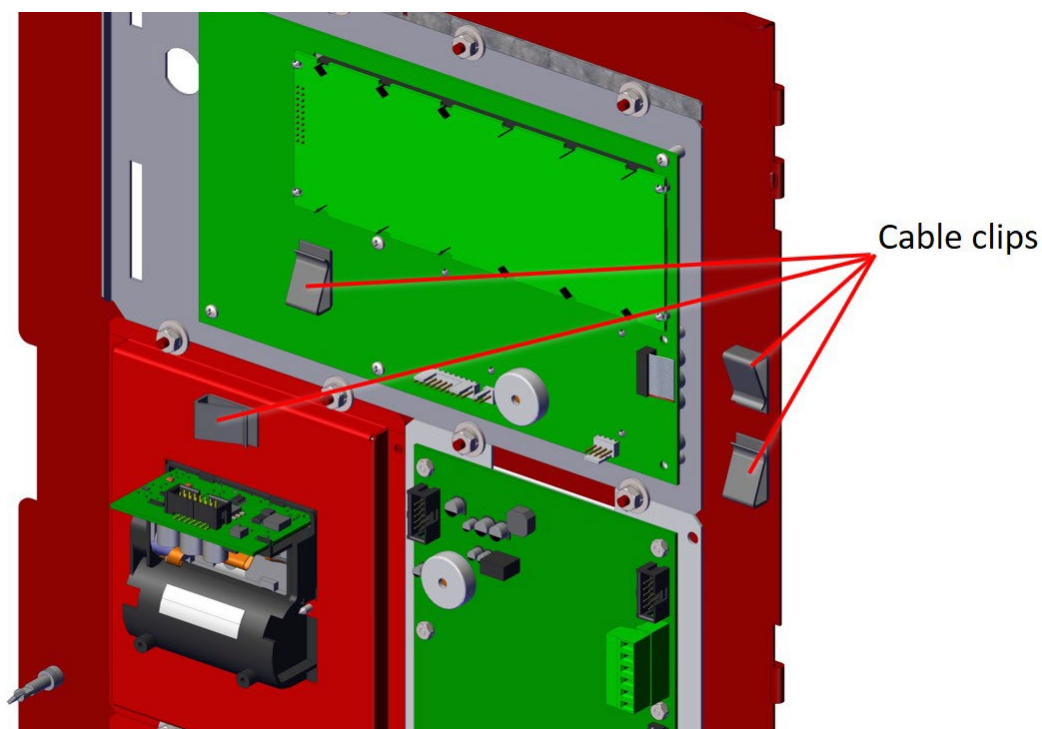


Figure 61 - NX10-EM-PRN Cable Clips

## 6.3.2 Wiring

### 6.3.2.1 Terminal Summary

Connector	Termination Location
14-Pin Female Connector	Connect one end to the supplied 14-pin male connector to the port on the adapter card, connect the other end to the 14-pin male connector to the port located on the NX10-EM-PRN printed circuit board

### 6.3.2.2 Electrical Specifications

Printer Connection	Supervised, POWER-LIMITED
Nominal Voltage	24 VDC
24 VDC Power	Supervised, Filtered and Regulated
Operating Current Quiescent Active (printing)	18mA 538mA
Printer Type	Thermal dot matrix
Printer Resolution	384 dots per line
Paper	Thermal, 2.28" (55mm) wide x 1.26" (32mm) diameter roll Length 10.9yd (10m)
Built on-board sensor with trouble LED	Out of Paper Paper door open

## 7 Optional Peripheral Bus (PBUS) Modules

### 7.1 Switch LED Modules

Switch LED modules are peripheral bus field configurable switch input and LED status indicator modules for use with the Neo NX fire alarm control panel. There are six (6) types of switch LED modules (NX10-EM-ASW-16, NX10-EM-ACM-6, NX10-EM-IO48, NX10-FA-LED16, NX10-FA-LED32R and NX10-FA-LED32Y) available based on installation requirements.

Module	Description
NX10-EM-ASW-16	Switch/LED Module incorporating 16 switches and 48 LEDs
NX10-EM-ACM-6	Fan/Damper Module
NX10-EM-IO48	Switch LED Driver Module incorporating 16 switch inputs and 48 LED Drive Outputs
NX10-FA-LED16	LED Module incorporating 16 red and 16 yellow LEDs
NX10-FA-LED32R	LED Module incorporating 32 red LEDs
NX10-FA-LED32Y	LED Module incorporating 32 yellow LEDs



*Any combination of sixteen (16) switch LED modules (NX10-EM-ASW-16, NX10-EM-ACM-6, NX10-EM-IO48, NX10-FA-LED16, NX10-FA-LED32R and NX10-FA-LED32Y) can be connected to the NX10-ACS base card's peripheral bus.*

Switch LED modules are extremely flexible and easy to configure/program, switches can be programmed to bypass (disable/enable) points, zones, and/or groups. They can also be programmed to turn ON/OFF relay points, NAC circuits or they can be configured to provide complete HOA (Hand-Off-Auto) control functionality. When used with the peripheral bus, controlled NX10-AMP-80 audio amplifier module, switches can be configured for all call, selective zone/area paging, individual message selection, etc. LEDs can be programmed for various status indications by points, zones and/or groups within the system, including alarm, waterflow alarm, CO alarm, supervisory, trouble, switch active, relay active, etc. In addition, the LEDs can be programmed for primary and secondary status events, along with flash rates based on last known status/event (i.e.: off, on steady, 1/2 or 1 second flash). Easy slide-in label pockets are provided on all switch LED modules, except of course the NX10-EM-IO48 driver module, allowing switches and LEDs to have customized labelling based on installation usage.



*For additional programming and configuration of the Switch LED Modules refer to NX686-100 PC-NeT Manual.*

### 7.1.1 Installation



**This equipment contains electrostatic discharge sensitive devices. Make sure that you always obey anti-static precautions when working on the system. Failure to obey ESD procedures can damage the equipment.**

#### 7.1.1.1 Package Contents

To install a switch LED module, carefully unpack the module from its box, within the box you will find a plastic bag containing the following items:


- Four (4) hex steel nuts
- Four (4) washers
- Four (4) star lock washers
- One (1) 10-pin flat ribbon cable with connectors
- Four (4) cable ties

#### 7.1.1.2 Remove

1. Disconnect AC and DC power.
2. Unplug the terminal block and if connected the 10-pin flat ribbon cable(s).
3. Remove the four (4) hex steel nuts, star lock washers and washers securing the Switch LED module to the enclosure's inner door and remove the module from the aperture location.

#### 7.1.1.3 Install

1. Remove the preinstalled blank single aperture plate on the preconfigured command centre's inner door or remove the four (4) hex steel nuts, lock washers and regular washers on the modular command centres single aperture location.
2. Place the Switch LED module between the single aperture location male studs and secure with the removed four (4) washers, star lock washers and hex steel nuts (Figure 62).

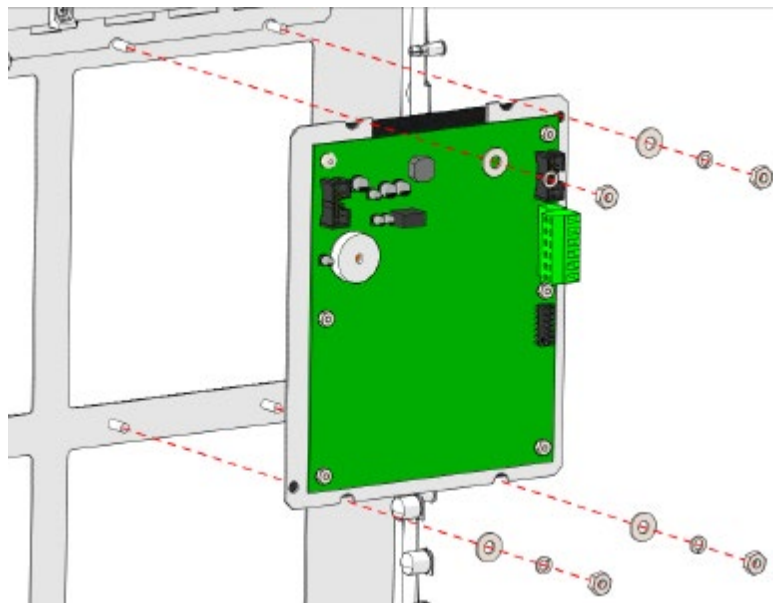

*Figure 62 - Switch LED Module Installation*

7.1.2 Wiring

Each Switch LED module requires connection to the NX10-ACS base card's peripheral bus and to a 24 VDC filtered and regulated power supply. In addition, the Switch LED module can be wired to supervise a power supply (Figure 63).

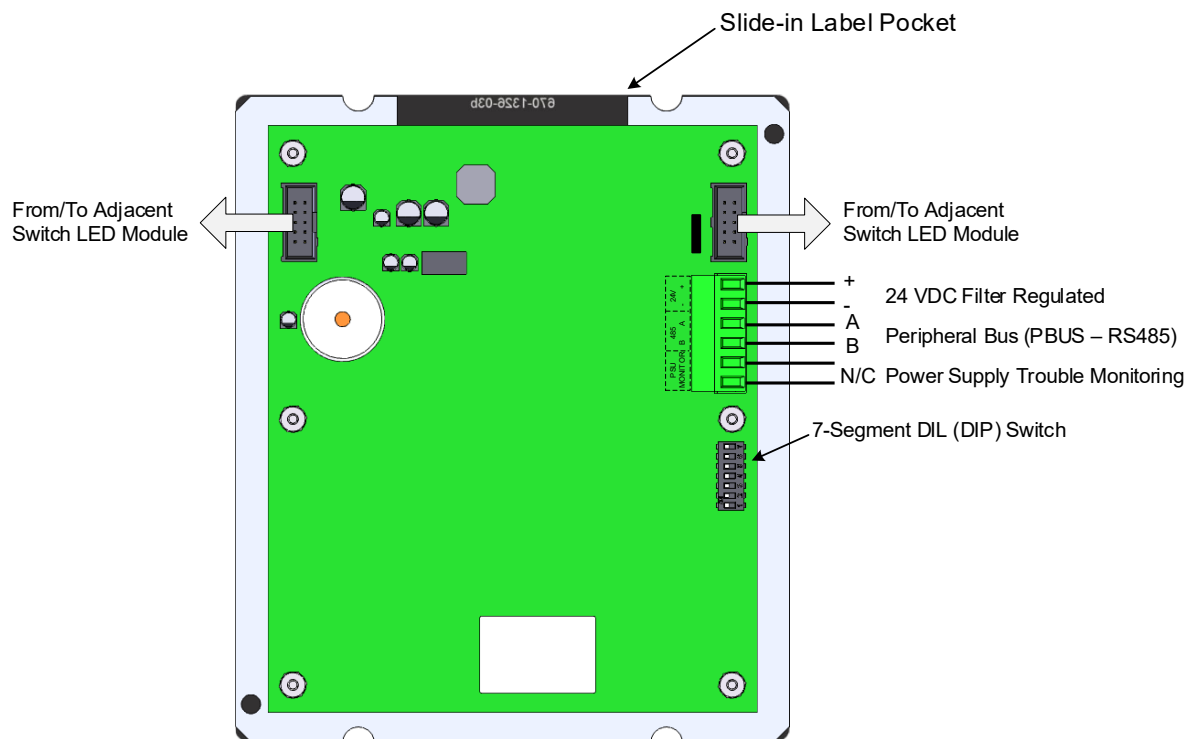


Figure 63 - Switch LED Module Wiring

7.1.2.1 Terminal Summary

Not Visible Terminal Designation	Visible Terminal Designation	Terminal Description
TB1	24V + 24V - 485 A 485 B PSU Monitor PSU Monitor	Positive 24 VDC Negative 24 VDC Peripheral Bus COMM A Peripheral Bus COMM B Normally Closed Supervised Remote Power Supply Monitoring Input

### 7.1.2.2 Electrical Specifications

Operating Current	Quiescent	Active State (All switches/LEDs)
NX10-EM-ASW-16	14mA	55mA
NX10-EM-ACM-6	14mA	55mA
NX10-EM-IO48	14mA	55mA
NX10-FA-LED32R or Y	14mA	55mA
NX10-FA-LED16	14mA	55mA
Operating Voltage	18-28 VDC	
Switches (Buttons) NX10-EM-ASW-16 NX10-EM-ACM-6 NX10-EM-IO48	16 programmable 18 programmable 16 programmable switch inputs	
LEDs NX10-EM-ASW-16 NX10-EM-ACM-6 NX10-FA-LED16 NX10-FA-LED32R NX10-FA-LED32Y NX10-EM-IO48	48 programmable (16 green, 16 red, 16 yellow) 36 programmable (18 white, 6 yellow, 12 bicolour (red or green)) 32 programmable (16 red, 16 yellow) 32 programmable (32 red) 32 programmable (32 yellow) 48 programmable LED drive outputs	
Buzzer	4KHz Programmable	
PL3 and PL4	Daisy chain in/out serial connections for transmission of power and PBUS.	

#### 7.1.2.2.1 LEDs

LED	Function	Description
Green	TX	Peripheral Bus Transmit
Green	RX	Peripheral Bus Receive
Green	HB	Heartbeat

### 7.1.2.3 Peripheral Bus

To connect a Switch LED module to an Shield peripheral bus, wire terminals A and B of the Switch LED module to terminals A and B of the NX10-ACS base card peripheral bus, A to A, B to B (Figure 63). If the Switch LED module is the last peripheral bus module on the peripheral bus circuit, set the “485 EOL” DIP switch to the ON position (Figure 65).

### 7.1.2.4 24 VDC Power


The 24 VDC power for Switch LED modules can come from any fire alarm listed 24 VDC filtered and regulated power supply (NX10-ACS AUX power [non resettable], NX10-EM-PSU6 power supply charger, or any other power-limited, filtered, and regulated fire alarm listed power supply). Wire 24 VDC filter, regulated power to terminals 24V+ and – of the Switch LED module (Figure 63).



*The Switch LED modules can monitor a remote listed 24 VDC power supply for trouble conditions. To monitor a remote power supply, wire the power supply's trouble N/O contact (fail-safe [closed unless trouble]) to the PSU Monitor terminals of the switch LED module (Figure 63). When monitoring a remote power supply, set the “PSU MON DISABLED” DIP switch to its OFF position (Figure 65).*

#### 7.1.2.5 Multiple Switch LED Modules

If multiple Switch LED Modules are installed along-side each other on a single aperture row, wiring between the Switch LED modules can be done via the supplied 10-way flat ribbon cable (Figure 64).

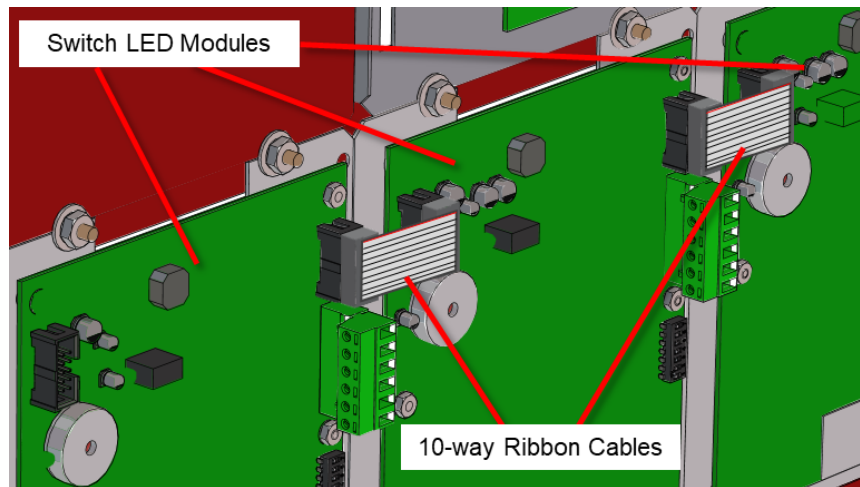

*Figure 64 - Switch LED Module Daisy Chain Wiring*

#### 7.1.3 Addressing

As each Switch LED module is connected to a peripheral bus, each module must be configured with a unique address (Figure 65). The address setting corresponds to the peripheral bus programming within the Shield, Dynamix Tools, Neo NX Config Tool.

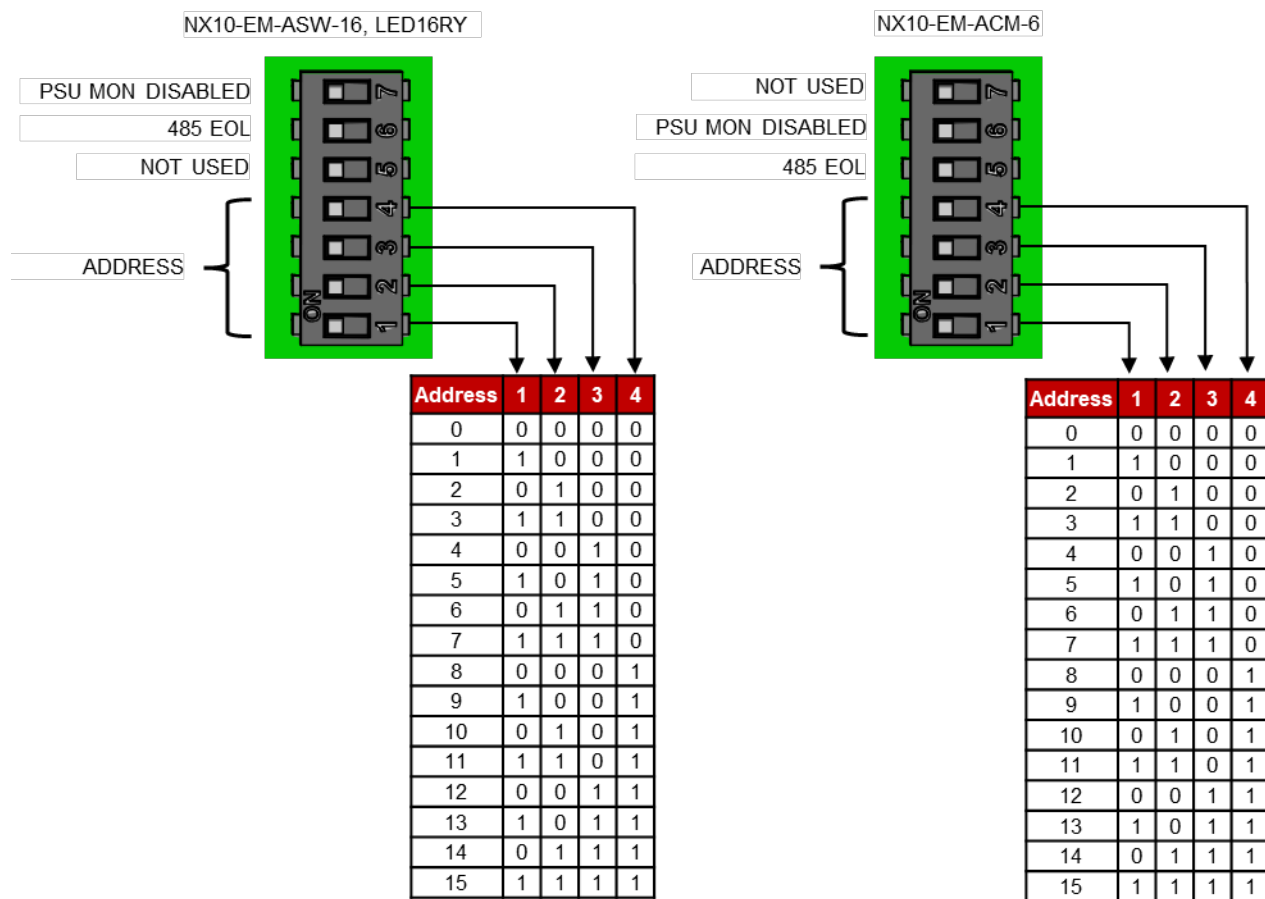


Figure 65 - Switch LED Module Addressing

#### 7.1.4 Switch LED Module Programming for Audio Control

The Shield NX10-EM-ASW-16 module is the Switch LED module that is utilized to manually control live voice communications and message/tones from the Neo NX fire alarm control panel. To program the NX10-EM-ASW-16 module, the module will need to be added to the system via the Shield Dynamix, Neo NX Config Tool.

To Add the NX10-EM-ASW-16 module to the system, in the Neo NX Config Tool navigate to the Installation List Neo NX10-ACS panel. Within the expanded Neo NX10-ACS panel view, click on the Peripheral Bus. The Peripheral Bus Device Selector will show a list of available panel Peripheral Bus Interfaces that can be added to the panel. Click on the Switch LED Module (NX10-EM-ASW-16) and it will highlight blue, it will also highlight Peripheral Bus Address 26 Gray (Figure 66).



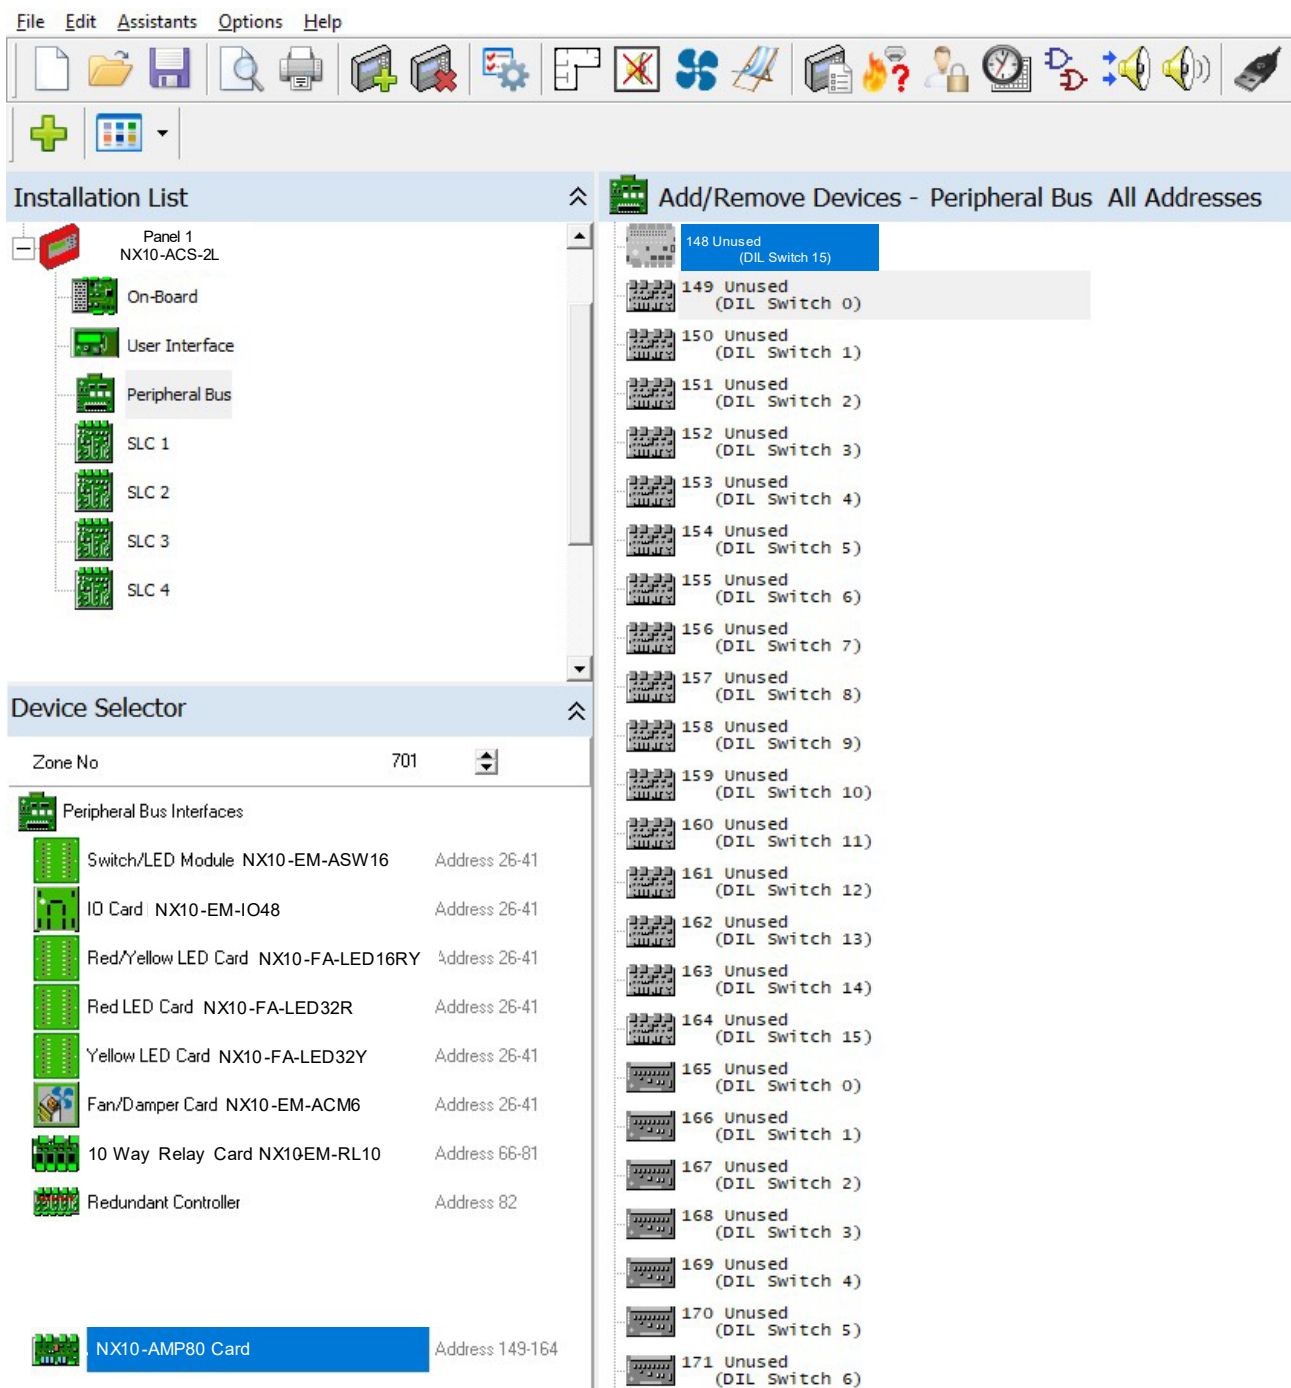




Figure 66 - Shield Neo NX Config Tool, NX10-EM-ASW-16 Peripheral Bus Device Selector


Address 26 (DIL Switch 0 [NX10-EM-ASW-16 address]) is a virtual peripheral bus address in the Neo NX fire alarm control panel, addresses 26 (DIL Switch 0) to 41 (DIL Switch 15) are virtual peripheral bus addresses allocated for the sixteen Switch LED modules.

#### 7.1.4.1 Adding an NX10-EM-ASW-16 Module

To add the NX10-EM-ASW-16 module to the system either click on the plus  icon or right-click on the highlighted

address  and click Add Device.

After the NX10-EM-ASW-16 module has been added to the peripheral bus, with the Address and Switch LED Module (NX10-EM-ASW-16) highlighted blue  26 Switch/LED Module (AX-ASW16) (DIL Switch 0), click on the Show Details

 icon to configure the NX10-EM-ASW-16 module. The following screens will appear (Figure 67).

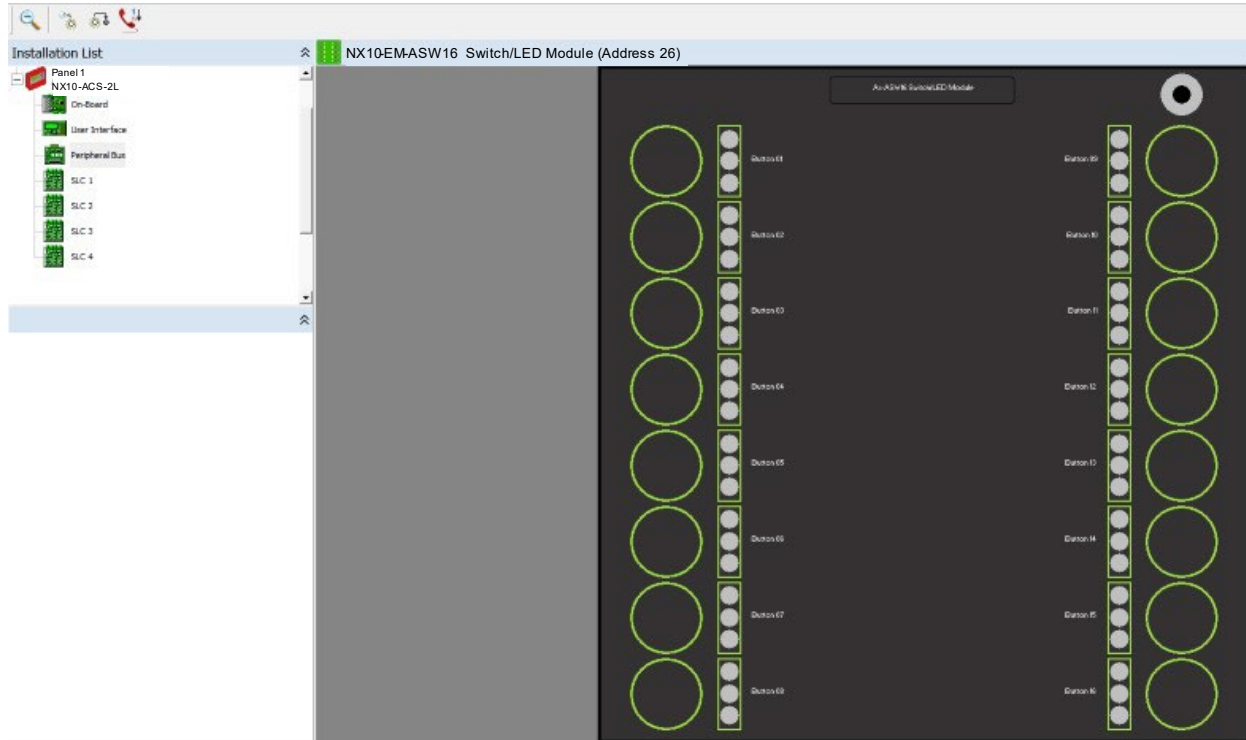


Figure 67 - Shield Neo NX Config Tool, NX10-EM-ASW-16 Module Programming Screen

#### 7.1.4.2 Programming Switch LEDs

To minimize and simplify switch and LED programming of a Shield peripheral bus controlled, audio installation, the Neo NX Config Tool has preconfigured application specific switch/LED selections. To use the application specific programming, move your cursor to the right of the switch and associated LEDs to be programmed until the area becomes highlighted, then click within the highlighted area. The switch area will highlight and the LEDs will illuminate. In addition, an Operation, Application area will open (Figure 68).


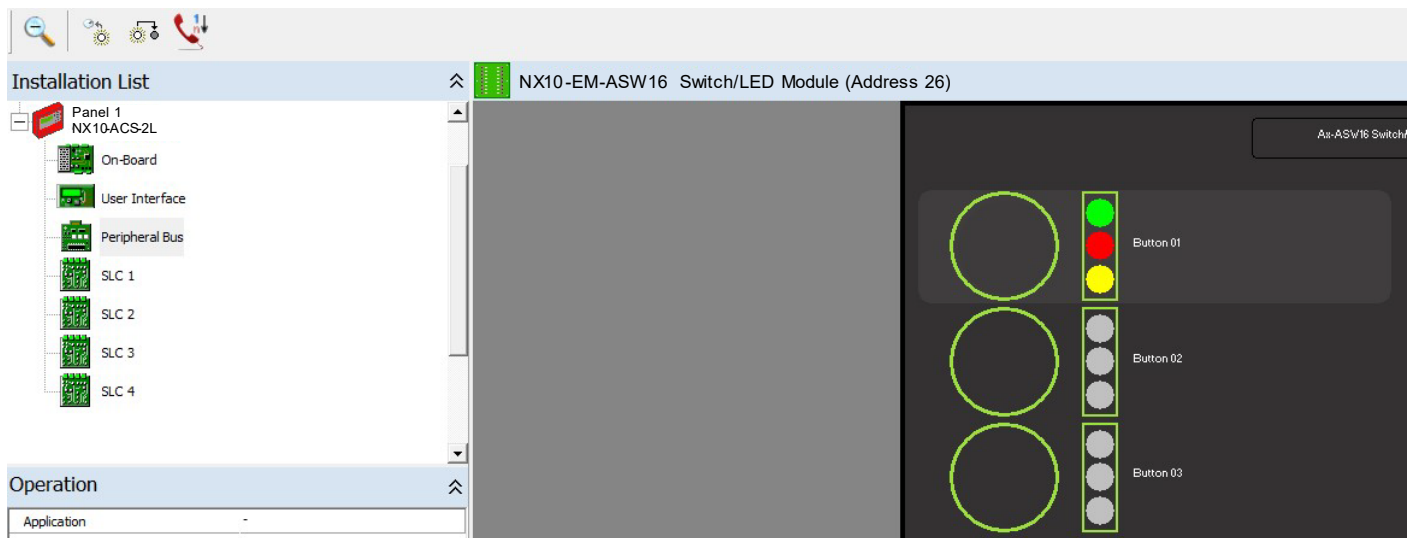
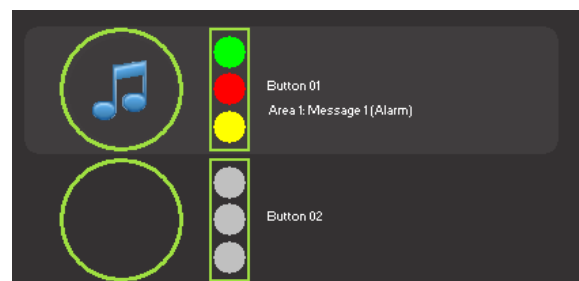
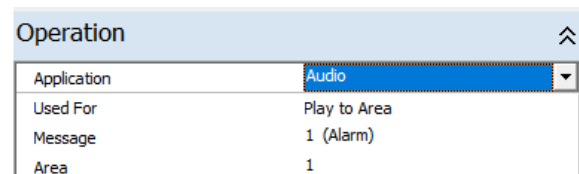


Figure 68 - Application Specific Switch/LED Programming


After the Operation Application area has opened, click on the dash to the right of the Application, this will highlight the dash area and provide a drop-down arrow icon.

Click on the drop-down arrow icon and a list of Application specific switch/LED selections will be available (Audio, Phone and Command Centre Control).

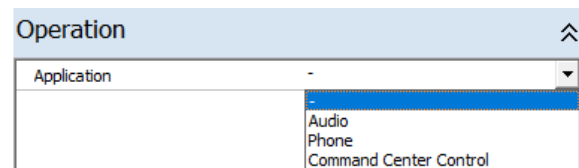As we are programming the NX10-EM-ASW-16 switch/LED for audio, select Audio. Once Audio is selected, the Used For, Message and Area will be populated. This automatically creates an Audio switch that will Play to Area 1 the audio amplifiers Alarm message.



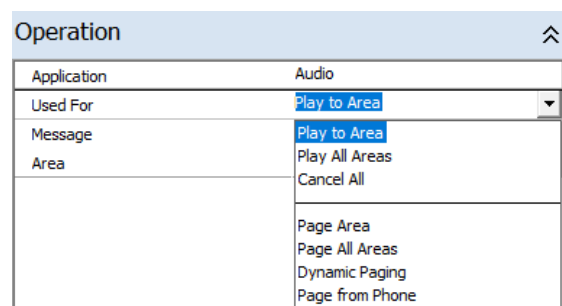To program switch/LEDs for another use, click on the Play to Area and a Used For drop-down selection will appear. Selections include, Page All Areas, Cancel All, Page Area, Page All Areas, Dynamic Paging and Page from Phone.



### 7.1.4.3 Page All Areas

To create a Page All Areas (ALL-Call) switch with status LED, click on the Page All Areas selection. The switch will now activate all audio area (Floor Amp) amplifiers for live voice paging from the microphone bus amplifier (MIC BUS AMP). In addition, the green LED will flash prior to paging and go steady when the microphone on the MIC BUS AMP is keyed and the audio area amplifiers are ready to page (Figure 69).

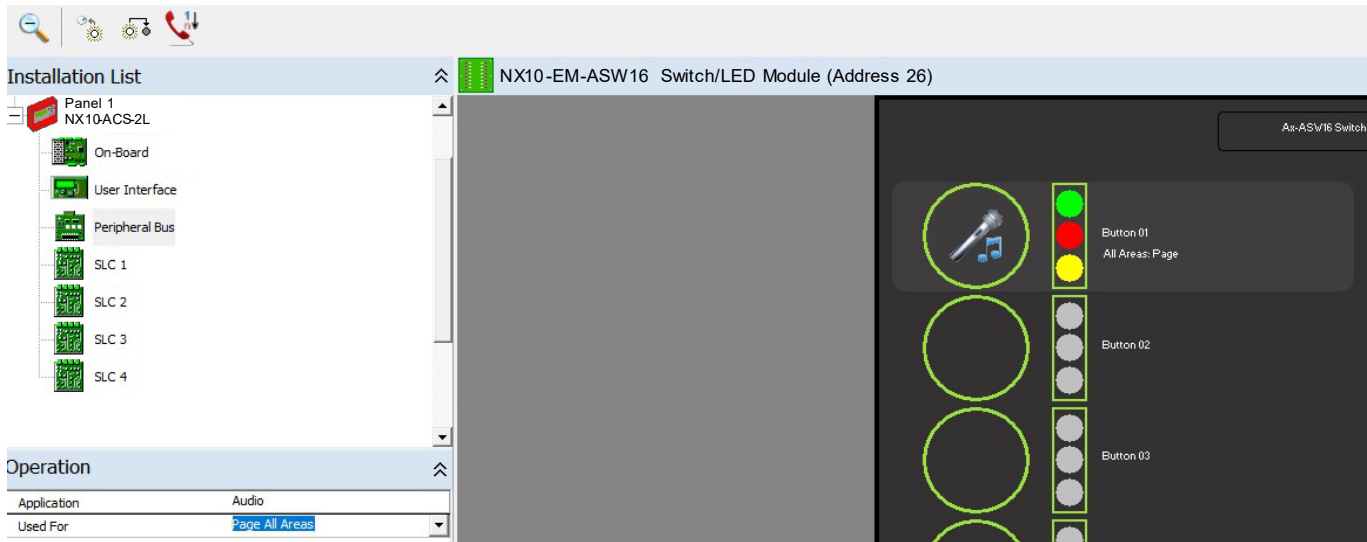


Figure 69 - NX10-EM-ASW-16 Switch/LED Page All Areas Programming

### 7.1.4.4 Page Area

To create individual Page Area (floor (area) paging) with status LEDs, click on the Page Areas selection. The highlighted switch with LEDs will now be configured for floor (area) paging and floor (area) audio circuit status. When the switch is activated the floor (area) amplifier (Floor Amp[s]) will activate for live voice paging from the microphone bus amplifier (MIC BUS AMP). In addition, the green LED will flash prior to paging and go steady when the microphone on the MIC BUS AMP is keyed, and the audio area amplifier(s) is ready to page. To provide additional floor (area) amplifier audio status, the red LED will illuminate steady when the floor (area) amplifier is playing an alarm message, and it will flash when playing an alert message. The yellow LED will also illuminate steady for a floor (area) amplifier trouble and flash if disabled (Figure 70).

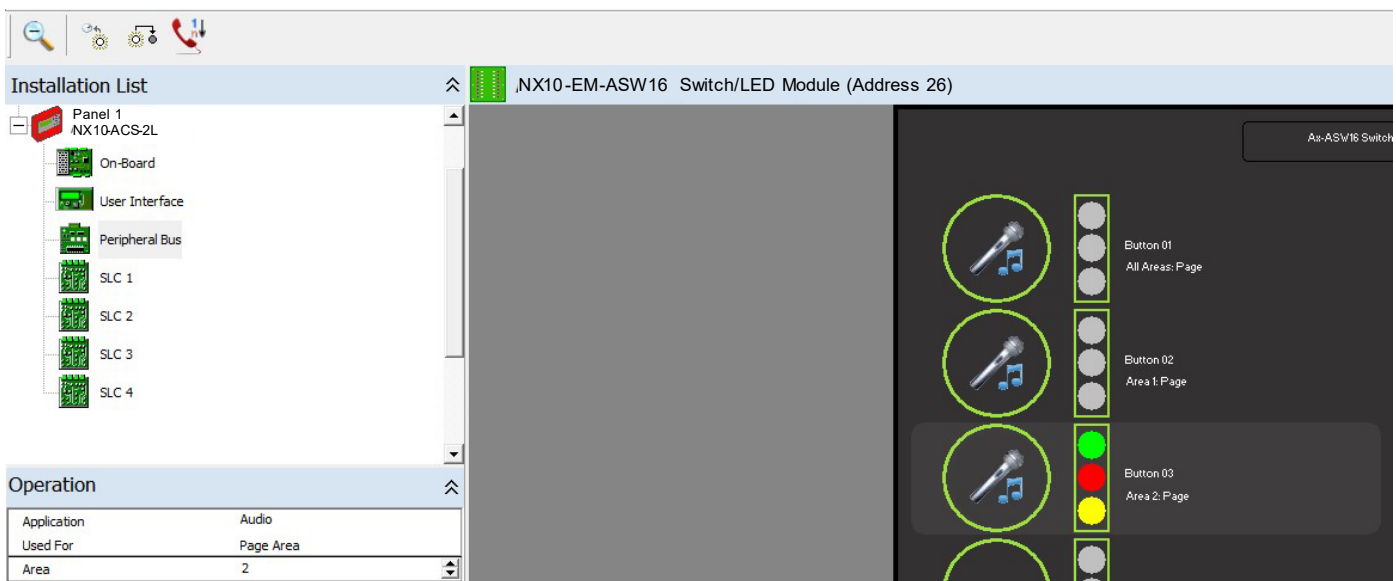


Figure 70 - NX10-EM-ASW-16 Switch/LED Page Area Programming

## 8 Recommended Cable Routing

Power limited and non-power limited circuit wiring must remain separate in the cabinet. All power limited circuit wiring must remain at least 0.25" (6.35 mm) away from any non-power limited circuit wiring. Furthermore, all power limited, and non-power limited circuit wiring must enter and exit the cabinet through different knockouts and/or conduits. Refer to Neo NX Wiring Guide Section 10.4.

Below is the recommended cable routing for the NX10-FACC(x) preconfigured and NX10-CC01 modular command centres (Figure 71) and NX10-FALCC(x) preconfigured and NX10-CC02 modular command centres (Figure 72) to meet the above-mentioned power limited wiring requirements:

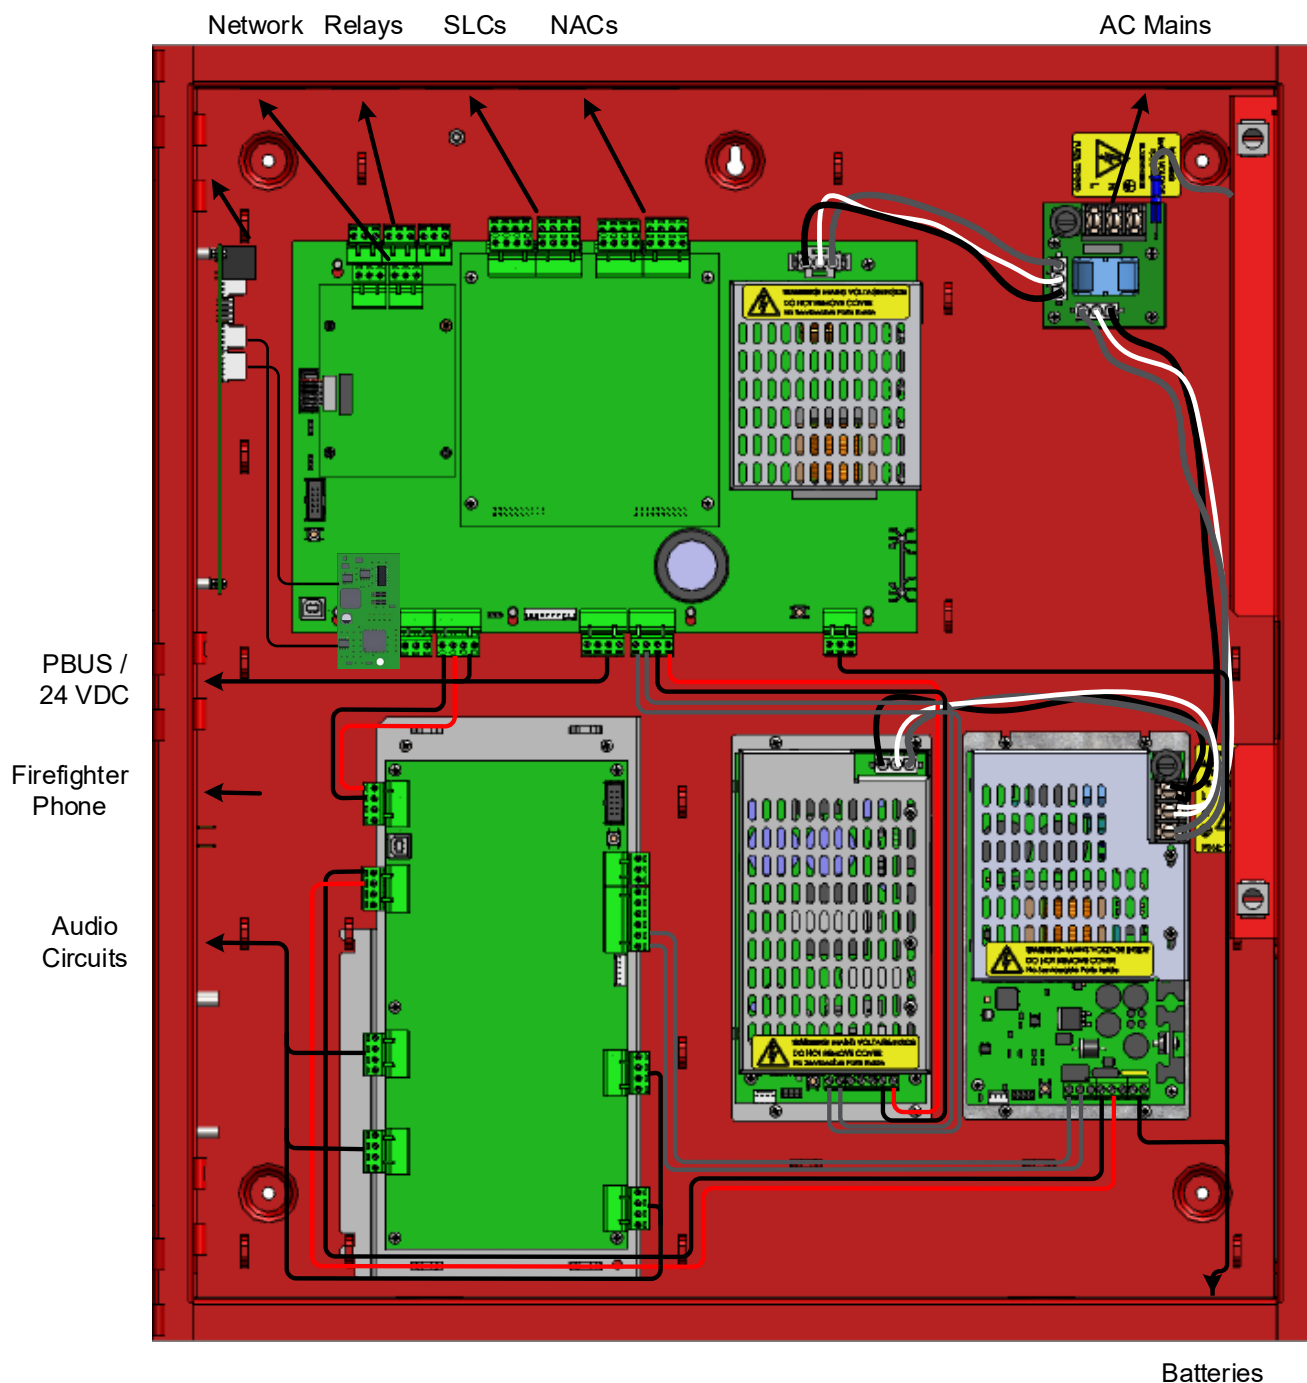


Figure 71 – NX10-CC01 Cable Routing



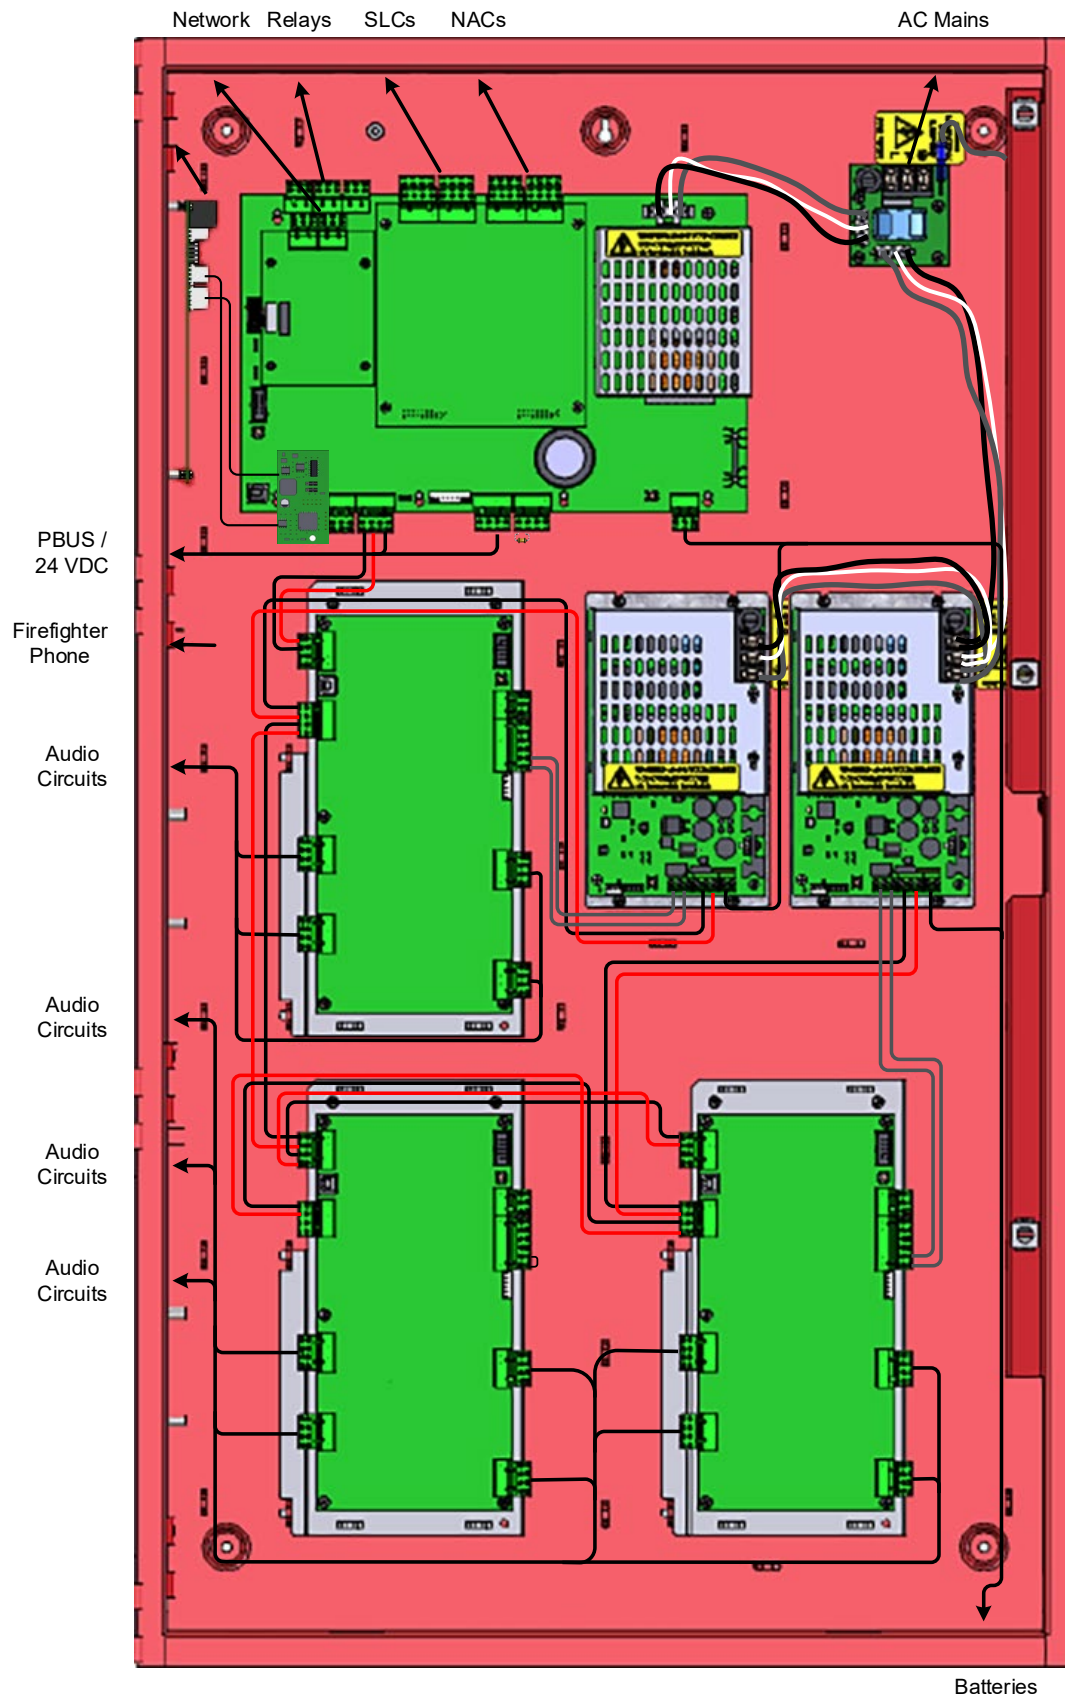


Figure 72 - NX10-CC02 Cable Routing

## 9 System Features

### 9.1 Drift Compensation

The Neo NX FACP incorporates drift compensation reporting and control, based on integral intelligent and enhanced smoke detector drift compensation. The drift compensation of the intelligent/enhanced smoke detectors are part of their internal signal-processing algorithm. The algorithm will compensate for changes in sensor output caused, for example, by dust in the chamber, and will therefore hold the sensitivity at a constant level even with severe chamber contamination. This increased stability is achieved without affecting the intelligent or enhanced detector's sensitivity to fire. The drift compensation level is stored in the detector's memory as a single value between 0 and 31. The Neo NX FACP takes this information and converts it to a more user-friendly value, detector Drift % (0-100). Device drift reports can be generated at any time from the FACP either by using the password protected NX10-ACS-DSP keyboard display or the Shield, Dynamix Tools, Neo NX Service Tool. The Shield, Dynamix Tools, Neo NX Service Tool allows viewing, printing, storage, etc. of clean/dirty drift values (0 to 100%) for all Neo NX FACP intelligent and enhanced detectors.



*The programmed installation sensitivity of smoke detectors will not change unless the detector has already indicated a Device Dirty trouble signal (drift of 100%) on the FACP and the device is not cleaned or replaced.*

There are two (2) methods the Neo NX FACP deals with drift compensation, Method 1 – No Calibration Clock Setting or Method 2 - Calibration Clock Setting.

#### Method 1 – No Calibration Clock (Default Setting)

When an intelligent or enhanced smoke detector reaches its internal drift compensation limit (100% drift), a drift flag will be set in the individual device. At the same time, the Neo NX FACP will initiate a trouble and report a Device Dirty for the specific intelligent/enhanced smoke detector. At the 100% drift, the intelligent/enhanced smoke detector will maintain its programmed sensitivity. The Device Dirty indication and its programmed sensitivity will be maintained until the device is cleaned and recalibrated or replaced, however if the device is not cleaned or replaced, when a change in calibration is required again, the programmed sensitivity of the device can no longer be maintained.

#### Method 2 - Calibration Clock (Programmable Setting)

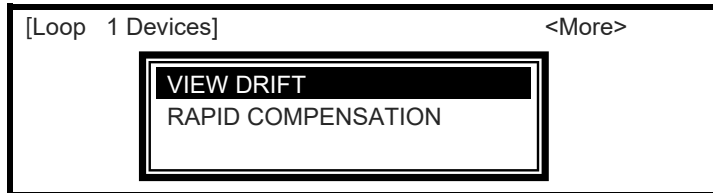
This method is normally used when the installer has a maintenance agreement on the installed Neo NX FACP. With this method of drift compensation reporting, the installer would program a Calibration Clock for a specific time-of-day and days-of-week for the intelligent/enhanced smoke detectors to be calibrated. During calibration, if an intelligent/enhanced detector reaches a 100% drift, a Dirty Scale 1 for the address will be placed in the Neo NX FACP Problems Menu area. When placed in the Problems Menu area, the Dirty Scale 1 information can be viewed via the keyboard display during the service personnel's next scheduled maintenance. In addition, when the Dirty Scale 1 status is generated, specific CBE indications can occur. Like Method 1, the programmed sensitivity of the intelligent/enhanced detector will be maintained if the Dirty Scale 1 is either cleaned and recalibrated or replaced. If the device is not cleaned or replaced, when a calibration test occurs that requires an additional device calibration, the Neo NX FACP will indicate a Device Dirty status and device sensitivity can no longer be maintained.



*With Method 2 of Dirty Scale 1 status, when the dirty device tries to recalibrate and it can no longer maintain its programmed sensitivity, a trouble signal Device Dirty will be generated at the Neo NX FACP.*

### 9.1.1 Drift Compensation Viewing

If not using the Shield, Dynamix Tools, Neo NX Service Tool, intelligent detector drift compensation can be viewed via the Neo NX fire alarm control panel's keyboard display. To view drift compensation, while in panel programming, navigate to the Loops/SLC area, select a Loop number, and enter the View/Edit area, select a detector, and scroll across (→) to the end of the detector type's programming area and under the Additional Info field area press the ✓ button and a View Drift/Rapid Compensation screen will appear.



Confirm that you want to VIEW DRIFT which is highlighted by press the ✓ button.

#### 9.1.1.1 View Drift

When View Drift is selected, the display shows the intelligent smoke detectors on the specific loop with a ✓ mark and Reading... Other devices that are not smoke detectors on the loop will have no ✓ mark.

For example, select the View Drift option and the display shows:

[Loop 1 Devices]		<More>
Address	Additional Info	
>001.0	✓ Reading..	
002.0		
003.0	✓ Reading..	
004.0	✓ Reading..	

When the reading is complete, the display will show the drift (0-100%) per intelligent smoke detector on the SLC loop.

For example:

[Loop 1 Devices]		<More>
Address	Additional Info	
> 001.0	✓ Drift = 0%	
002.0		
003.0	✓ Drift = 4%	
004.0	✓ Drift = 0%	

### 9.1.2 Rapid Compensation

Compensation for environmental conditions of an installation is a standard feature of all intelligent smoke detectors. Every 24 hours (default setting) intelligent detectors are evaluated and compensated, if required, for any changes to the installed environment due to device contamination and/or dust buildup.

A rapid compensation feature is built into the Neo NX fire alarm control panel, it is recommended that during commissioning, detector cleaning or when a detector is replaced, rapid compensation be performed to adjust the intelligent detector to present ambient conditions.



*If rapid compensation is not employed during commissioning, detector cleaning or when a detector is replaced it could take up to 24 hrs. before the device is automatically compensated.*

To perform a rapid compensation, refer to the Drift Compensation Viewing section above and select Rapid Compensation instead of Drift Compensation. After the Rapid Compensation selection, all smoke detectors on the SLC loop will be compensated.



## 9.2 Multiple Detection Operation for Evacuation

Notification and other output signal circuits may be configured to only activate when two or more automatic devices within a detection zone enter an alarm condition.

At least two automatic devices shall be placed in the protected space. The spacing shall be as per NFPA 72 and shall be no more than 0.7 times the linear spacing for public mode notification uses.



*Smoke detectors employed in multiple detector operation must not be configured for Alarm Verification.*

## 9.3 Positive Alarm Sequence

Positive Alarm Sequence (P.A.S) is a False Alarm Management programmable feature of the Neo NX fire alarm control panel. If the Positive Alarm Sequence (P.A.S.) option is programmed and enabled, an alarm condition originating from a configured P.A.S. device is registered at the panel; but will not immediately activate the notification appliances.



*The Positive Alarm Sequence feature must be enabled using the NX10-ACS-DSP keyboard display, refer to NX10-ACS-DSP Keypad Menu Functions, P.A.S. section of this manual.*

When the Neo NX fire alarm control panel registers a P.A.S. (Positive Alarm Sequence) alarm, the alarm LED will flash, the internal buzzer will sound (continuously), the display will indicate “NEW ALARM IN ZONE xxxx” (unacknowledged event), the zone message (32 characters), the device message (26 characters) and the type of device for the specific active device. At the same time, any outputs programmed to activate on an initial P.A.S. alarm will activate.

In addition to the above displayed P.A.S. alarm information, the display will show an Output Delay (Stage 1) time count down (acknowledgement time) for P.A.S. alarm acknowledgement. The bottom of the display will be highlighted indicating a tally of all alarms, CO, and supervisory events presently active on the system.

Example of an unacknowledged P.A.S. alarm:

NEW ALARM IN ZONE 0001			< New unacknowledged P.A.S alarm message
First Floor			< Zone alarm text (32 Characters)
Conference Room 100	[PHOTO SMOKE]		< Device text (26 Characters) / Pre-assigned type of device
OUTPUT DELAY 14 s (ACK to extend)			< Output delay Stage 1 - time to "ACK"
ALARMS: 1	CO: 0	SUPERVISORY: 0	< # Alarms # CO and # Supervisory events

If the alarm is not acknowledged before the Output Delay (Stage 1) time expires; the fire alarm control panel will enter a full alarm condition and will activate all notification appliance circuits, relays, and other outputs programmed by the installer.

Pressing the “ACK” button within the allotted Output Delay (Stage 1) time will acknowledge the P.A.S. alarm, reset the Output Delay to a Stage 2 time (investigation time), change the red Alarm LED to steady, silence the internal buzzer, and display “ALARM IN ZONE xxxx” (acknowledged event) with the zone/device messages.

Example of an acknowledged P.A.S. alarm:

**ALARM IN ZONE 0001**

First Floor  
Conference Room 100 [PHOTO SMOKE]

OUTPUT DELAY 140s

**ALARMS: 1      CO: 0      SUPERVISORY: 0**

- < Acknowledged P.A.S alarm message
- < Zone alarm text (32 Characters)
- < Device text (26 Characters) / Pre-assigned type of device
- < Output delay Stage 2 – time-period
- < # Alarms # CO and # Supervisory events

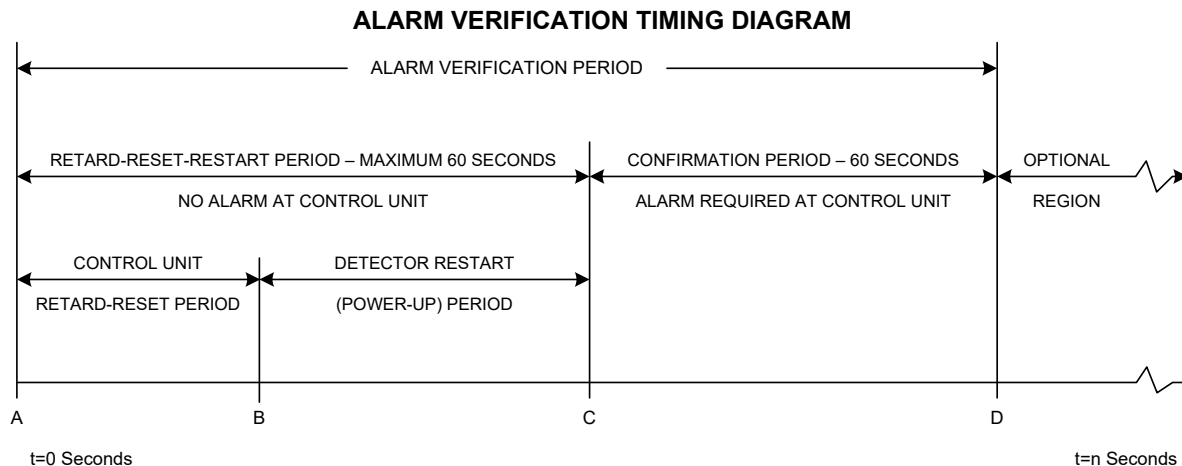
If the alarm is not reset before the Output Delay (Stage 2) time expires; the fire alarm control panel will enter a full alarm condition and will activate all notification appliance circuits, relays, and other outputs programmed by the installer.



*If an additional alarm occurs on the fire alarm control panel during a P.A.S. alarm cycle, the P.A.S. output delay time periods will be terminated, and a full alarm condition will be generated activating all notification appliance circuits, relays, and other outputs programmed by the installer. In addition, activating a manual pull station at any time during the P.A.S. output delay time periods will terminate the P.A.S. process and activate all programmed outputs.*

## 9.4 Alarm Verification

Alarm Verification is a False Alarm Management programmable feature of the Neo NX fire alarm control panel. The alarm verification feature operates on a system or device basis (determined by programming) and is applicable to smoke detectors only. If required and programmed within the Shield, Dynamix Tools, Neo NX Config Tool, the alarm verification of a smoke detector in alarm can be indicated at the fire alarm control panel and tied to a CBE (control-by-event) logic.



Alarm Verification provides a mechanism to delay an alarm from a smoke detector due to transitory events. It should not, however, be used as a substitute for proper detector location/application or regular system maintenance.

If a smoke detector with alarm verification is activated and the smoke concentration is at or above the alarm threshold at the end of the retard-reset-restart period, the fire alarm control panel will initiate an alarm condition.

If the smoke concentration level is below the alarm threshold at the end of the retard-reset-restart period, the fire alarm control panel will enter a 60 second confirmation period. If the verified smoke detector or any other smoke detector enters an alarm condition during the confirmation period, the fire alarm control panel will enter an alarm condition.



*Alarm verification shall not be used with multiple detectors or cross-zone applications.*

## 9.5 Cross Zoning

Notification appliance circuits and other output circuits may be configured to only activate when two alarm zones enter an alarm condition.



*Smoke detectors employed in cross-zone operation must not be configured for alarm verification or multiple detector operation.*

## 9.6 Walk Test

The Neo NX fire alarm control panel provides a means to implement a one-person alarm walk test feature for manual pull stations and smoke detectors, refer to the NX10-ACS-DSP Keypad Menu Functions, TEST, ZONES section of this manual for detailed information regarding walk test activations.

## 9.7 Zone, Group and Point Disablements

The Neo NX fire alarm control panel can perform disable functions via the NX10-ACS-DSP keyboard display or via any button configured as a disable button within the system. For information regarding the disabling of zones, groups, or individual points, refer to the NX10-ACS-DSP Keypad Menu Functions, DISABLE section of this manual.

## 9.8 Day/Night Sensitivity

The Neo NX fire alarm control panel incorporates individual detector day/night sensitivity configurations. To configure a detector for day/night operation, the detector would be tied to one (1) of the ten (10) time clocks available within the fire alarm control panel's software. Once the time clock has been allocated a Special Sensitivity Mode (SSM) programming area will be available for setting a different sensitivity while the time clock is active. Individual time clocks can be programmed based on time-of-day and days-of-week. Time clock settings can also incorporate two (2) different settings, i.e., ON – Off and ON-OFF again. In addition, individual time clocks can be gated by other fire alarm control panel input functions, for example, allowing time clock usage only if a specific gated key switch is active.

## 9.9 Detection Sensitivity Adjustment

Each 5800 Series intelligent detectors of the Neo NX fire alarm control panel are capable of being field programmed for one of five response/sensitivity modes (below). The Response modes correspond to unique response behaviours of a detector and the type of environment it is protecting, which can be broadly related to the characteristics of a fire. The detector response modes relate to different combinations of smoke sensitivity characteristics and programmable assessment times. Response mode 1 is more sensitive than response mode 5. Detectors set to response mode 1 would be more suitable for environments in which sources of unwanted alarms are rare (i.e.: clean rooms and computer rooms). Response mode 5 set detectors would be suitable for more dusty or harsh environments (i.e.: boiler rooms, loading dock areas). Response mode 3 (default programmed) would be the mid-sensitivity level used for most normal applications. Response mode setting and hysteresis of the individual detectors are stored within the detector's memory. The storing of this critical information in the detector rather than in the fire alarm control panel allows the detector to maintain its programmed response settings and compensated values even when power is removed from the detector. If the detector is powered down or inadvertently placed in another location, the detector response mode and clean values are not lost.

	Clean Room, Computer Room					Hotel Room, Apartment					Office, Hospital Ward, Factory, Light Industry					Warehouse, Restaurant					Loading Dock, Parking Garage					Kitchen, Laundry (Enclosed and ventilated)					Boiler Room				
Mode	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5	1	2	3	4	5
Photoelectric	✓							✓	✓	✓			✓	✓	✓				✓				✓										✓	✓	
Ionization								✓	✓	✓			✓	✓	✓				✓	✓															
Multi-Sensor	✓							✓	✓				✓	✓			✓	✓	✓	✓	✓											✓			
Heat																✓	✓					✓	✓						✓	✓	✓			✓	✓

1, 2, 3, 4, 5 = Response/Sensitivity Modes  
✓ = Mode Suitable for Installation

Photoelectric Detector		
Response Mode	Sensitivity Characteristics	Programmable Assessment Time
1	1.7 %/ft	5 sec
2	1.7 %/ft	30 sec
3	2.3 %/ft	5 sec
4	2.3 %/ft	30 sec
5	2.9 %/ft	5 sec

Multi-Sensor Detector			
Response Mode	Smoke Sensitivity Characteristics	Temperature Sensitivity	Programmable Assessment Time
1	1.7 %/ft	High	0-20 sec
2	2.3 %/ft	None	0-30 sec
3	2.7 %/ft	Medium	0-20 sec
4	3.3 %/ft	Medium	0-20 sec
5	None	135°F	0-30 sec

Ionization Detector		
Response Mode	Sensitivity Characteristics	Programmable Assessment Time
1	.60 %/ft	5 sec
2	.60 %/ft	30 sec
3	.65 %/ft	5 sec
4	.65 %/ft	30 sec
5	.70 %/ft	5 sec

Heat Detector			
Response Mode	UL521 Temperature Rating (°F)	Sensitivity Characteristics	Spacing
1	135°F Ordinary	Static/Rate-of-Rise	70 ft
2	150°F Ordinary	Static/Rate-of-Rise	70 ft
3	150°F Ordinary	Static	70 ft
4	200°F Intermediate	Static/Rate-of-Rise	70 ft
5	200°F Intermediate	Static	70 ft

Analog values/answerbacks of each installed intelligent detector can be viewed at any time via the panel's alphanumeric graphical display. Analog values/answerbacks range from 0 to above 55 based on various status conditions of the intelligent detector, below.

#### Photoelectric Detector, Ionization Detector and Multi Sensor Analog Values

Analog Values	Status Condition
55 and above	Detector in Alarm
45-54	Pre-Alarm (Detector Close to Alarm Condition)
23 (+4/-0)	Quiescent (Normal)
8	Low Alarm Level
7	ASIC Communication Error
6	Compensation Limit Reached
4	Type Code Error
2	Secondary Sensor Fault
1	Primary Sensor Fault
0	Device Missing or Microprocessor Fault

#### Heat Detector Analog Values

Analog Values	Status Condition
55 and above	Detector in Alarm
45-54	Pre-Alarm (Detector Close to Alarm Condition)
10-44	Quiescent (Normal – Value Temperature Dependent)
8	Low Alarm Level
7	ASIC Communication Error
4	Type Code Error
1	Sensor Fault
0	Device Missing or Microprocessor Fault

## 9.10 NX10-ACS-DSP Keypad Menu Functions

The following table gives a list of the Main Menu (user menu) Options and the Sub Menus available from the NX10-ACS-DSP keyboard display. In addition, a brief description for each sub menu is provided.

Main Menu Option	Sub Menus	Description
VIEW	Alarms	View Zones and Inputs that are reporting an alarm condition.
	Off Normal	View Zones, Inputs and Outputs that are reporting an off-normal condition. (Alarms, CO-Alarm, Supervisory, Trouble, Disabled, Pre-Alarm, Warning and Problems)
	Network	View Network diagnostics
	Inputs	View the current state of Inputs (by zone/point).
	Outputs	View the current operational condition of Outputs (by zone/point).
	Log	View the Event Log and Alarm Counter
	Panel	View Local-Hardware, Software and Network-Hardware. Local-Hardware - view operational state, voltage and current loading of the panel input and output circuits. Software – view software revisions for Panel, Display, SLC, Network, PSU, and Peripherals. Network-Hardware – view network node voltage and current loading of the network node panel input and output circuits.
DISABLE	Zone / Inputs <sup>26</sup>	Disable a complete zone or an individual input device.
	Outputs <sup>28</sup>	Disable NAC outputs or other output devices.
	Groups <sup>28</sup>	Group Disable – Disable a programmed group of inputs / outputs
	Controls <sup>27</sup>	Disable NX10-ACS-DSP controls
	User-ID <sup>28</sup>	Exits User-ID timed password access
ENABLE	Zone / Inputs <sup>28</sup>	Enable a complete zone or an individual input device.
	Outputs <sup>28</sup>	Enable NAC outputs or other output devices.
	Groups <sup>28</sup>	Group Enable – Re-enable a group of inputs / outputs
	Remote <sup>28</sup>	Grant remote access for terminal mode or ipGateway
TEST	Zones <sup>28</sup>	Configure one or more zones for walk test.
	Display	Test the Display, Status Indicators (including Switch LED Module LEDs) and Keyboard.
	Buzzer	Test the Internal Buzzer
	Printer	Test the connection to the Printer
	Outputs <sup>28</sup>	Test Outputs in the system
	Audio <sup>28</sup>	Test Audio area amplifier (s) with message type (1 – 16 messages within amplifier [s])
	HVAC <sup>28</sup>	Test Smoke Control fans and dampers
P.A.S.	Enabled <sup>28</sup>	Enable P.A.S. operation
	Disabled <sup>28</sup>	Disable P.A.S. operation
TOOLS	Program <sup>28</sup>	Enter the Level 3 Commissioning and Panel Programming Functions (Factory default Level 3 programming code 7654)
	Print <sup>28</sup>	Setup printer and print inputs, outputs, troubles, disabled, log
	Change Time <sup>28</sup>	Change time and date of the system
STATUS	---	Return to the Normal Operating Display immediately

<sup>26</sup> This option requires a User-ID access password with time-out.

<sup>27</sup> This option should not be utilized as this will disable ACK, Silence, Resound, Drill and Reset controls.

<sup>28</sup> This option requires a user Level 3 commissioning/programming password.

### 9.10.1 View

The View Menu area is normally only used by service technicians, below is an example of the View Menu.

[View Menu]		User 1 Node 1	
ALARMS	OFF-NORMAL	NETWORK	
INPUTS	OUTPUTS	LOG	PANEL

#### 9.10.1.1 Alarms

Fire alarm events are shown on the fire alarm control panel without having to access the View Menu options area. To access the ALARMS area, the fire alarm control panel must have an active alarm event. When in the ALARMS area, pressing the navigation → button will provide additional information pertaining to the device in alarm, including Device Text, State, Type, Value, Lp Adrs, Sector and Node.

[ZONE IN ALARM ]		More>
0001	First Floor	

#### 9.10.1.2 Off Normal

When accessing the OFF-NORMAL area an Off-Normal Menu will appear.

[Off-Normal Menu]		User 1 Node 1	
ALARMS	CO-ALARMS	SUPERVISORY	
TROUBLE	DISABLED	PRE-ALARM	
WARNING	PROBLEMS		

Like the previous ALARMS area, all the Off-Normal Menu events, with the exception, of the PROBLEMS area are shown on the fire alarm control panel without having to access the View Menu options area. To access any of these Off-Normal Menu areas, the fire alarm control panel must have an active event type. When in any of the event type areas, pressing the navigation → button will provide additional information pertaining to the active event, including Device Text, State, Type, Value, Lp Adrs, Sector and Node.



*The PROBLEMS area is for logging Dirty Scale 1 intelligent/enhanced detector events and is used when the Shield enhanced calibration programming is used.*

#### 9.10.1.3 Network

This view area can be used to obtain “real time” diagnostic information when a network is used to connect other panels or remote annunciators. The access level of all nodes can be viewed and if the navigation → button is pressed specific node information is provided (i.e., Data Packets, Bad Packets, Comms lost, FT Ring Trbl and Next Node at).

Below is an example of access to the View NETWORK area.

[NETWORK – Press 0 to Clear]		More>
Node	Status	
1	LOCAL	
2	Level-2	
3	Level-1	
4	-	

Below is an example of the View NETWORK area after pressing the navigation → button.

[NETWORK – Press 0 to Clear]		
Data Packets	:	xxxxx
Bad Packets	:	0
Comms lost	:	0
FT Ring Trbl	:	0
Next Node at	:	x

Pressing the 0 key on the keyboard display keypad will Clear (reset) all network status information.

#### 9.10.1.4 Inputs

This sub menu area shows the current operational state and condition for all zones and individual inputs (including zones/points of other network nodes). The display presents a list of all the zones containing input devices with the first zone highlighted. For example:

[Inputs]			More>
Zone	Mode	Location	
000 1	Enabled	BASEMENT WEST	
0002	ALL DISABLED	BASEMENT EAST	
0008	Enabled	GROUND FLOOR	
0009	Enabled	MAIN RECEPTION AREA	

Press the ↑↓ buttons to highlight the required zone and then press the → button to view the full location text.

Press the → button again to view additional information and the inputs within the zone and their status. For example, press the → button 6 times:

[ Inputs in Zone 0008]					<More
Mode	Lp	Adrs	Sector	Node	
ENABLED	1	001.0	1	1	
DISABLED	1	002.0	1	1	
ENABLED	1	003.0	1	1	
ENABLED	1	004.0	1	1	

The display will show Mode (Enabled or Disabled status for each input device), Lp Adrs (SLC loop the specific device is programmed to), Sector (sector programming is an enhanced partitioning programming) and Node number the device is connected to.

Press the ↑↓ buttons to scroll through the inputs.

Press the Esc button on the NX10-ACS-DSP keypad to return to the previous view.

#### 9.10.1.5 Outputs

This sub menu area shows the current operational condition for all outputs (including outputs of other network nodes). The display presents a list of all the zones containing output devices with the first zone highlighted. For example:

[Outputs]			More>
Zone	Mode	Location	
0008	ENABLED	GROUND FLOOR WEST	
0009	ENABLED	MAIN RECEPTION	
0012	ENABLED	SECOND FLOOR WEST	
0013	ENABLED	SECOND FLOOR EAST	

Press the ↑↓ buttons to highlight the required zone.

Press the → button again to view additional information and the outputs within the zone and their status. For example, press the → button 4 times:



[ Outputs In Zone 0008 ]			<More>
Mode	State	Type	
Enabled	Off	RELAY	
Enabled	Off	RELAY	
Enabled	Off	VOLTAGE	
Enabled	*On	RELAY	



A \* symbol preceding the state (e.g., \*On) indicates the device has been configured as an inverted output (i.e., a trouble relay that is designed to de-energize when a trouble occurs [loss of power]).

### 9.10.1.6 Log

After selecting the LOG area, the display presents a pop-up window to allow selection viewing of ALL EVENTS, ALARM EVENTS ONLY or the ALARM COUNTER.



Press the  $\uparrow\downarrow$  buttons to highlight the required view option and then press the  $\checkmark$  button to select it. The display then shows the appropriate list of events.



While viewing the log, if a printer is connected to the RS232 port, the log will be sent to the printer.

#### 9.10.1.6.1 All Events

Below is an example of the ALL EVENTS log, press the  $\uparrow\downarrow$  buttons to scroll through the logged events.

[View All Events]				Entry 0248	< View Mode ALL EVENTS and Displayed Event #
Time/Date	Node	Lp:Addr	Zone		< Time, Node/Loop #, Device Address and Zone
7:54:23	1	2:001.0	0012		< Date, Event Type
01/14/20	SUPERVISORY				< Zone Text Description and Analog Value
BASEMENT		64			< Device Text Description and Device Type
SPRINKLER RISER			SWITCH(MON.)		

#### 9.10.1.6.2 Alarm Events Only

Below is an example of the ALL-ALARM EVENTS log, press the  $\uparrow\downarrow$  buttons to scroll through the logged alarm events.

[View Alarm Events]				Entry 0176	< View Mode ALL ALARM EVENTS and Displayed Event #
Time/Date	Node	Lp:Addr	Zone		< Time, Node/Loop #, Device Address and Zone
10:54:23	1	1:001.0	0001		< Date, ALARM Event
11/14/19	ALARM				< Zone Text Description and Analog Value
BASEMENT		64			< Device Text Description and Device Type
ROOM 10			PHOTO SMOKE		

In the above example, the latest alarm occurred (Event No. 176) at 10:54 am on March 14, 2019. This alarm was located at device address 001 (Addr) on Loop 1 (Lp) on Panel No. 1 (Node). The device was in Zone 0001. The analog value registered by the device (64) has also been recorded. The lower two lines show the zone description, device text description and device type for ease of identification.

### 9.10.1.6.3 Alarm Counter

The fire alarm control panel records the number of times that an alarm event has occurred since it is installation or since the last event log erase.

ALARM COUNTER
0000000033

The fire alarm control panel increments the alarm count each time it changes from the normal condition to an alarm state. While the panel is in alarm, if an additional alarm event occurs it does not advance the counter.

Press the “Esc” button to return to the main view menu.

### 9.10.1.7 Panel

When accessing the PANEL area, a Panel Information sub menu will appear allowing selection of LOCAL-HARDWARE, SOFTWARE or NETWORK-HARDWARE.

[Panel Information]	User 2 Node 1
<b>LOCAL-HARDWARE</b>	SOFTWARE
NETWORK-HARDWARE	

#### 9.10.1.7.1 Local-Hardware

Entering the LOCAL-HARDWARE area allows the viewing of fire alarm control panel’s associated electronic circuits. Information includes each electronic circuits, DESCRIPTION, VALUE and STATE.

[Panel Circuits]		
DESCRIPTION	VALUE	STATE
NAC-1 A VOLTS	5.6V	Normal
NAC-2 A VOLTS	5.6V	Normal
NAC-3 A VOLTS	5.6V	Normal
NAC-4 A VOLTS	5.6V	Normal

Press the ↑↓ buttons to scroll through the fire alarm control panel’s electronic circuits. Press the Esc button to return to the main view menu.

#### 9.10.1.7.2 Software

Entering the SOFTWARE area will bring up a SOFTWARE sub menu. The SOFTWARE sub menu allows the viewing of the fire alarm control panel’s associated product firmware version.

[Software]	User 2 Node 1	
<b>PANEL</b>	DISPLAY	LOOP CARDS
NETWORK	PSU	PERIPHERAL

### 9.10.1.7.3 Network-Hardware

Entering the NETWORK-HARDWARE area allows the selection of a network node's specific Zone number.

[HARDWARE]	MORE>
ZONE	LOCATION
0701	FACP Electrical Closet
0702	Lobby Local Operating Panel
0703	Remote Panel Third Floor
0704	Ancillary Annunciator

Scroll ↓ to a network node Zone and scroll to the left → to view the network node's electronic circuits, Device Text, and Value.

[ HARDWARE IN ZONE 0703]	<MORE>
DEVICE TEXT	VALUE
NAC-1 A VOLTS	5.6V
NAC-2 A VOLTS	5.6V
NAC-3 A VOLTS	5.6V
NAC-4 A VOLTS	5.6V

Press the ↑↓ buttons to scroll through the network nodes electronic circuits. Press the Esc button to return to the HARDWARE menu.

### 9.10.2 Disable

When entering the Disable area, a Disable sub menu will appear. The Disable sub menu allows the selection of ZONE/INPUTS, OUTPUTS, GROUPS, CONTROLS and USER-ID disablements.

[Disable]	User 1 Node 1	
<b>ZONE/INPUTS</b>	OUTPUTS	GROUPS
CONTROLS	USER-ID	

Press the ←→, ↑↓ buttons to highlight the required menu option and then press the ✓ button to select it.

#### 9.10.2.1 Zone/Inputs


This area provides a way to disable an entire zone, all inputs, selected inputs, only automatic detectors, only manual devices, or all other devices.

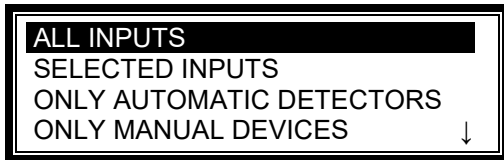
If the current User-ID (access level password) does not have the required authority, the display prompts for entry of an authorized password to guard against inadvertent disablements.




When selecting this option, the display shows a list of the current zones and their current disable status. For example:

[ 0 ZONE (s) with INPUTS DISABLED]			More>
Zone	Mode	Location	
0001	Enabled	BASEMENT WEST	
0002	Enabled	BASEMENT EAST	
0008	Enabled	GROUND FLOOR	
0009	Enabled	MAIN RECEPTION AREA	

Press the ↑↓ buttons to scroll through the available zones or key in a specific zone number.

To disable the entire zone, move over to the Mode column and highlight the existing mode. Press the  button and a pop-up window will appear showing the three possible options:




Press the   buttons to scroll through and highlight the required option and then press the  button to select it.




If ALL INPUTS is chosen, the Zone Mode status will change from “Enabled” to “ALL DISABLED.”

[ 0 ZONE(s) with INPUTS DISABLED]			More>
Zone	Mode	Location	
0001	ALL DISABLED	xxxxxxxxxxxxxxxxxxxx	
0002	Enabled	xxxxxxxxxxxxxxxxxxxx	
0008	Enabled	xxxxxxxxxxxxxxxxxxxx	
0009	Enabled	xxxxxxxxxxxxxxxxxxxx	

If SELECTED INPUTS is chosen, the pop-up window disappears and a list of the input devices within the selected zone is presented. For example:

[ Inputs in Zone 0001 ]		More>
Mode	Device Text	
Enabled	BASEMENT WEST	
Disabled	BASEMENT EAST	
Enabled	GROUND FLOOR	
Enabled	MAIN RECEPTION AREA	

Press the  button for more information on the inputs, including loop number, address, device type, analog value, etc.

Press the   buttons to scroll through and highlight the required input and then press the  button to disable it. The Zone Mode status will change from “Enabled” to “PART DISABLED.”

[ 1 ZONE(s) with INPUTS DISABLED]			More>
Zone	Mode	Location	
0001	PART DISABLED	xxxxxxxxxxxxxxxxxxxx	
0002	Enabled	xxxxxxxxxxxxxxxxxxxx	
0008	Enabled	xxxxxxxxxxxxxxxxxxxx	
0009	Enabled	xxxxxxxxxxxxxxxxxxxx	

Press the “Esc” button to return to the previous display.

If ONLY AUTOMATIC DETECTORS is chosen, the pop-up window disappears and all detectors within the zone will be disabled, and the Zone Mode status will change from “Enabled” to “PART DISABLED.”

If ONLY MANUAL DEVICES is chosen, the pop-up window disappears and all manual pull stations within the zone will be disabled, and the Zone Mode status will change from “Enabled” to “PART DISABLED.” If there are no pull stations within the zone nothing will be disabled.


If ALL OTHER DEVICES is chosen, the pop-up window disappears and all none alarm, including firefighter phones will be disabled and the Zone Mode status will change from “Enabled” to “PART DISABLED.”

### 9.10.2.2 Outputs

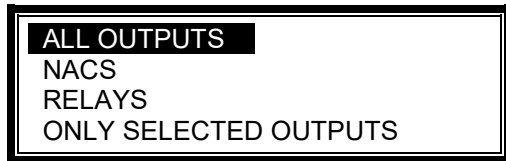The Disable Outputs Option allows for the isolation of some or all outputs. If disabled, the outputs will not activate in the event of an alarm or other programmed event.

If the current User-ID (access level password) does not have the required authority, the display prompts for entry of an authorized password to guard against inadvertent changes.

Once a valid access password has been entered, a pop-up window is shown on the display to select the type of outputs to disable. Scroll down to view / select the available options.



*Strobes can be added to the disable outputs pop-up window via the Shield, Dynamix Tools, Neo NX Config Tool, under the Disable Outputs Menu Options.*

#### 9.10.2.2.1 All Outputs

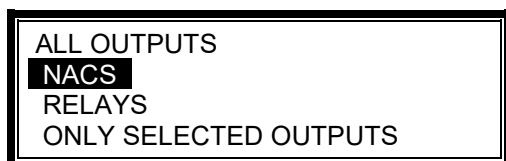
On access to the Disable – Output's sub menu, the ALL OUTPUTS will be highlighted and then pressing the ✓ button will disable all outputs. The display automatically reverts to the Main Menu – Disable.



*On networked systems this only disables the outputs connected to the associated fire alarm control panel.*

#### 9.10.2.2.2 NACS


Press the ↑↓ buttons to scroll through and highlight the NACS option and then press the ✓ button to disable all NAC outputs. The display automatically reverts to the Main Menu - Disable and the NAC Disabled LED will illuminate, indicating NACs disabled.



*On networked systems this only disables NACs connected to the associated fire alarm control panel.*

### 9.10.2.2.3 Relays

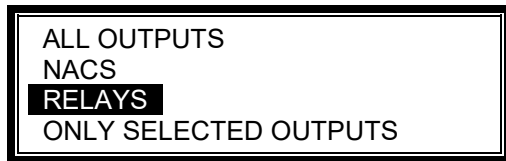
Press the  $\uparrow\downarrow$  buttons to scroll through and highlight the RELAYS option and then press the  $\checkmark$  button to disable them. The display automatically reverts to the Main Menu – Disable.



*On networked systems this only disables relays connected to the associated fire alarm control panel.*

### 9.10.2.2.4 Only Selected Outputs

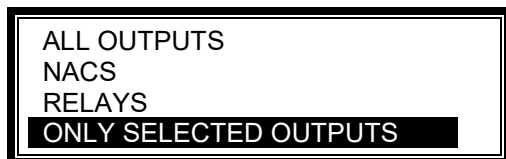Press the  $\uparrow\downarrow$  buttons to scroll through and highlight the ONLY SELECTED OUTPUTS option and then press the  $\checkmark$  button to select it.



The display then shows a list of Zones containing outputs. For example:

[ 2 ZONE (s) with OUTPUTS DISABLED]			More>
Zone	Mode	Location	
0008	ENABLED	GROUND FLOOR	
0100	ENABLED	MAIN RECEPTION	

Press the  $\uparrow\downarrow$  buttons to scroll through and highlight the required Zone and then press the  $\rightarrow$  button to view the outputs within this zone. For example:

[Outputs In Zone 0008]		More>
Mode	Device Text	
Enabled	I/O Relay Output	
Enabled	HVAC RELAY	
Enabled	NAC MODULE	
Enabled	RELAY MODULE	



Press the  $\rightarrow$  button to view more information on the outputs including Mode, Device Text, State, Type, Value, LP (loop), Adrs (address), Sector and Node. Below is an example of pressing the  $\rightarrow$  button 6 times.

[ Outputs In Zone 0008 ]					<More
Mode	Lp	Adrs	Sector	Node	
ENABLED	1	010.2	1	0	
ENABLED	1	012.0	1	0	
ENABLED	1	015.0	1	0	
ENABLED	1	022.2	1	0	

Press the  $\uparrow\downarrow$  buttons to scroll through and highlight the required output and then press the  $\checkmark$  button to change the device mode from Enabled to Disabled. The device mode will change from Enabled to Disabled.

Press the "Esc" button to return to the Zone list and to the Main Menu – Disable.

### 9.10.2.3 Groups




The Disable Groups option allows for the disablement of user defined disable groups that were created in the Neo NX Config Tool. When the Disable groups option is selected, a list of all configured Disable Groups with assigned Disable Group Text will be displayed. To disable one of the groups, press the  buttons to scroll through and highlight the required disable group and then press the  button. The disabled group mode will change from Enabled to Disabled.

### 9.10.2.4 Controls

Disabling Controls will disable all controls on the fire alarm control panel including acknowledge, reset, signal silence, resound and drill.



*The disablement of panel controls is not advised unless used for special applications such as a key switch in the display for enabling control key usage.*

Press the ,  buttons to highlight the Controls option and then press the  button to select it.

[Disable]		User 1 Node 1
ZONE/INPUTS	OUTPUTS	GROUPS
<b>CONTROLS</b>	USER-ID	

If the current User-ID (access level password) does not have the required authority, the display prompts for entry of an authorized password to guard against inadvertent changes.




Once a valid access password has been entered, the control button functions, and menu functions are disabled, and a access Level 1 menu will be shown:

[ CONTROLS DISABLED ]	
<b>ENABLE CONTROLS</b>	VIEW
LED TEST	STATUS

The display will automatically revert to the normal operating display after 15 seconds.

### 9.10.2.5 User-ID

If a User-ID password has been used to access password protected areas, selecting the Disable User-ID cancels the current User-ID access. If access is required to additional areas, the User-ID password would need to be re-entered.

Press the ,  buttons to highlight the User-ID option and then press the  button to select it.

[Disable]		User 5 Node 1
ZONE/INPUTS	OUTPUTS	GROUPS
CONTROLS	<b>USER-ID</b>	



*If there has been no User-ID activity (button presses) after the password access time-out, the panel will automatically cancel a User-ID level access. This is to make sure that access to restricted options is automatically cancelled.*

### 9.10.3 Enable

When selecting the Main Menu – Enable Option, the display shows the available Enable functions.

[Enable]		User 1 Node 1	
<b>ZONE/INPUTS</b>	OUTPUTS	GROUPS	
REMOTE			

Press the  $\leftarrow\rightarrow$ ,  $\uparrow\downarrow$  buttons to highlight the required sub menu option and then press the  $\checkmark$  button to select it.

#### 9.10.3.1 Zone/Inputs

Selecting this option will show a list of zones containing disabled input devices. Either the complete zone or individual devices within the zone can then be enabled.

[ 4 ZONE (s) with INPUTS DISABLED]			More>
Zone	Mode	Location	
<b>0001</b>	Disabled	BASEMENT WEST	
0002	Disabled	BASEMENT EAST	
0008	Disabled	GROUND FLOOR	
0009	Disabled	MAIN RECEPTION AREA	

#### 9.10.3.2 Outputs

When this option is selected, a pop-up sub menu appears asking if you want to enable ALL OUTPUTS, NACS, RELAYS or ONLY SELECTED OUTPUTS. If ONLY SELECTED OUTPUTS is selected, the display will list only zones containing outputs that have been disabled. The individual outputs within the zone can then be enabled.

<b>ALL OUTPUTS</b>
NACS
RELAYS
ONLY SELECTED OUTPUTS

#### 9.10.3.3 Groups

When this option is selected, a list of the disable groups will be available, press the  $\uparrow\downarrow$  buttons to scroll to the correct group requiring enablement and press the  $\checkmark$  button.

[Enable Groups]		0 zone (s) disabled
Groups	Invoke	Description
1	<b>-</b>	NAC Circuits
2	-	Strobe Circuits
3	-	Sprinkler System
4	-	Relays

### 9.10.4 Test

The Main Menu – Test area allows users to test various items of the fire alarm control panel.

[Test Menu]		User 1 Node 1	
<b>ZONES</b>	DISPLAY	BUZZER	PRINTER
OUTPUTS	AUDIO	HVAC	





*If a printer is connected to the fire alarm control panel all activated tests will be sent to the printer.*

Press the **←→**, **↑↓** buttons to highlight the required sub menu option and then press the **✓** button to select it.

#### 9.10.4.1 Zones

The test ZONES function provides a means to implement a one-person walk test to test zones or specific detectors or manual pull stations.

If the current User-ID (access level password) does not have the required authority, the display prompts for entry of an authorized password to guard against inadvertent changes.

When the ZONES option is selected, a pop-up window is shown on the display to select whether the testing will or will not activate the NAC circuits for 10-seconds when the device is tested. For example:

WITHOUT NACS
WITH NACS

Press the **↑↓** buttons to scroll through and highlight the required option and then press the **✓** button to select it.



*All NAC circuits are defaulted to activate during a walk test; however, the Shield, Dynamix Tools, Neo NX Config Tool allows for customization of walk test outputs (NACs and relays).*

The display then shows a list of the available zones and their current test status. For example:

[ 0 Zone(s) in Test ]		
Zone	Test State	Location
0001	-	BASEMENT WEST
0002	-	BASEMENT EAST
0100	-	MAIN RECEPTION

Press the **↑↓** buttons to scroll through and highlight the required zone and then press the **✓** button to change the test state. For example:

[ 1 Zone (s) in Test ]		
Zone	Test State	Location
0001	IN TEST	BASEMENT WEST
0002	-	BASEMENT EAST
0008	-	GROUND FLOOR
0009	-	MAIN RECEPTION AREA

When one or more zones are placed in a test state, the Test LED will illuminate. When a device is activated (i.e., manual pull station or introduction of test smoke to a smoke detector), the notification appliances will activate (if selected), and the display will indicate that the zone is registering a test condition by showing “FIRE” on the test zone display.

[ 2 Zone (s) in Test ]		
Zone	Test State	Location
0001	IN TEST FIRE	BASEMENT WEST
0002	-	BASEMENT EAST
0008	-	GROUND FLOOR
0009	IN TEST	MAIN RECEPTION AREA

When the manual pull station is reset or when the smoke clears from the detector chamber, the fire alarm control panel will automatically reset and clear the test condition.

As an alternative to scrolling, a specific zone number can be entered by using the ← button to move to the zone number column and then typing in the required number followed by the ✓ button.

If several consecutive zones are to be tested, an alternative to selecting them all individually is to specify a range of zones as follows:

Move to the zone number column and highlight the first zone to test, then press the ✓ button, the display will then prompt for the last zone to be tested.

TEST THROUGH TO ZONE #11

Individual zones can then be toggled in or out of test by pressing the ✓ button.

To leave the zone test sub menu, press the “Esc” button.

FINISHED TEST

Selecting the FINISHED TEST option will cancel all zones that are in test mode. The Test LED will then extinguish.

If there are any zones still in a test or alarm condition, a pop-up window with the following options will appear:

DEVICE STILL ACTIVATED!

FINISHED TEST

KEEP ZONES IN TEST

Alternatively, it is possible to leave the Test – Zone’s sub menu with one or more zones still in test mode by selecting the KEEP ZONES IN TEST option. This will enable the use of other menu functions and return the display to the normal operating mode. The Test LED will stay illuminated if this option is selected.

If no zones are still in test condition, the display will revert to the Test Menu.

[Test Menu] User 1 Node 1

ZONES DISPLAY BUZZER PRINTER

OUTPUTS AUDIO HVAC

#### 9.10.4.2 Display

The test DISPLAY option checks the operation of all the LEDs and the graphical display of the NX10-ACS-DSP keyboard. All the LEDs are turned on and the entire display is shown in reverse (inverted). In addition to testing the NX10-ACS-DSP, the Display test will also test all programmed LEDs of Switch LED Modules connected to the associated NX10-ACS base card peripheral bus.



*The display test will also test all programmed LEDs of optional Shield Switch LED Modules connected to the associated NX10-ACS base card peripheral bus.*

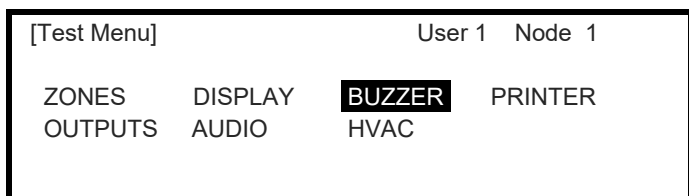
During this test it is possible to test the operation of the ←, ↑, ↓, →, ✓ and 0-9 buttons. When a button is pressed it is indicated on the display. For example:



Press the Esc button to return to the Main Menu – Test. If no button is pressed for 10 seconds, the display will automatically revert to the normal operating display.

#### 9.10.4.3 Buzzer

When the test BUZZER option is selected, the internal fire alarm control panel buzzer will pulse for approximately five seconds.



#### 9.10.4.4 Printer

To test the printer, highlight the PRINTER option and press the ✓ button to confirm. The panel transmits 16 lines of test characters to the printer. The information sent is also sent to the NX10-ACS-DSP keyboard display.



*The printer test function will only work if a printer is programmed on the fire alarm control panel. If no printer is programmed, the display will indicate NO PRINTER SELECTED!*

When the test printer is completed, the display automatically reverts to the Main Menu – Test. Press the Esc button at any time to cancel the test printer.

#### 9.10.4.5 Outputs

To test outputs, highlight the OUTPUTS option and press the ✓ button to confirm.



Press the **↑↓** buttons to scroll through and highlight the required zone containing the output and then press the **→** button to scroll to the specific output to be tested. For example:

[ Outputs In Zone 0001 ]		More>
Mode	Device Text	
Enabled	I/O Relay	
Enabled	HVAC RELAY	
Enabled	NAC MODULE	
Enabled	RELAY MODULE	

Press the **✓** button for the output you wish to test. Press the **✓** button again to begin the test, the device will activate until the ESC button is pressed.

TEST THIS DEVICE

#### 9.10.4.6 Audio

When the AUDIO option is selected, the user is given a list of AUDIO AREAs with COMMAND, AUTO and PLAYING information.

AUDIO AREA	COMMAND	AUTO	PLAYING
1	-	-	-
2	-	-	-
3	-	-	-
4	-	-	-

Press the **↑↓** buttons to scroll to an AUDIO AREA requiring testing and then press the **→** button to scroll to the COMMAND criteria and press the **✓** button.

AUDIO AREA	COMMAND	AUTO	PLAYING
1	PLAY MESSAGE (1..16) # 0		
2			
3			
4			
	-	-	-

Once the COMMAND has been selected, the user is capable of broadcasting one of the 16 audio amplifier stored messages.

The following is an example of audio message 1 (COMMAND 1) being tested in AUDIO AREA 1, PLAYING message 1.

AUDIO AREA	COMMAND	AUTO	PLAYING
1	1	-	1
2	-	-	-
3	-	-	-
4	-	-	-

#### 9.10.4.7 HVAC

To test the smoke control of the fire alarm control panel, press the **↑↓** and/or **→** buttons to scroll to the HVAC test area and press the **✓** button.

[Test HVAC]		User 1 Node 1	
FANS		DAMPERS	
AUTO TESTS		SMOKE COMPARTMENTS	
MULTI SELECTORS			

##### 9.10.4.7.1 Fans

To test fans, highlight FANS and then press the **✓** button and the following screen will appear:

FAN	Control	Action	Feedback
1	AUTO	NONE	STOPPED
Building Supply Fan			More>



*If the fan is not being monitored for Feedback, a dash (-) will be indicated under the Feedback section.*

Enter the FAN number to be tested and press the **→** button to scroll and highlight the Control AUTO button. Once the AUTO button is highlighted, the following screen will be displayed:

FAN	Control	Action	Feedback
1	RUN AUTO STOP	NONE	STOPPED
			More>

Pressing the **↑** arrow will RUN the fan and the Action will then indicate RUN, if feedback is provided, the Feedback will indicate RUNNING. Pressing the **↓** arrow will STOP the fan and if feedback is provided, the Feedback will indicate STOPPED.

##### 9.10.4.7.2 Dampers

Dampers are tested the same way as the fans, press the **→** button to scroll to DAMPERS and press the **✓** button, then press the **↑↓** buttons to select Close or Open:

DAMPER	Control	Action	Feedback
1	CLOSE AUTO OPEN	NONE	CLOSED
			More>

##### 9.10.4.7.3 Auto Tests

The AUTO TESTS area will give the user status of the auto tests that have been performed by the fire alarm control panel. Press the **↓** arrow and scroll through the AUTO TEST RESULTS.

The following Auto Test Status screen will appear:

[AUTO TEST RESULTS]					MORE>
	Pass	Fail	In Test	Untested	
FAN	4	0	0	0	
DAMPER	9	1	0	0	

To retest a FAN or DAMPER that has Failed a test, press the  $\leftrightarrow$ ,  $\updownarrow$  buttons to scroll to the Failed FAN or DAMPER and press the  $\checkmark$  button:

[AUTO TEST RESULTS]					MORE>
	Pass	Fail	In Test	Untested	
FAN	4	0	0	0	
DAMPER	9	1	0	0	

The following screen will appear:

DAMPER AUTO TEST		
6	FAILED	06/22/17 1:00 AM
OPEN NOT CONFIRMED		
2nd Floor Exhaust Damper		

Press the  $\rightarrow$  arrow scroll button to navigate to the FAILED text.

DAMPER AUTO TEST		
6	FAILED	06/22/17 1:00 AM
PERFORM TEST		
2nd Floor Exhaust Damper		

Press the  $\downarrow$  arrow scroll button to navigate to the PERFORM TEST and press the  $\checkmark$  button.

DAMPER AUTO TEST		
6	FAILED	06/22/17 1:00 AM
PERFORM TEST		
2nd Floor Exhaust Damper		

#### 9.10.4.7.4 Smoke Compartments

Once the test SMOKE COMPARTMENTS has been entered a user can either select to test all configured smoke compartments or select a specific smoke compartment to be tested.

#### 9.10.4.7.5 Multi Selectors

Multi selectors (multi manual demands) are configured smoke control functions that control both a fan(s) and/or damper(s) together, rather than controlling one fan or one damper. To test multi selectors, access the MULTI SELECTORS area and select programmed individual multi selectors (multi manual demands) to be tested.

### 9.10.5 P.A.S. (Positive Alarm Sequence)

To enable or disable fire alarm control panel programmed P.A.S. (positive alarm sequence) operation, press the **↔**, **↑↓** buttons to scroll to the P.A.S. area and press the **✓** button.

[Main Menu]		User 1 Node 1
VIEW TEST	DISABLE <b>P.A.S</b> STATUS	ENABLE TOOLS



*If P.A.S delay functionality has not been configured, when accessing the P.A.S. area, the display will briefly show NOT CONFIGURED before returning to the Main Menu.*

Once access to the P.A.S. area is granted, the display shows the following pop-up window.

[ P.A.S. Options ]
NO P.A.S.
PERMANENT ( Use P.A.S. )

Highlight the required option using the **↑↓** buttons and then press the **✓** button to confirm. The display then reverts to the Main Menu.

Select NO P.A.S. to disable the operation of the Positive Alarm Sequence investigation feature.

Select PERMANENT to enable the operation of the Positive Alarm Sequence investigation feature.

If using the investigation delays (PERMANENT) the “P.A.S.” LED Indicator will illuminate. When the investigation delays are disabled (NO P.A.S.), the P.A.S LED will be off.

### 9.10.6 Tools

When selecting TOOLS, the display shows three possible options:

[Tools]		User 1 Node 1
<b>PROGRAM</b>	PRINT	CHANGE TIME

#### 9.10.6.1 Program

The PROGRAM area allows access to the front panel programming of the fire alarm control panel, to access the PROGRAM area a Level 3 service password is required.



*Refer to NX686-002 Front Panel Programming Manual for information and details on front panel programming capabilities.*

### 9.10.6.2 Print

[Tools]		User 1 Node 1
PROGRAM	<b>PRINT</b>	CHANGE TIME

The data stream sent to a printer is in a serial format, if an external printer is used, make sure that the communications settings of the printer are set correctly.

- Interface Type: RS232
- Baud Rate: 9600
- Parity: None
- Data Bits: 8
- Stop Bits: 1


The following are Print Menu capabilities:

[Print Menu]		User 1 Node 1	
<b>INPUTS</b>	OUTPUTS	TROUBLES	DISABLED
LOG	FEED-PAPER	SETUP-PRINTER	



*Before any printing can be done the printer must be setup in the SETUP-PRINTER area.*

#### 9.10.6.2.1 Setup-Printer








To enable or setup the operating characteristics of the printer, highlight the SETUP-PRINTER option and press the  button to confirm.

If the current User-ID (access level password) does not have the required authority, the display prompts for entry of an authorized password to guard against inadvertent changes. Enter the password as normal.

The display then shows a pop-up window giving programming options as follows:

[ALARMS]	[OFF NORMAL]	[TRBL]	[TESTS]
✓	✓	-	-
( Printer:	Internal	External/Wide )	
-	✓	-	

The upper line of options determines whether the panel will automatically print specific events as they occur. The lower line of options determines whether a printer is connected and the type of printer it is.

Use the , , ,  buttons and  buttons to highlight the required option and change its setting. Pressing the  button turns the option on (  is shown) or off ( - is shown) accordingly.

In the above option an external printer is selected with automatic printing of alarms and off-normal conditions.

Setting the wide option will change the printing from the default 40 characters per line to 80 characters per line.





*On network systems only trouble events on the fire alarm control panel controlling the printer are printed, trouble events from other nodes are not printed. To print all network events to a single printer on a fire alarm control panel, configuration is required in the Shield, Dynamix Tools, Neo NX Config Tool.*

#### 9.10.6.2.2 Inputs

To print information on any input, highlight the INPUTS option and press the ✓ button to confirm. The display will show the following:

[Inputs]

First Zone : 1

Last Zone : 5

(Press → to Start Print)

The display will prompt the zones in use on the fire alarm control panel. For networked systems it is possible to select any zone used within the network. Use the arrow ↑↓ buttons to highlight the first and last zone number and use the number keys to change the zone number.

Press the → button to start printing.

The display will show the following, while information is sent to the printer.

WORKING ...

(Press Esc to Stop)

After all information has been printed, the display will automatically revert to the Print Menu. Press the Esc button to stop printing if required.

The printout will show all input points for the zones selected. Information printed includes zone number, device address with analog value, programmed detector mode (1-5), device text, device type and enabled status.

#### 9.10.6.2.3 Outputs

To print information on any output, highlight the OUTPUTS option and press the ✓ button to confirm. The display will show the following:

[Outputs]

First Zone : 1

Last Zone : 5

(Press → to Start Print)

The display will prompt the zones in use on the fire alarm control panel. For networked systems it is possible to select any zone used within the network. Use the arrow ↑↓ buttons to highlight the first and last zone number and use the number keys to change the zone number.

Press the → button to start printing.

The printout will show all output points for the zones selected. Information printed includes zone number, device address, device text, device type and enabled status.

#### 9.10.6.2.4 Troubles

To print information on any troubles, highlight the TROUBLES option and press the ✓ button to confirm. The display will show the following:

```
[ 2 Zones in Trouble]

First Zone   : 1
Last Zone    : 5

(Press → to Start Print)
```

The panel will analyse the network and the display will prompt the zones in trouble condition to be printed.

Use the arrow ↑↓ buttons to highlight the first and last zone number and use the number keys to change the zone number as required.

Press the → button to start printing.

The printout will show the location and state of all input and output points in a trouble condition for the zones selected.



*If there are no trouble conditions present, then selecting the TROUBLES option will have no effect.*

#### 9.10.6.2.5 Disabled

To print information on any disabled device(s) or zone(s), highlight the DISABLED option and press the ✓ button to confirm. The display will show the following depending on the disabled conditions present.

If there are zones with inputs disabled:

```
[ 2 Zone(s) with Inputs Disabled]

First Zone   : 1
Last Zone    : 5

(Press → to Start Print)
```

If there are zones with outputs disabled:

```
[ 1 Zone(s) with Outputs Disabled]

First Zone   : 1
Last Zone    : 5

(Press → to Start Print)
```

The panel will analyse the network and the display will prompt the zones in a disabled condition to be printed.

Use the arrow ↑↓ buttons to highlight the first and last zone number and use the number keys to change the zone number as required.

Press the → button to start printing.

The printout will show the location and state of all input and output points in a disabled condition for the zones selected.

The display always presents the zones with inputs disabled first (if any exist). After printing the inputs, the display will present the information on disabled outputs (if any exist).



*If there are no disabled conditions present, then selecting the DISABLED option will have no effect.*

#### 9.10.6.2.6 Log

To print information from the history log, highlight the LOG option and press the ✓ button to confirm. A pop-up window will be shown asking if all events or just alarms should be printed. Highlight the required option using the ↑↓ buttons and press the ✓ button to confirm.

When the history log is completely printed, the display will automatically revert to the Print Menu.

Press the Esc button at any time to cancel the log printing.



*The pop-up window also allows selection of an Alarm Counter, when selected an alarm count is displayed on the NX10-ACS-DSP display only, it is not printed.*

#### 9.10.6.2.7 Feed-Paper

Highlight the FEED-PAPER option and press the ✓ button to confirm. The display does not change but a command is sent to the printer to advance the paper.

### 9.10.6.3 Change Time

The Change Time area allows the changing of the fire alarm control panel's system time clock. If the current User-ID (access level password) does not have the required authority, the display prompts for entry of an authorized password to guard against inadvertent changes.



*The displaying of the fire alarm control panel's time is in 12 hr. format (Standard). If 24 hr. format (Military) is required, this can be configured in the Shield, Dynamix Tools, Neo NX Config Tool.*

Example of SET TIME/DATE:

[ SET TIME/DATE ]	
TIME =	5:28 PM
DATE =	04/15/19 MON 15 APR 2019

To change the settings, use the ↑↓, → buttons to highlight the required option. Directly enter the new time or date using the number buttons. As soon as a number button is pressed, the display will clear the current setting and show the new value as it is entered. For AM/PM changing use the ↑↓ buttons.

[ SET TIME/DATE ]	
TIME =	1:-- PM
DATE =	04/15/19 MON 15 APR 2019

If the fire alarm control panel is node 1 on an Ad-NeT-PluS network, all network node panels will adjust to the new time value.

This page is intentionally blank

## 10 Maintenance and Troubleshooting

The fire alarm control panel shall be inspected, tested, and maintained in accordance with the recommendations outlined in NFPA72.

The recommendations provide for weekly, monthly, quarterly, bi-annual, and annual inspections/tests.

Adequate records shall be maintained to document all inspections, tests and maintenance undertaken. Trouble conditions and their resolution to normal shall be recorded.

The Neo NX fire alarm control panel includes circuitry for signalling line circuit (SLC) and notification appliance circuit (NAC) supervision for opens and short circuits, to test these circuits perform the following procedure:

**Open Circuit:** Break (disconnect) one of the wires leading to an addressable module or notification appliance and confirm an open circuit trouble condition is indicated at the NX10-ACS-DSP keyboard display.

**Short Circuit:** Short the positive and negative wires of an SLC or NAC circuit and confirm that a short circuit trouble condition is indicated at the NX10-ACS-DSP keyboard display.

In addition to the various supervised circuits of the Neo NX fire alarm control panel, each panel incorporates ground fault monitoring and detection. To test the ground fault circuitry, place a wire from the positive or negative (positive or negative ground fault) terminal of the auxiliary power supply output to ground and confirm the panel indicates a ground fault condition and the ground fault LED, if one is programmed illuminates.

### 10.1 Batteries

**For optimum performance and charge retention, Yuasa recommends that batteries are 'top-charged' prior to installation.**

**For batteries up to 6 months old from date of manufacture, charge at 2.4V per cell (i.e., 14.4V per battery) for 20 hours prior to installing the batteries.**



**It is not recommended to use batteries that are more than 6 months old from their date of manufacture on a new installation.**

**It is normal for lead-acid batteries to vent hydrogen when being charged.**

**The panel is adequately ventilated to dissipate this hydrogen. DO NOT seal the enclosure or install in a sealed enclosure.**

Power supply chargers of the Neo NX fire alarm control panel provide charging voltage and current to their associated attached batteries. Using the panel's integral multi meter, charging voltage, charging current and internal enclosure temperature can be viewed at any time via the NX10-ACS-DSP keyboard display. The power supply chargers also automatically subject the batteries to a load equivalent to full load during normal operation. If the internal resistance of any attached battery rises beyond approximately 0.8 ohm, the fire alarm control panel will report a battery cell failure trouble condition.



**Respect the Environment.**

**Batteries must be disposed of responsibly and in accordance with any local regulations.**

#### 10.1.1 Battery Recommendations

**Expected Life:** 3-5 years at an ambient temperature of 68°F.

**Replacement Schedule:** As above. However, note that the expected battery life is shortened by increase in ambient temperature. The life reduces by 50% for every 18°F rise above ambient. Refer to battery manufacturer for further information.

Manufacturer / Part Numbers:

YUASA		POWERSONIC	
4AH	NP4-12FR	5AH	PS-1250 FR
7AH	NP7-12FR	7AH	PS-1270 FR
12AH	NP12-12FR	12AH	PS-12120 FR
17AH	NP18-12FR	18AH	PS-12180 FR
24AH	NP24-12BFR	20AH	PS-12200 FR
38AH	NP24-38FR	26AH	PS-12260 FR
		28AH	PS-12280 FR
		35AH	PS-12350 FR
		38AH	PS-12380 FR
		40AH	PS-12400 FR
		55AH	PS-12550 FR
		75AH	PS-12750S FR

## 10.2 Performing a Fire Drill

Pressing and holding the Drill button for 2 seconds will activate a fire drill. The internal buzzer will sound (pulsing), and the display will indicate NEW WARNING ZONE 0701 (unacknowledged event). In addition, the drill zone and device message will be displayed. The bottom line of the display will be highlighted and will indicate a tally of the number of events active (Warnings, Supervisory, Disabled and Troubles). In most cases, no other events will be present on the fire alarm control panel so the bottom highlighted display will only indicate WRNs: 1.

Example of unacknowledged fire drill:

NEW WARNING		ZONE 0701	
Fire Alarm Control Panel			
Drill Switch		[SWITCH    ]	
( Press   →  for device details )			
WRNs: 1    SUPRVs: 0    DISBLs: 0    TRBLs: 0			

- < New warning message (unacknowledged)
- < Zone text (32 Characters)
- < Device text (26 Characters) / type of device
- < Further device details
- < # Warnings, # Supervisory, # Disables and # Troubles

By pressing the → button, the user can view further detailed information about the drill activation.

Example of device detailed display pertaining to a specific drill event:

NEW WARNING		ZONE 0701	
Fire Alarm Control Panel			
Drill Switch		[SWITCH    ]	
NODE 1			
JAN 30 2020		11:00 AM	
WRNs: 1		SUPRVs: 0	
DISBLs: 0		TRBLs: 0	

- < New warning message (unacknowledged)
- < Zone text (32 Characters)
- < Device text (26 Characters) / type of device
- < Node # of drill location
- < Drill details
- < # Warnings, # Supervisory, # Disables and # Troubles



*If the drill were activated from an addressable device at a remote location, rather than from the drill button on the fire alarm control panel, the SLC loop number and device address would be displayed in the drill details line.*

Pressing the “ACK” button while in a fire drill will acknowledge the drill event. This silences the internal buzzer, and the display will show Off-Normal State. Off-normal state totals are listed in order of system priority, Pre-Alarms, Warnings, Supervisory, Troubles and Disabled.

Example of acknowledged fire drill:

[Off-Normal State : Total ]

WARNINGS : 1

( Press ✓ to select )

< Off-Normal line

< Off-Normal type and event total  
Only active off-normal events are displayed.

< More info pertaining to highlighted event

### 10.3 Built-in Electronic Multi-Meter

Designed with the technician in mind, each module of the Neo NX fire alarm control panel is easy to install and service. All inputs and outputs of the NX10-ACS base card are addressable and provide precise information of status condition. To help in the installation, maintenance and troubleshooting of the Neo NX fire alarm control panel, a user-friendly built-in multi-meter allows technicians to interrogate any input / output and diagnose potential time-consuming trouble issues.

### 10.3.1 NX10-ACS Base Card I/O Addresses and Electronic Values

The following is a list of NX10-ACS base card input and output circuit addresses for maintenance and troubleshooting purposes.

Item (Address)	Description	Value (Real-Time)	State
01.0	NAC-1 A Volts	(Voltage)*	(State of Output Voltage)
01.1	NAC-2 A Volts	(Voltage)	(State of Output Voltage)
01.2	NAC-3 A Volts	(Voltage)	(State of Output Voltage)
01.3	NAC-4 A Volts	(Voltage)	(State of Output Voltage)
* ~5.5V quiescent and ~ 27V alarm = Normal			
If system has only 2 NACs quiescent and alarm voltages for NAC-3 & NAC-4 = 0V			
02.0	NAC-1 A Load	(Current)*	(State of Output Current)
02.1	NAC-2 A Load	(Current)	(State of Output Current)
02.2	NAC-3 A Load	(Current)	(State of Output Current)
02.3	NAC-4 A Load	(Current)	(State of Output Current)
* Dependent upon quiescent, and alarm current draw of notification appliances per circuit			
If only 2 NAC circuits per system quiescent and alarm currents for NAC-3 & NAC-4 = 0mA			
03.0	Battery		(~27V = Normal) (State of Battery Voltage)
04.0	Charger Volts	(~27V = Normal)	(State of Charger Voltage)
04.1	Charger Amps	(Current)*	(State of Charger Current)
* Dependent upon whether batteries are being charged, 0mA if not charging			
04.2	Charger Temp.	(°F = Normal [Int. Temp])	(State of Charger Temp. in °F)
05.0	Ground Volts	(~13.5V = Normal*)	(State of Ground Voltage)
* Higher voltage = positive ground, lower voltage = negative ground (voltage dependent upon ground potential)			
05.1	System Volts	(~27V = Normal)	(State of System Voltage)
06.0	Aux Supply 1	(Current)*	(State of Aux 1 Output Current)
06.1	Aux Supply 2	(Current)*	(State of Aux 2 Output Current)
* Dependent upon current draw of auxiliary supply output			
07.0	1st SLC Load	(Current)*	(State of 1st SLC Loop Current)
07.1	2nd SLC Load	(Current)	(State of 2nd SLC Loop Current)
07.2	3rd SLC Load	(Current)	(State of 3rd SLC Loop Current)
07.3	4th SLC Load	(Current)	(State of 4th SLC Loop Current)
* Dependent upon quiescent and alarm current draw of SLC devices per loop			
08.0	1st SLC V. Out	(~23V = Normal*)	(State of 1st SLC Loop Voltage Out)
08.1	2nd SLC V. Out	(~23V = Normal*)	(State of 2nd SLC Loop Voltage Out)
08.2	3rd SLC V. Out	(~23V = Normal*)	(State of 3rd SLC Loop Voltage Out)
08.3	4th SLC V. Out	(~23V = Normal*)	(State of 4th SLC Loop Voltage Out)
* If system has only 2 SLCs voltage, for SLC-3 & SLC- 4 = 0V, and State is RESET			
09.0	1st SLC V. In	(~23V = Normal*)	(State of 1st SLC Loop Voltage In)
09.1	2nd SLC V. In	(~23V = Normal*)	(State of 2nd SLC Loop Voltage In)
09.2	3rd SLC V. In	(~23V = Normal*)	(State of 3rd SLC Loop Voltage In)
09.3	4th SLC V. In	(~23V = Normal*)	(State of 4th SLC Loop Voltage In)
* 0V if Class B, if Class A and only 2 SLCs voltage, for SLC-3 & SLC- 4 = 0V at 0V State is RESET			
10.0	1st Switch Input (LCD)	L	(State of Control Circuitry)
10.1	2nd Switch Input (LCD)	L	(State of Control Circuitry)
10.2	3rd Switch Input (LCD)	L	(State of Control Circuitry)
10.3	4th Switch Input (LCD)	L	(State of Control Circuitry)
10.4	5th Switch Input (LCD)	L	(State of Control Circuitry)
10.5	6th Switch Input (LCD)	L	(State of Control Circuitry)
10.6	7th Switch Input (LCD)	L	(State of Control Circuitry)
10.7	8th Switch Input (LCD)	L	(State of Control Circuitry)
Only shown if used.			
* Normal Low (L – open contact), Active High (H – closed contact)			
11.0	Relay 1		(State of Relay Circuitry*)
11.1	Relay 2		(State of Relay Circuitry*)
11.2	Relay 3		(State of Relay Circuitry*)
11.3	Output 1		(State of Relay Circuitry*)
11.4	Output 2		(State of Relay Circuitry*)
11.5	Output 3		(State of Relay Circuitry*)
11.6	Output 4		(State of Relay Circuitry*)
11.7	Output 5		(State of Relay Circuitry*)
11.8	Output 6		(State of Relay Circuitry*)
11.9	Output 7		(State of Relay Circuitry*)
11.10	Output 8		(State of Relay Circuitry*)
No state shown.			
13.0	Control Panel	RESET*	(State of Control Panel Circuitry*)
* = No meter readings available			
State normally equals RESET it only changes on circuitry failure.			
14.0	AC Supply	H*	(State of AC Supply Circuitry*)
14.1	Anc. Supply	H	(State of Anc. Supply Circuitry)
* Normal High (H – closed contact), Active Low (L – open contact)			
State only changes on circuitry failure.			
21.0	Network Ground	0V	(State of Network Ground Potential)
Only shown if network module used.			
23.0	Monitored Printer		(State of Monitored Printer)



## 10.4 Recommended Wiring Guide

Unless otherwise noted, all circuits permitted to be in same conduit. Check local codes for additional restrictions. Twisted shielded cable provides a degree of protection and immunity to electrical noise interference (RFI/EMI) compared to twisted pair or untwisted wire. If shielded cable is used, connect the shield to the panel enclosure (out and return) and to the dedicated shield terminations in the bases only.




*If shielded cable is used, the shield connection must be a continuous circuit around the loop and must not be in contact with any other earth/ground point (including electrical backboxes).*

If running NAC and/or 24 VDC circuits in the same conduit as other signals, you can reduce problems by exclusively using electronic sounders instead of electronically noisy notification appliances (such as electromechanical bells or horns).



*For multiple wires to be used under any terminal, use Shield twin cable ferrules 18AWG to 12AWG, manufactured by Weidmuller.*

Circuit Type	Circuit Function	Wire Types	Maximum Distance	Typical Wire Size (AWG)	Comments
SLC (Power limited)	Connects to intelligent modules and smoke detectors.	Twisted Unshielded Pair * Maximum resistance is dependent on SLC loop loading	12,500 feet	12-18 AWG	If multiple loops are inside the same conduit, it is acceptable to use twisted unshielded wire as SLCs will not interfere with one another. It is acceptable to run other signals inside the same conduit; however, it is recommended that the other wires are either twisted or twisted shielded. The Neo NX panels contain loop power technology. The SLC circuits can driving high current loads in alarm, which affects the load characteristics including V/I drops along the wire length. Therefore, it is important to use Shield loop calculator in determining wire gauge and length.
		Twisted Shielded Pair	12,500 feet	12 -18 AWG	Shield must only be connected to earth ground at one location - at the fire panel.
		Untwisted, Unshielded Pair	1,000 feet		It is not recommended to mix inside conduit with other signals unless other signals use either twisted or twisted shielded wire.
PBUS EIA-485 (Power limited)	Connects peripheral modules to NX10-ACS base card	Twisted Unshielded or Twisted Shielded	20 feet within the same room	18-20 AWG	Twisted unshielded or twisted shielded wire is acceptable whenever the PBUS is wired internal and/or external to the fire panel enclosure. Must install a 150-ohm resistor at end of the PBUS wire run. When using shielded wire, you must install a 2.2 µfd non polarized capacitor from shield to ground at one end and terminate shield to panel ground at the other end.
EIA-232 (Power limited)	Connects to printers or PC	Shielded	50 feet	18-20 AWG	
NACs (Power limited)	Connects to horns, strobes, solenoids, etc.	Twisted Shielded, Twisted Unshielded, Untwisted Unshielded.	4000 feet	12-22 AWG	If supporting highly inductive/noisy loads use twisted shielded wire.
Network EIA-485 (Power limited)	Ad-NeT-Plus peer-to-peer network	Twisted Shielded or Fiber Optic Cable	5000 feet Class B 66000 feet Class A(X) (5000 ft between Nodes)	18-20 AWG	Fiber Optic – 16,404 ft between nodes max. Jacket material must be rated for application. Note: Network node to node communications is optically isolated and each node has an independent ground fault detection circuit. To ensure prevention of earth “ground loops,” the shield must be terminated at one node and not both. This is accomplished internally at each node via dedicated shield terminals. Each network node module has isolated outgoing and incoming network wiring terminals. Connect from the “OUT” terminal on the first node to the “IN” terminal on the next node (A, B and Shield). 
Telephone Riser (power limited)	Firefighter Phone communication	Twisted Shielded Pair	4000 feet	18-20 AWG	
Audio Riser (Power limited)	Audio input signal to amplifiers	Twisted Shielded Pair	4000 feet	18-20 AWG	
Speaker Circuits (power limited)	Speaker circuit to speakers	Twisted Pair or Twisted Shielded Pair	3000 feet (Load dependent)	12-22 AWG	Twisted shielded wire if mixed inside same conduit as the audio and/or telephone riser(s)
24 VDC (Power limited)	24 Volts DC resettable or non-resettable	Untwisted Unshielded, Twisted Pair or Twisted Shielded Pair	4000 feet	12-18 AWG	Size conductors per acceptable voltage drop. If supporting highly inductive/noisy loads, twisted shielded wire is recommended.
IDCs (Power limited)	SLC based initiating device input circuits & conventional smoke zones	Untwisted Unshielded, Twisted Pair or Twisted Shielded Pair.	300 feet	18-20 AWG	EOL resistor value varies depending upon module.

## 10.5 NX10-ACS-DSP Liquid Crystal Display

Expected Life: > 10 years.

Replacement Schedule: When the display becomes difficult to read due to gradual fading over time.

Manufacturer / Part Number: Consult Shield

**SHIELD FIRE, SAFETY AND SECURITY LTD**

Redburn House, 2A Tonbridge Road, Romford, Essex – RM3 8QE, United Kingdom

Tel: +44 1708 377731, Fax: +44 1708 347637, E-mail: [shielduk@shieldglobal.com](mailto:shielduk@shieldglobal.com)

[www.shieldglobal.com](http://www.shieldglobal.com)

Doc Number: NX686-001CC

Revision: 1c

